



Top Gun Pro Heli 450 Addendum V3.5

Binding Update

Please note that once you have turned on the transmitter you have around 10 seconds to connect your helicopter up and initiate binding. Once the lights on the transmitter turn solid you will be unable to bind if you are yet to connect up the Heli.

Also please note, that if the 3D switch is in the on position and not the NOR, you will also suffer none binding.

Gyro Gain

The instructions refer to the Gyro Gain being adjusted by knob V2 (top left). This is incorrect, and it should be knob V1 (top right).

Gyro Status LED

When you power up a RED LED appears indicating that it has powered up. After a few seconds this LED will change to BLUE to indicate that it is now correctly set. If the BLUE LED is flashing, please disconnect the battery and repeat the process.

Gear Switch

As a final failsafe the Gear switch must be activated by moving it upward and then back to the away position, *The motor will now be live*. You can also use the gear switch as a power kill switch to the motor. Do not use this function for auto rotation landing as it can switch to negative degree pitch at high speed.

Pre-Flight Check

Check all the screws and fittings, paying particular attention to the head and tail assembly before flight(s).

Transmitter

Shown below is the correct position for the dipswitches as highlighted in RED.

