

SPARE PART LIST:




BF110-01 Fuselage



BF110-02 Wing



BF110-03 Elevator

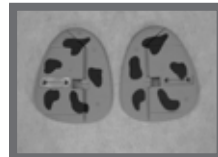


BF110-04 Vertical Stabilizer



BF110-05 Spinner




BF110-06 Landing Gear

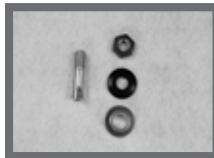


BF110-07 Blade Holder




BF110-08 Plastic Parts

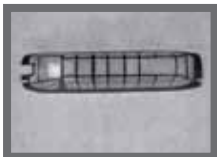


BF110-09 Canopy

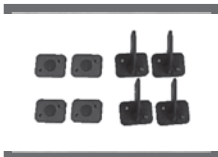

BF110-10 Servo Horn

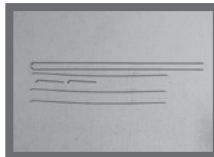

BF110-11 Push Rod

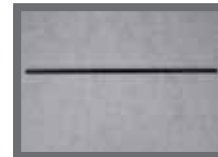

BF110-12 Wing tube



BF110-13 Decal



BF110-14 Cowl



BF110-15 Motor Mount



BF110-16 Nose cone



BF-110-17 Screw set



DY-1052 E-Retract ø3.6 90°




DYT-2003 5CH Transmitter



DYR-2001 2.4G Receiver



DY-6015 14.8V 2200mAh
25C Battery

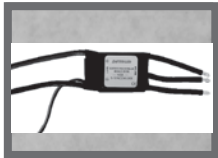


DYE-1004 40A ESC



BM3512A-KV850
Motor Shaft



BM3512A-KV850-shaft
Motor Shaft

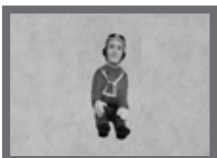

DYB-18 Pilot



DYP-1022 10*7*3 Propeller



DY-1007 9g Servo



DY-3003 Glue