



www.dynam-rc.cn



## *Instruction Manual*

# ***PBY Catalina***

### **Specification:**

Wingspan: — — — — — 1470mm(58in)  
 Overall Length: — — — — — 940mm(37in)  
 Wing Loading: — — — — — 44g/dm<sup>2</sup>  
 Servo: — — — — — 9g x 4pcs  
 Battery: — — — — — 11.1V 2200mAh Li-Po ,20c  
 Speed Controller: — — — — — 30Ax2 brushless  
 Motor Size: — — — — — 1100Kv Brushless Outrunner  
 Flying Weight : — — — — — 1300g(45.9oz)



**Warning!**

### **SAFETY PRECAUTIONS**

**This radio control model is not a toy!**

- First-time builders should seek advice from people having building experience in order to assemble the model correctly and to produce its performance to full extent.
- Assemble this kit only in places out of children's reach!
- Take enough safety precautions prior to operating this model. You are responsible for this model's assembly and safe operation!
- Always keep this instruction manual ready at hand for quick reference, even after completing the assembly.

# Safety Precautions

- Never fly the Airplane where there are crowds of people ,power lines overhead, automobiles or near highways. give yourself plenty of room for flying, as the plane can travel at a high rate of speed. Remember you are responsible for the safety of others.
- Do not fly in strong winds.
- Do not attempt to catch the Airplane while flying.
- Children under the age of 16 should not have admission to the transmitter for the plane.
- Never leave this system unattended, with the batteries in the unit and around children. Injury can result by children turning on the transmitter or the plane.
- Keep away from the propeller at all times. The system can automatically start when the batteries are plugged in, regardless if the transmitter is in the on or off position. The propeller can cause injury!
- Before flying, always remember to turn on the transmitter first, before plugging in the battery pack. Stay clear of propeller.
- Always turn the speed controller all the way down and the switch on “OFF”.(left control stick in the down position) before starting; otherwise the propeller will start on full power when you plug the battery into the plane.
- After running the motor, disconnect the battery first before turning off the transmitter, otherwise the propeller may start at full power.
- Never leave the charger or battery near wet areas.
- Completely discharging a Li-poly battery can result in permanent damage to the cells of the battery. Therefore you must always remember to disconnect the battery after using the plane.

## BEFORE YOU BEGIN

- Read through the manual before you begin, so you will have an overall idea of what to do.
- Check all parts. If you find any defective or missing parts contact your local dealer. Please DRY FIT and check for defects for all parts that will require CA or Epoxy for final assembly. Any parts you find to be defective after the gluing process may be difficult to remove for warranty replacement. The manufacturer will replace any defective parts, but will be difficult to extend to the good parts that are good before bluing to defective parts during assembly.
- Symbols used throughout this instruction manual comprise of following:



Apply epoxy glue



Assemble left and right sides the same way.



Pay close attention here!



Pliers



Ensure smooth non-binding movement while assembling.




Cut off shaded portion


# How to use your dynam 2.4G rc system

## \* important

- 1:put down throttle sticker.
- 2:turn on transmitter power-switch.
- 3:please let your receiver connect with battery in 10 seconds.
- 4:check your protect-switch,  
when protect -switch in up station,put down,release from protect.  
when protect -switch in down station,put up frist,then put down  
again,release from protect,you can fly now.

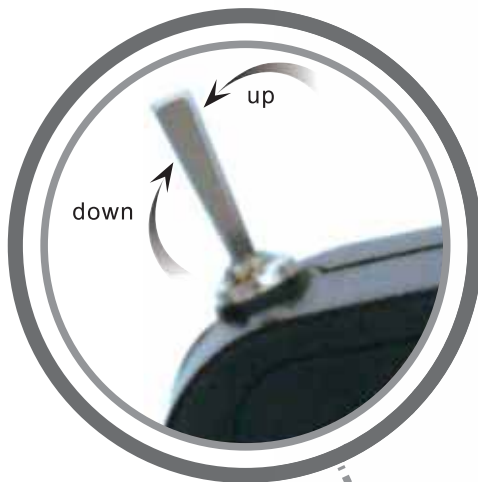


Protect-switch

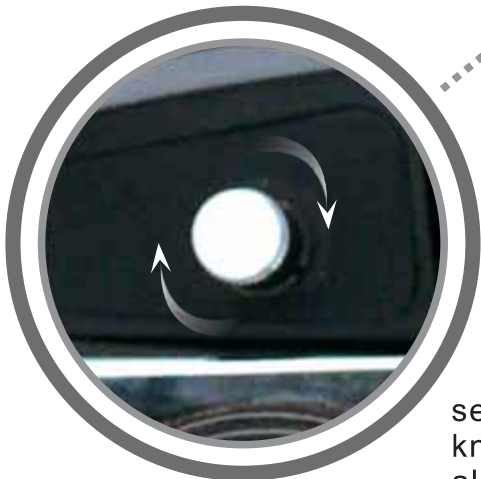

servo degree-adjust  
knob clockwise,  
all servo drgree augment



# RTF INCLUDING

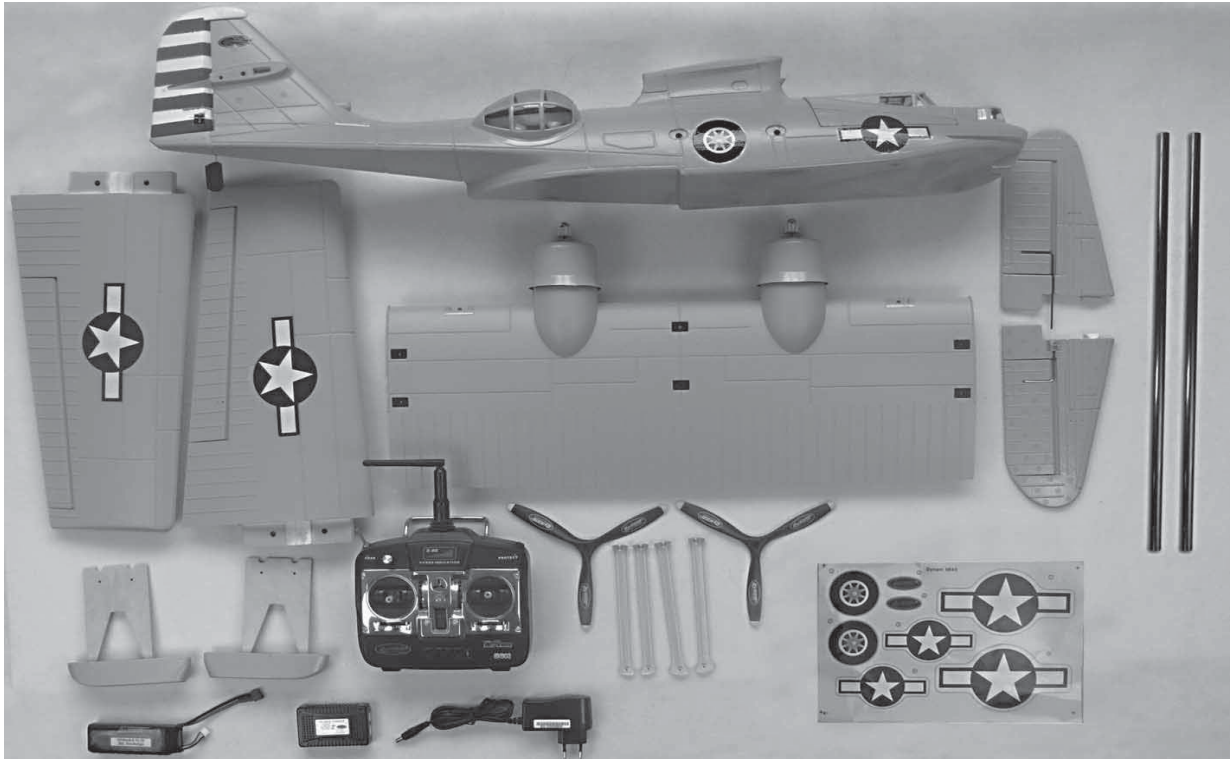


RTF including: \_\_\_\_\_


- fuselage**
- wing**
- elevator**
- landing gear**
- Vertical stabilizer**
- Push rod**
- Propeller**
- glue**
- decal**
- balance charger**
- LI-Po battery (11.1V 2200mAh 20C)**
- transmitter**
- Adaptor**
- Bolt pipe**
- ESC**




# Assembly

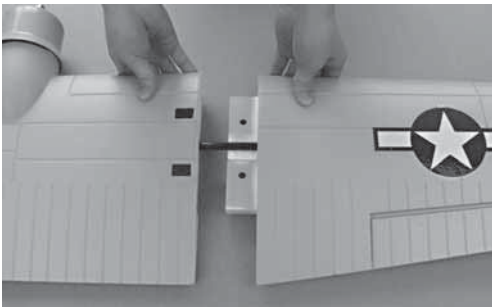


**1** Push  $\Phi 8 \times 495$ mm fiberglass tube into the hole of wing.

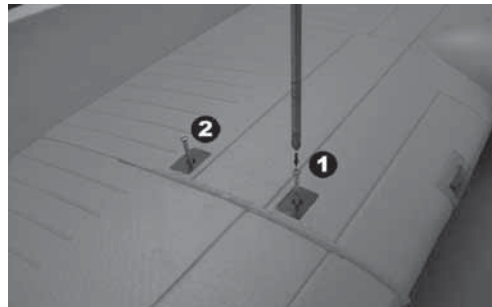

**2** Fix the wing with screws.  
① PA 2.3\*25MM ② PA 2.3\*20MM

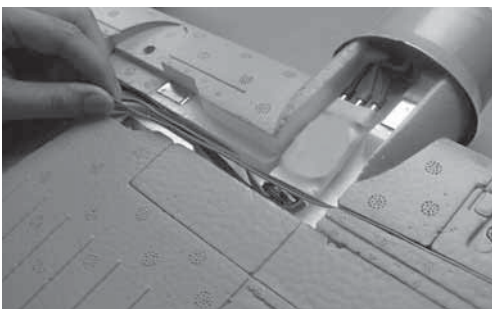


**3** Inset aileron servo wires into the slot as shown.

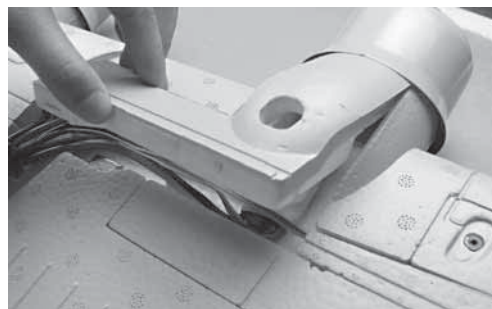

**4** Press the speed controller cover in position as shown.




**5** Install 8060 propelle.

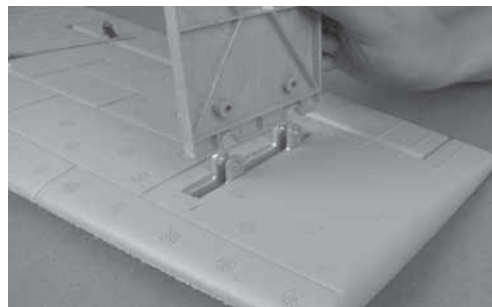

**6** Install float as shown.




**7** Fix the float with M3\*16MM screw.

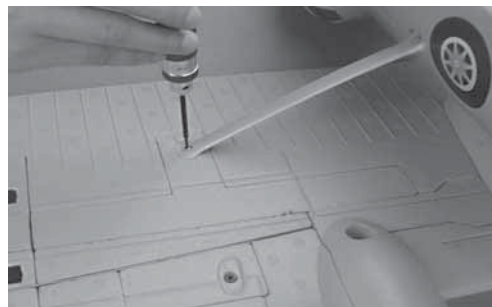

**8** IFix the wing struts with PA 2.5\*8MM screw.

# Assembly

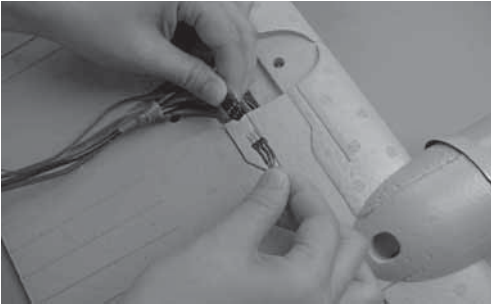


**9** Connect the aileron servos with Y wires.




**10** Insert speed controller and servo wires into fuselage.




**11** Fix the wing on fuselage with PA 2.3\*25MM screw.

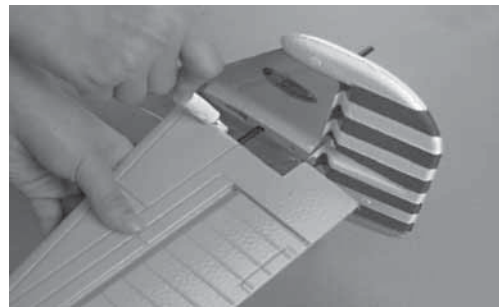

**12** Push  $\Phi 5*235$ mm fiberglass tube into horizontal stabilizer and fuselage, then glue them.

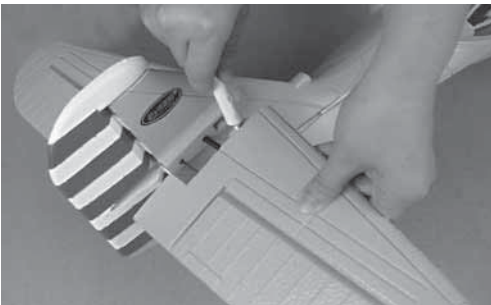


**13** Glue another side of the horizontal stabilizer in place.

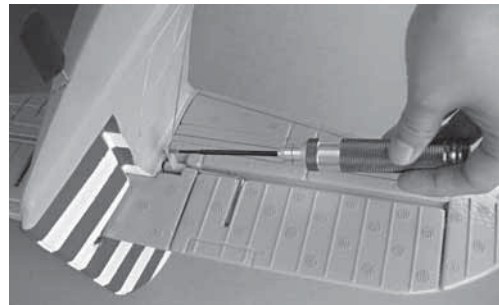

**14** Insert the pushrod into elevator quick-controller and tighten the screw (the servo should be in center position).



**15** Insert speed controller wires into THR channel of receiver.

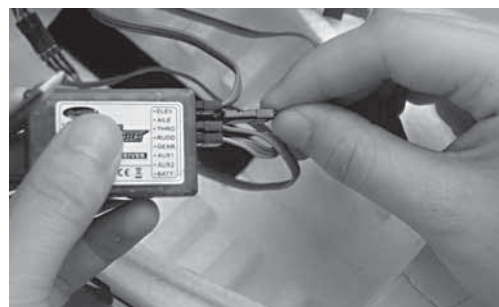

**16** Insert aileron Y wires into AILE channel of receiver.




# STICK OPERATION

## MODE 1




## MODE 2

## MOVEMENT




### THROTTLE

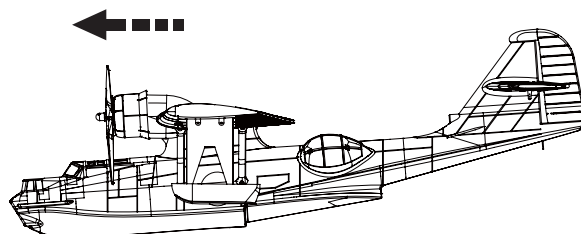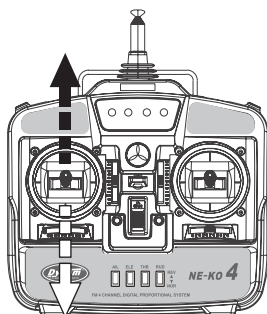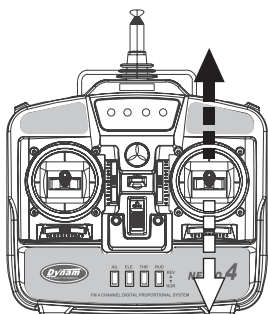




### RUDDER

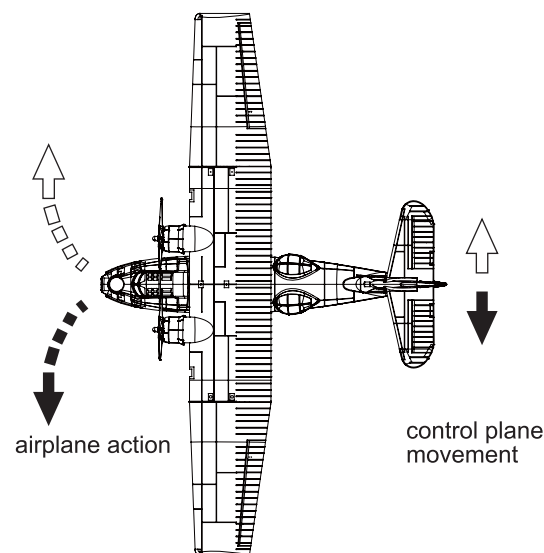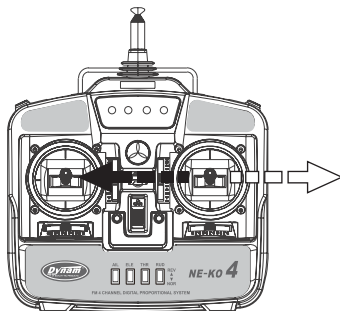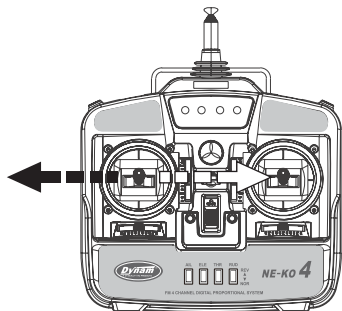

### ELEVATOR

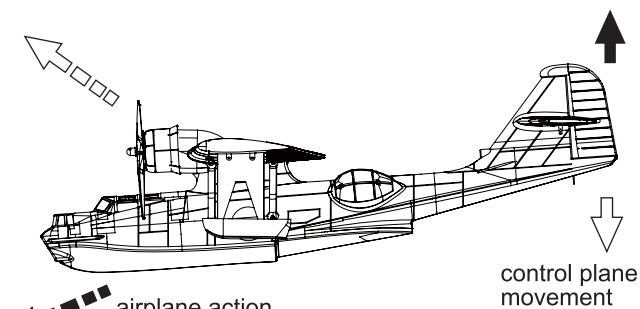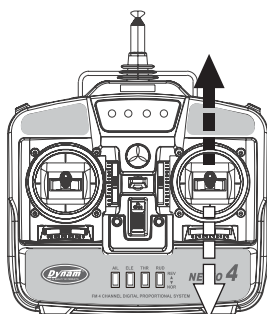
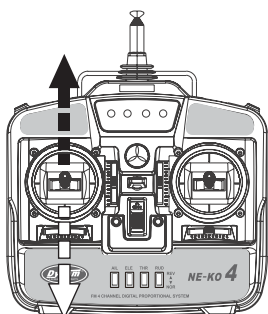


### AILERONS

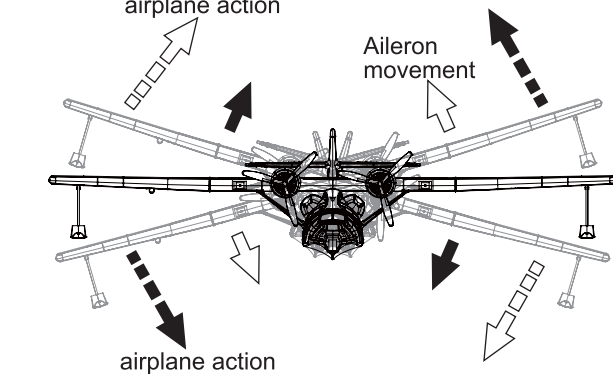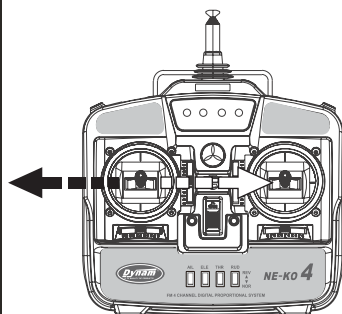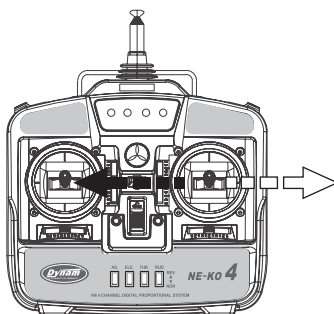


# CG And Receiver Assembling


The ideal C.G. position is 80~85mm behind the leading edge measured at where the wing meets the fuselage. In order to obtain the C.G. specified, add weight to the fuselage or move the battery position. Check the C.G. before flying.

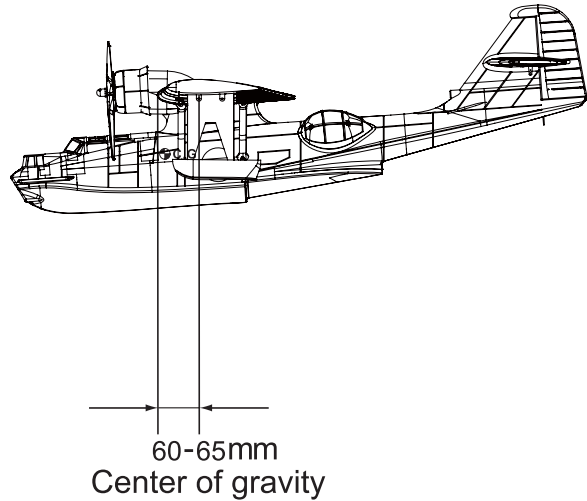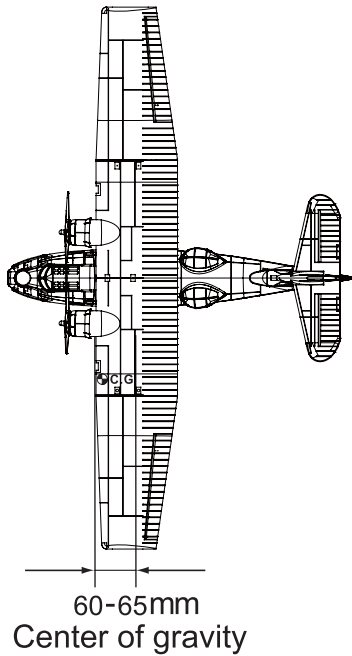


## SUGGEST CONTROL THROW SETTING

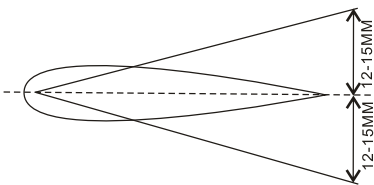


ELEVATOR

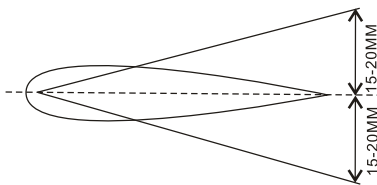

AILERON

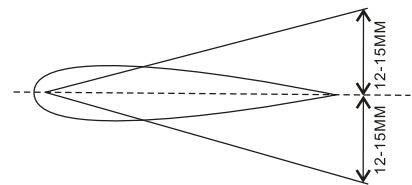

RUDDER

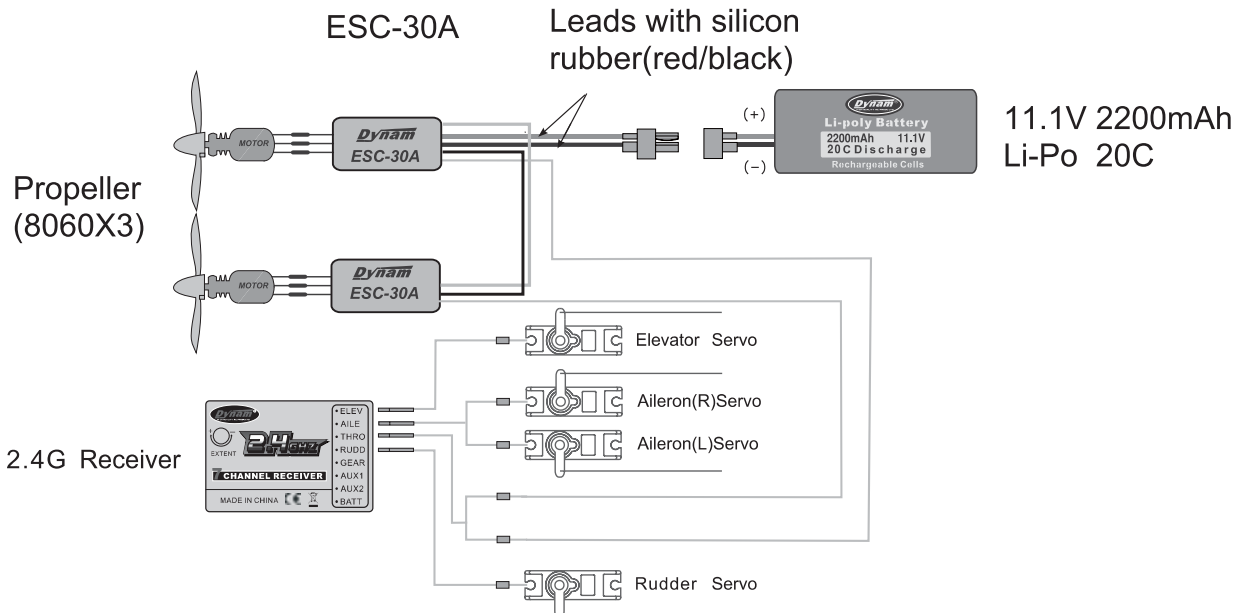




# Manual of Brushless Motor Speed Controller

## Specifications:

| Pentium Series |        |               |                      |                  |            |                |           |                   |                              |        |          |
|----------------|--------|---------------|----------------------|------------------|------------|----------------|-----------|-------------------|------------------------------|--------|----------|
| Class          | Model  | Cont. Current | Burst Current (>10s) | BEC Mode (Note1) | BEC Output | Battery Cell   |           | User Programmable | Balance Discharge Protection | Weight | Size     |
|                |        |               |                      |                  |            | Li-ion Li-poly | NiMH NiCd |                   |                              |        | L*W*H    |
| 12A            | Esc-12 | 12A           | 15A                  | Switch           | 5V/3A      | 2-4            | 5-12      | Available         | N/A                          | 19g    | 45*24*9  |
| 18A            | Esc-12 | 18A           | 22A                  | Switch           | 5V/3A      | 2-4            | 5-12      | Available         | N/A                          | 19g    | 45*24*11 |
| 25A            | Esc-25 | 25A           | 35A                  | Switch           | 5V/3A      | 2-4            | 5-12      | Available         | N/A                          | 22g    | 45*24*11 |
| 30A            | Esc-30 | 30A           | 40A                  | Switch           | 5V/3A      | 2-4            | 5-12      | Available         | N/A                          | 25g    | 45*24*11 |
| 40A            | Esc-40 | 40A           | 55A                  | Switch           | 5V/3A      | 2-6            | 5-18      | Available         | N/A                          | 35g    | 55*28*12 |
| 50A            | Esc-50 | 50A           | 80A                  | Switch           | 5V/3A      | 2-6            | 5-18      | Available         | N/A                          | 60g    | 70*31*14 |
| 60A            | Esc-60 | 60A           | 80A                  | Switch           | 5V/3A      | 2-6            | 5-18      | Available         | N/A                          | 60g    | 70*31*14 |
| 70A            | Esc-70 | 70A           | 100A                 | Switch           | 5V/3A      | 2-6            | 5-18      | Available         | N/A                          | 62g    | 70*31*14 |
| 80A            | Esc-80 | 80A           | 100A                 | Switch           | 5V/3A      | 2-6            | 5-18      | Available         | N/A                          | 62g    | 70*31*14 |

## Wiring Diagram:

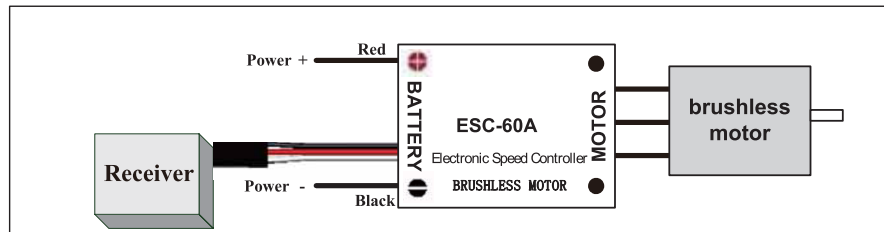

## Programmable Items:

- Brake Setting:** Enabled / Disabled, default is Disabled
- Battery Type:** Li-xx(Li-ion or Li-poly) / Ni-xx(NiMH or NiCd), default is Li-xx.
- Low Voltage Protection Mode(Cut-Off Mode):** Soft Cut-Off (Gradually reduce the output power) or Cut-Off (Immediately stop the output power). Default is Soft Cut-Off.
- Low Voltage Protection Threshold(Cut-Off Threshold):** Low / Medium / High, default is Medium.
  - ◆ **When NOT using balance discharge monitoring and protection function** (i.e. **Not** plugging the balance charge connector into the BDMP socket on the Guard series ESC, the ESC only monitors the voltage of the whole battery pack )
    - For lithium batteries, the number of battery cells is calculated automatically. Low / medium / high cutoff voltage for each cell is: 2.6V/2.85V/3.1V. For example: For a 3 cells lithium pack, when "Medium" cutoff threshold is set, the cut-off voltage will be: 2.85\*3=8.55V.
    - For nickel batteries, low / medium / high cutoff voltages are 0%/45%/60% of the startup voltage (i.e. the initial voltage of battery pack), and 0% means the low voltage cut-off function is disabled. For example: For a 10 cells NiMH battery, fully charged voltage is 1.44\*10=14.4V, when "Medium" cut-off threshold is set, the cut-off voltage will be: 14.4\*45%=6.5V.
  - ◆ **When using balance discharge monitoring and protection function** (i.e. Plugging the balance charge connector on battery pack into the BDMP socket on the Guard series ESC, the ESC monitors not only the voltage of the whole battery pack but also the voltage of each cell). For lithium battery, low / medium / high cut off voltage for each cell is: 2.6V/2.85V/3.1V. When the voltage of any cell in battery pack is lower than the cut-off threshold, the protection function is activated.
- Startup Mode:** Normal /Soft /Super-Soft, default is Normal.  
Normal is preferred for fixed-wing aircraft. Soft or Super-soft are preferred for helicopters. The initial acceleration of the Soft and Super-Soft modes are slower in comparison, usually taking 1 second for Soft startup or 2 seconds for Super-Soft startup from initial throttle advance to full throttle. If the throttle is closed (throttle stick moved to bottom) and opened again (throttle stick moved to top) within 3 seconds of the initial startup, the restart-up will be temporarily changed to normal mode to get rid of the chances of a crash caused by slow throttle response. This special design is very suitable for aerobatic flight when quick throttle response is needed.
- Timing:** Low / Medium / High, default is Low. *Note2*  
Usually, low timing value can be used for most motors. We recommend the **Low** timing value for 2 poles motor and **Medium** timing value for motors with more than 6 poles to get a high efficiency. For higher speed, **High** timing value can be chosen.

**Note2: After changing the timing setting, please test your RC model on ground prior to flight!**

## Begin To Use Your New ESC

Please start the ESC in the following sequences:

- Move the throttle stick to the bottom position and then switch on the transmitter.
- Connect the battery pack to the ESC, the ESC begins the self-test process, a special tone "♪ 123" is emitted, which means the voltage of the battery pack is in normal range, and then N "beep" tones will be emitted, means the number of lithium battery cells. Finally a long "beep-----" tone will be emitted, which means self-test is OK, the aircraft/helicopter is ready to go flying.
  - ◆ If nothing is happened, please check the battery pack and all the connections;

# Manual of Brushless Motor Speed Controller

- ◆ If a special tone “ ♪ 567i2” is emitted after 2 beep tones (“beep-beep-”), means the ESC has entered the program mode, it is because the throttle channel of your transmitter is reversed, please set it correctly;
  - ◆ If the very rapid “beep-beep-, beep-beep-” tones is emitted, means the input voltage is too low or too high, please check your battery’s voltage.
3. **“VERY IMPORTANT !”** Because different transmitter has different throttle range, we strongly suggest you using the “Throttle Range Setting Function” to calibrate throttle range. Please read the instruction on page 4-----“Throttle Range Setting”.

## Alert Tone

1. Input voltage is abnormal: The ESC begins to check the voltage when the battery pack is connected, if the voltage is not in the acceptable range, such an alert tone will be emitted: “beep-beep-, beep-beep-,beep-beep-” (Every “beep-beep-” has a time interval of about 1 second. )
2. Throttle signal is abnormal: When the ESC can’t detect the normal throttle signal, such an alert tone will be emitted: “beep-, beep-, beep-”. (Every “beep-” has a time interval of about 2 seconds)
3. Throttle stick is not in the bottom position: When the throttle stick is not in bottom (lowest) position, a very rapid alert tone will be emitted: “beep-, beep-, beep-”. (Every “beep-” has a time interval of about 0.25 second.)

## Protection Function

1. Abnormal start up protection: If the motor fails to start within 2 seconds of throttle application, the ESC will cut-off the output power. In this case, the throttle stick **MUST** be moved to the bottom again to restart the motor. (Such a situation happens in the following cases: The connection between ESC and motor is not reliable, the propeller or the motor is blocked, the gearbox is damaged, etc.)
2. Over-heat protection: When the temperature of the ESC is over 110 Celsius degrees, the ESC will reduce the output power.
3. Throttle signal loss protection: The ESC will reduce the output power if throttle signal is lost for 1 second, further loss for 2 seconds will cause its output to be cut-off completely.

## Program Example

Setting “Start Mode” to “Super-Soft”, i.e. value #3 in the programmable item #5

|   |
|---|
| <p><b>1. Enter Program Mode</b><br/>Switch on transmitter, move throttle stick to top position, connect battery pack to ESC, wait for 2 seconds, “beep-beep” tone should be emitted. Then wait for another 5 seconds, special tone like ‘♪ 567i2’ should be emitted, which means program mode is entered.</p>         |
| <p><b>2. Select Programmable Items</b><br/>Now you’ll hear 8 tones in a loop. When a long “beep-----” tone is emitted, move throttle stick to bottom to enter the “Start Mode”</p>  |
| <p><b>3. Set Item Value (Programmable Value)</b><br/>“Beep-”, wait for 3 seconds; “Beep-beep-”, wait for another 3 seconds; then you’ll hear “beep-beep-beep”, move throttle stick to top position, then a special tone “ ♪ i5i5” is emitted, now you have set the “Start Mode” item to the value of “Super-Soft”</p> |
| <p><b>4. Exit Program Mode</b><br/>After the special tone “ ♪ i5i5”, move throttle stick to bottom within 2 seconds.</p>  |

## Trouble Shooting

| Trouble  | Possible Reason  | Action   |
|--|--|--|
| After power on, motor does not work, no sound is emitted   | The connection between battery pack and ESC is not correct   | Check the power connection.<br>Replace the connector.  |
| After power on, motor does not work, such an alert tone is emitted:<br>“beep-beep-, beep-beep-,beep-beep-”<br>(Every “beep-beep-” has a time interval of about 1 second) | Input voltage is abnormal, too high or too low.<br>The balance charge connector is not located properly in BDMP adapter. | Check the voltage of battery pack<br><br>Check the connection of the balance charge connector and the BDMP adapter.        |
| After power on, motor does not work, such an alert tone is emitted:<br>“beep-, beep-, beep- ”(Every “beep-” has a time interval of about 2 seconds)                      | Throttle signal is irregular   | Check the receiver and transmitter<br>Check the cable of throttle channel  |
| After power on, motor does not work, such an alert tone is emitted:<br>“beep-, beep-, beep-” (Every “beep-” has a time interval of about 0.25 second)                    | The throttle stick is not in the bottom (lowest) position  | Move the throttle stick to bottom position   |
| After power on, motor does not work, a special tone “ ♪ 567i2” is emitted after 2 beep tone (beep-beep-)   | Direction of the throttle channel is reversed, so the ESC has entered the program mode                                   | Set the direction of throttle channel correctly  |
| The motor runs in the opposite direction   | The connection between ESC and the motor need to be changed.   | Swap any two wire connections between ESC and motor  |
| The motor stop running while in working state  | Throttle signal is lost  | Check the receiver and transmitter<br>Check the cable of throttle channel  |
|  | ESC has entered Low Voltage Protection mode  | Land RC model as soon as possible, and then replace the battery pack   |
|  | Some connections are not reliable  | Check all the connections: battery pack connection, throttle signal cable, motor connections, etc.                         |
| Random stop or restart or irregular working state  | There is strong electro-magnetic interference in flying field.   | Reset the ESC to resume normal operation. If the function could not resume, you might need to move to another area to fly. |

# Manual of Brushless Motor Speed Controller

## Normal startup procedure:

|   |  |   |  |  |
|---|--|---|--|--|
| Move throttle stick to bottom and then switch on transmitter. | Connect battery pack to ESC, special tone like "♪123" means power supply is OK | Several "beep-" tones should be emitted, presenting the number of lithium battery cells | When self-test is finished, a long "beep-----"tone should be emitted | Move throttle stick upwards to go flying |
|---|--|---|--|--|

## Throttle range setting: (Throttle range should be reset whenever a new transmitter is being used)

|   |   |  |  |   |
|---|---|--|--|---|
| Switch on transmitter, move throttle stick to top | Connect battery pack to ESC, and wait for about 2 seconds | "Beep-Beep-" tone should be emitted, means throttle range highest point has been correctly confirmed | Move throttle stick to the bottom, several "beep-" tones should be emitted, presenting the number of battery cells | A long "Beep-" tone should be emitted, means throttle range lowest point has been correctly confirmed |
|---|---|--|--|---|

## Program the ESC with your transmitter (4 Steps):

1. Enter program mode
2. Select programmable items
3. Set item's value (Programmable value)
4. Exit program mode

**1. Enter program mode**

- 1) Switch on transmitter, move throttle stick to top, connect the battery pack to ESC
- 2) Wait for 2 seconds, the motor should emit special tone like "beep-beep-"
- 3) Wait for another 5 seconds, special tone like "♪567i2" should be emitted, which means program mode is entered

**2. Select programmable items:**

After entering program mode, you will hear 8 tones in a loop with the following sequence. If you move the throttle stick to bottom within 3 seconds after one kind of tones, this item will be selected.

|                          |                    |                  |
|--------------------------|--------------------|------------------|
| 1. "beep"                | brake              | (1 short tone)   |
| 2. "beep-beep"           | battery type       | (2 short tone)   |
| 3. "beep-beep-beep"      | cutoff mode        | (3 short tone)   |
| 4. "beep-beep-beep-beep" | cutoff threshold   | (4 short tone)   |
| 5. "beep-----"           | startup mode       | (1 long tone)    |
| 6. "beep-----beep"       | timing             | (1 long 1 short) |
| 7. "beep-----beep-beep"  | set all to default | (1 long 2 short) |
| 8. "beep-----beep-----"  | exit               | (2 long tone)    |

**Note: 1 long "beep-----" = 5 short "beep-"**

**3. Set item value (Programmable value):**

You will hear several tones in loop. Set the value matching to a tone by moving throttle stick to top when you hear the tone, then a special tone "♪i5i5" emits, means the value is set and saved. (Keeping the throttle stick at top, you will go back to step 2 and you can select other items; Moving the stick to bottom within 2 seconds will exit program mode directly)

| Items \ Tones           | "beep-"          | "beep-beep-"  | "beep-beep-beep" |
|-------------------------|------------------|---------------|------------------|
|                         | 1 short tone     | 2 short tones | 3 short tones    |
| <b>Brake</b>            | Off              | On            |                  |
| <b>Battery type</b>     | Li-ion / Li-poly | NiMH / NiCd   |                  |
| <b>Cutoff mode</b>      | Soft-Cut         | Cut-Off       |                  |
| <b>Cutoff threshold</b> | Low              | Medium        | High             |
| <b>Start mode</b>       | Normal           | Soft          | Super soft       |
| <b>Timing</b>           | Low              | Medium        | High             |

**4. Exit program mode**

There are 2 ways to exit program mode:


1. In step 3, after special tone "♪i5i5", please move throttle stick to the bottom position within 2 seconds.
2. In step 2, after tone "beep-----beep-----"(ie. The item #8), move throttle stick to bottom within 3 seconds.

## **How to enter the programming mode of the Dynam's brushless ESC with the Dynam 2.4Ghz radio system:**


(Warning: Please disconnect the motor from the ESC before starting the following procedure)

- 1) Turn on the transmitter, then connect battery to the receiver, let the normal auto binding process completed. (Both LED lights on transmitter and receiver should flash rapidly at the same time for this process to succeed)
- 2) Disconnect the receive power; **do not turn off the transmitter.**
- 3) Move the throttle stick to the top position.
- 4) Toggle the safety switch (on the upper left hand corner of the transmitter). Then make sure the safety switch is at the off position (the tip of the switch is set toward the back of the transmitter)
- 5) Connect battery to the receiver; now you are ready to enter the programming mode (please see the ESC manual for programming instruction).
- 6) If unable to enter the programming mode, please repeat the above procedure again.

# Decal

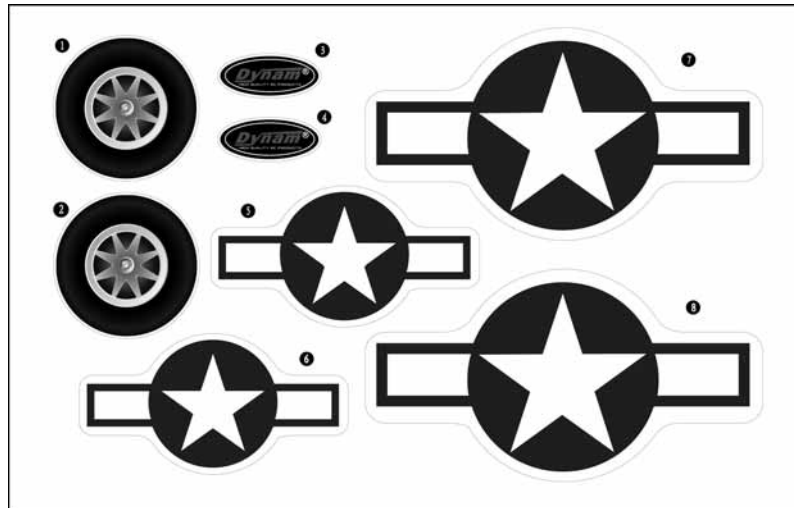

Open the canopy

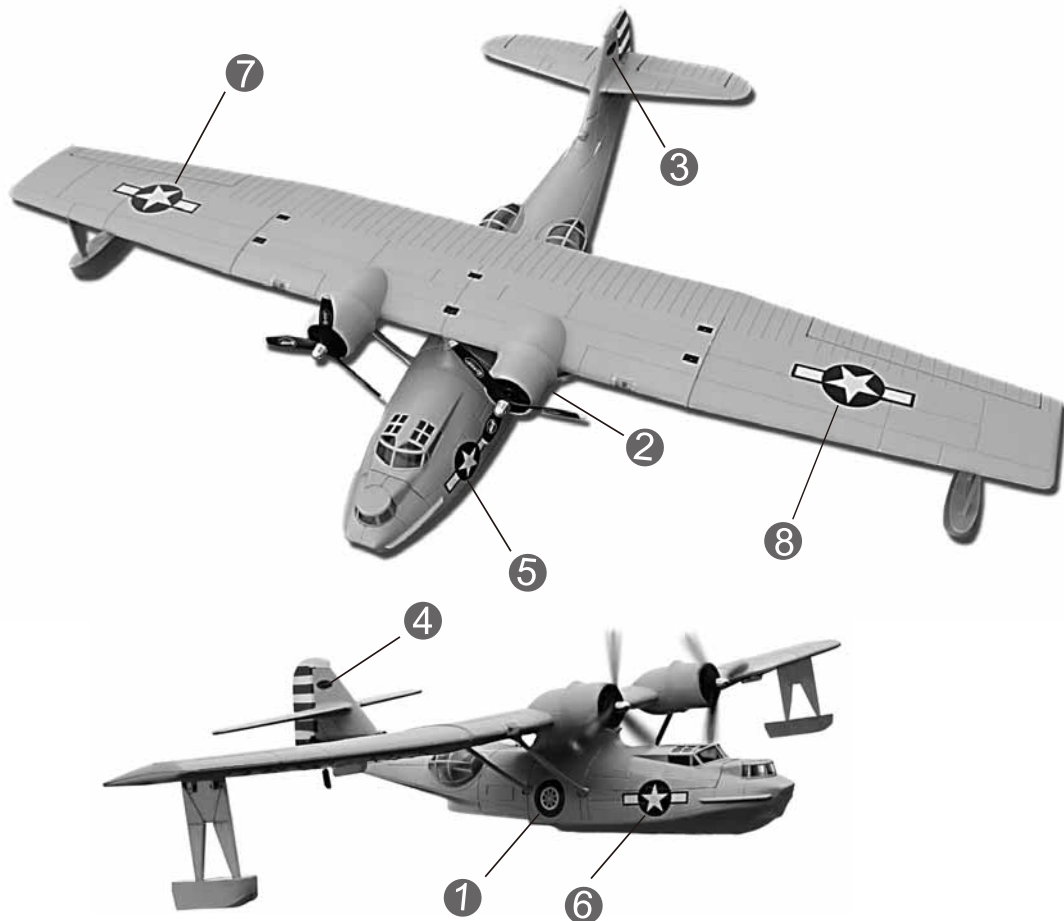




# Battery Warning And Charging

Lithium-polymer batteries are a revolutionary new rechargeable battery technology for electric R/C flight, offering a variety of significant advantages over NiCd, NiMH and Li-Ion batteries. It is very important to have a good understanding of the operating characteristics of Li-Po batteries especially their exact rated voltage. Always read the specifications printed on the label of your Li-Po battery prior to use, and read this instruction sheet in its entirety.

**WARNING! Lithium-Polymer batteries (Li-Po) are entirely different than NiCd and NiMH batteries and must be handled differently as well!! Failure to follow these care and handling instructions can quickly result in severe, permanent damage to the batteries and its surroundings and even start a FIRE!**


- You must charge the Li-Po battery pack in a safe area away from flammable materials.
- Never charge the battery unattended. When charging the battery you should always remain in constant observation to monitor the charging process and react to potential problems that may occur.
- After flight, the battery cool down to ambient temperature before charging.
- Wire lead shorts can cause fire! If you accidentally short the wires, the battery must be placed in a safe area for observation for approximately 15 minutes.

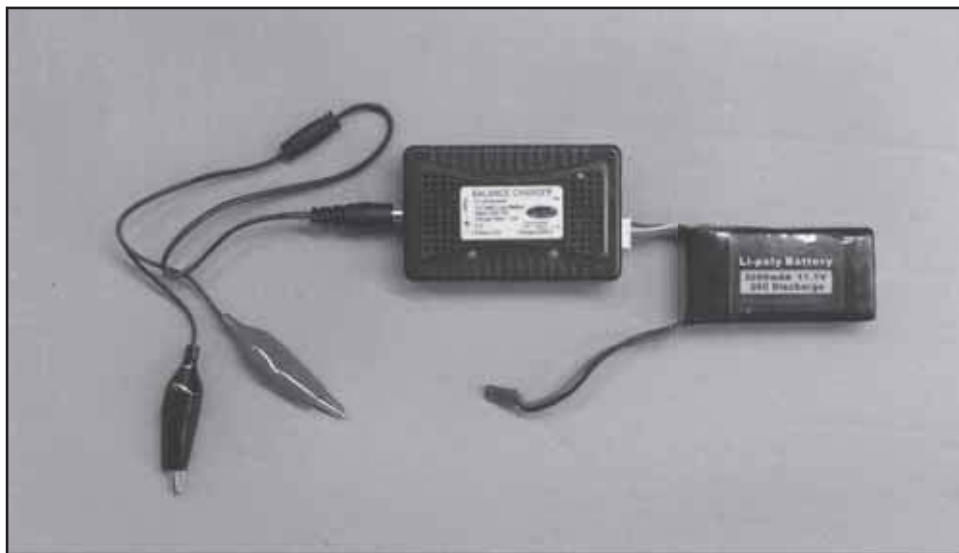

- In the event of a crash, you must quickly and safely disconnect and remove the battery from observation, then place it in a safe, open area away from flammable materials to observe it for at least 15 minutes.
- Store the battery at room temperature for best results.
- Do not over-discharge the battery. Discharging the battery too low can cause damage to the pack resulting in reduced performance and duration.

# Battery Warning And Charging

The charger requires up to 1.5 Amps of 10-15 Volt DC input power that can be supplied from a small 12V gel cell or car battery.

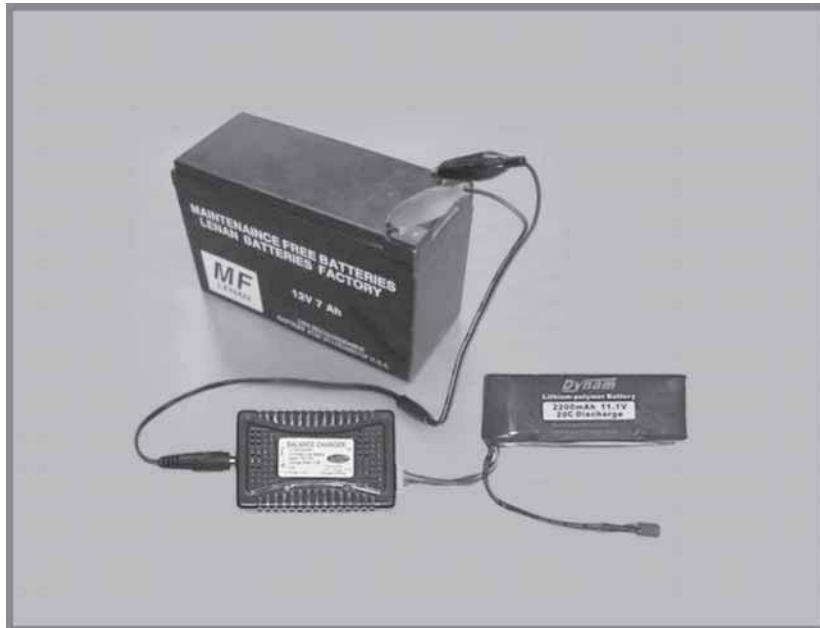


Input power for the charger can also be supplied through the use of an AC to DC adapter/power supply for convenient charging anywhere an AC outlet is available. We recommend the optional AC to 12V DC, 1.5 Amp Power Supply. **NEVER attempt to power the charger from an AC outlet without the use of a proper AC to DC adapter/power supply.**



# Battery Warning And Charging

Once you have connected the charger to a power source, The red LED will turn on. Connect the Li-Po battery pack to the charger. When the pack is full charged. The green LED will turn on.

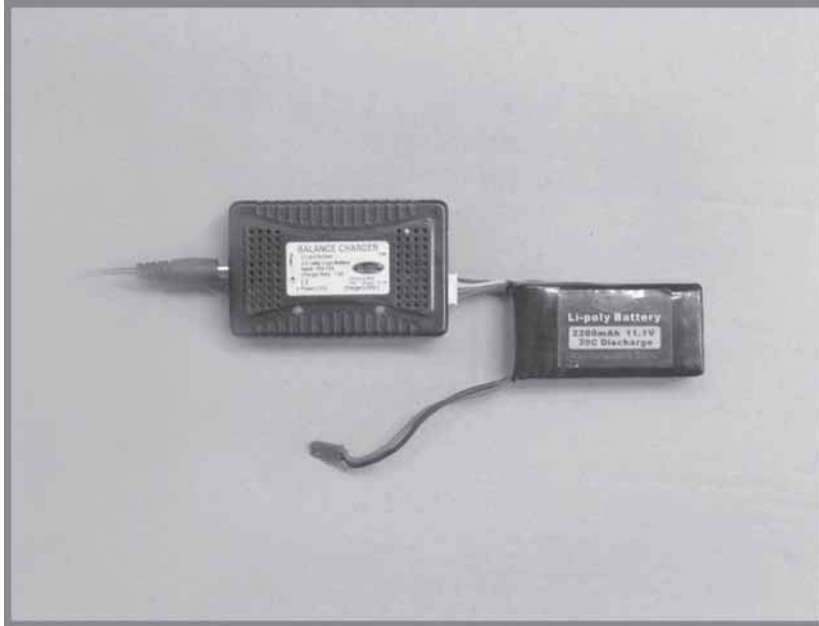


# Install the Transmitter Batteries

Install 8 new “AA” batteries in the included transmitter. Check the power level of the batteries and operation of the transmitter by switching the power switch on (upward). The status LEDs at the top of the transmitter will indicate the power level of the batteries. If at any time the status LEDs no longer show green, it will be necessary to replace the batteries with new ones.




# Parts List

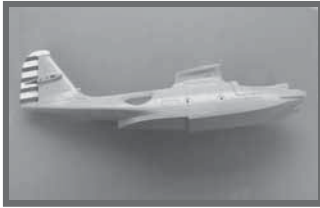

CTL-01 Fuselage



CTL-02 Side wing set

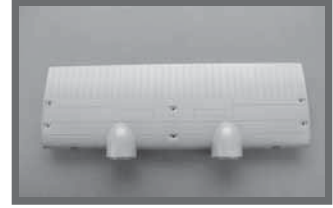

CTL-03 Middle wing set



CTL-04 Float




CTL-05 Blister parts




CTL-06 Propeller



CTL-07 Brushless Motor

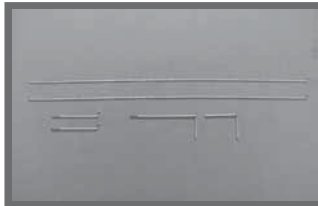

CTL-08 Push rod

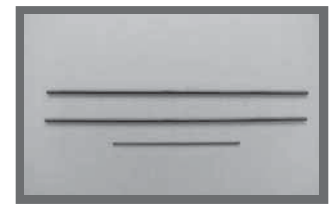

CTL-09 Bolt Pipe



CTL-10 Wing struts set



DYAT-008 Servo Horn



DY-3001 quick-controller



DY-1007 9g Servo



DYA-000X Adaptor



DY-6006 11.1V 2200mAh 20C Li-Po Battery



DYT-2002 Transmitter



DYC-1002 Balance Charger




DYE-1003 30A ESC



DYR-2001 2.4G Receiver



DY-3003 Glue

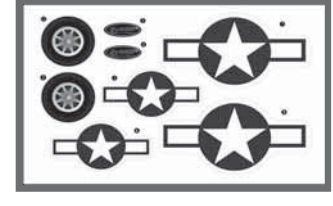

CTL-11 DECAL



# F-16

## Specification: INSTRUCTION MANUAL

Wingspan: ----- 670mm  
 Fuselage length: ----- 1020mm  
 Wing loading: ----- 47g/dm<sup>2</sup>  
 Flying weight: ----- 650g  
 Servo: ----- 9g  
 Battery: ----- 11.1V 2200mAh 15C Li-Po  
 ESC: ----- 60A  
 Brushless Outrunner Motor: ----- KV:4400  
 Ducted fan: ----- EDF 64mm



# SKYBUS

## Specification: INSTRUCTION MANUAL

Wingspan:----- 1470mm  
 Fuselage length: ----- 980mm  
 Wing Area: ----- 24.6dm<sup>2</sup>  
 Wing loading: ----- 48.8g/dm<sup>2</sup>  
 Flying weight: ----- 1200g  
 Servo: ----- 9g x 4  
 Battery: ----- 11.1V 2200mAh 15C Li-Po  
 ESC: ----- 40A x 2  
 Brushless Outrunner Motor: ----- KV1100




# CESSNA EP 400

## Specification:

**Length..... 30in**  
**Wing Span..... 37.8in**  
**Wing Area..... 15.3dm<sup>2</sup>**  
**Flying Weight..... 430g**  
**Wing Loading..... 28.1g/dm<sup>2</sup>**




# visit our website www.dynam-rc.cn



www.dynam-rc.cn

迪乐美


## Dynam RC Hobby Co.,Ltd



---



Home
About us
Download
News
Contact us


Dynam RC Hobby Co., Ltd.



740-V7555185

### F-51D Mustang





**Specification:**


|                 |                            |
|-----------------|----------------------------|
| Wingspan:       | 47 in (1200mm)             |
| Overall Length: | 41 in (1045mm)             |
| Flying weight:  | 38.8oz (1100 g)            |
| Servo:          | 9g 4pcs include            |
| Battery:        | 3S 11.1V 2200mAh Li-Po .20 |
| Speed Control:  | 30A brushless              |
| Motor Size:     | 830Kv Brushless Outrunner  |
| Charger:        | 3-cell Li-Po balancing     |


Catalog


- Airplanes ▶
- Helicopters ▶
- Rc Electronics ▶
- Esc ▶
- Charger ▶
- Motor ▶
- Battery ▶
- Combos ▶
- Blade ▶


  
NEW

  
NEW

  
NEW

  
NEW

  
NEW

  
NEW

- TEL:+86-769-87566018
- E-mail:sales@dynam-rc.cn
- FAX:+86-769-87555185
- Http:www.dynam-rc.cn
- Add:No.C-02 Nanshan Industry Town Yantian Fenggang  
City Dongguan Guangdong Province

■ Shen Zhen Dynam Industry & Trade co., ltd