



FAST2394BK

FASTRAX SCALE LIPO BATTERY BOX VOLTAGE CHECKER.



### 1. Normal Mode

The scale car battery LED display shows battery voltage

### 2. Voltage model setting

Gently remove the red top cover to gain access to the white button on the back of the electronics board.

Press the button to access the flashing voltage menu, each time the button is pressed the voltage alarm setting raises by 0.5v. when the highest voltage setting is reached, it will cycle back to the lowest setting.

Once the desired alarm voltage is reached when using the button, wait 3 seconds and the voltage alarm screen will stop flashing, the memory will be recorded, even after the checker is powered off.

NOTE. The default alarm setting is 6.5v, this can be adjusted between 6-15v using the button mentioned above.

### 3. Low Voltage Alarm,

When the battery voltage drops to the setting selected, the alarm will beep and the display will flash quickly

### 4. Alarm

When the alarm starts to beep, this can be cancelled by disconnecting the power source.