

### USE INFRARED THERMOMETER :



**Before use please pull out cap** and aim the thermometer at the target. Press the measurement button to display the surface temperature. The distance to target ratio is 1:1 therefore the thermometer should be positioned as close the target as possible.

 
°C OR °F :



The temperature unit can be change from '°C' or '°F' by pressing the pick hole under the back of the body with a point object.

### BATTERY REPLACEMENT :

When the Battery icon flash in the LCD, that indicates the battery is low and should be replaced. Confirm the unit is power OFF, loosen the battery cover and replace the LR-44 1.5V cell battery \*2pcs.



\*Dispose of used battery promptly and keep away from children.\*

### SPECIFICATION :

Measurement Range	FAST416:-33~220°C (-27.4~428°F)
Operating Range	0~50°C (32~122°F)
Storage Range	-20~65°C (-4~149°F)
Accuracy	±2.5% of reading or 2.5°C whichever is greater
Resolution	0.2°C/0.5°F
Response Time (90%)	1sec
Field of View	1:1 optics ratio
Emissivity Range	0.95 fixed
Auto switching-off	15sec
Battery	LR-44/L1154*2pcs