

RADIO CONTROL BAIT BOAT

INSTRUCTION MANUAL

Model No.: 3151V4



BAIT BOAT INTRODUCTION

SPECIFICATIONS

Length: 556mm
Width: 240mm
No-load weight: 1650g
Full-load weight: 2150g
Radio range: 500meter
Bait weight per each launch: 500g
(Remark: only dry bait used, dimension not exceed 15mm bait)
No-load direct line speed: 1.2m/s
Full-load direct line speed: 1m/s
Turning radius: 1meter

IMPORTANT NOTICE

- A). Required 4pcs AA alkaline batteries for transmitter.
- B). Boat power battery charging time: need around 5 hours for fully charge. A fully charge battery can continuously drive boat around 1.5hours. For example, can back and forth to release bait 50 times within 50 meter distance from shore.
- C). Can use bait boat at night, boat installed with navigation LED lights (forward blue LED, rear red LED), Switch on LED on transmitter.
- D). Low battery warning: Navigation LED lights designed as the low battery warning light. When battery voltage is too low, no matter you switch on LED lights or not. The Navigation LED lights will keep blinking. The boat battery will still allow you have 10 minutes time to drive boat back(driving distance around 400 meters).
- E). Each component of boat is designed as modular construction, It is easily to replace each component when you purchase parts based on last page of manual.

FUNCTION INTRODUCTION

 
- A). Used as bait launching, Load 500g bait per each time, radio control boat to any position within 500 meter range to release bait. Reload bait and release repeatedly.
- B). Load 1 or 2 hook in hopper to release in any position within 500 meter range.

SAFETY NOTICE

- A). Read manual before you use this bait boat, Follow manual's instruction to use bait boat properly.
- B). This boat is not a toy, It is not intended for persons under 14 years of age.
- C). Keep this boat away from children under 3 years old because small parts can be swallowed.
- D). When operating the boat in wet weather, ensure that the front battery access hatch is securely closed to avoid water entering the battery/electronics compartment. The transmitter is not waterproof, so must be protected from rain, either by use of a protective waterproof bag, or by keeping it under cover. When using dry bait in wet weather, the bait may not release cleanly or completely from the bait hopper, depending on the amount of water it may have absorbed.
- E). Do not use this boat in the water where there are many obstacle and waterweeds.
- F). Do not drop this boat during transportation to prevent damage.

BAIT BOAT INSTRUCTIONS

INSTALL BATTERIES IN TRANSMITTER

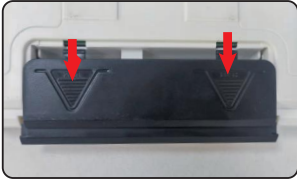

A: Purchase 4pcs AA alkaline batteries (not included)
B: Open battery compartment on bottom of transmitter



C: Install batteries base on correct polarity
D: Close battery compartment

CHARGING BOAT BATTERY

WARNING:

DO NOT leave battery unattended during charging.
DO NOT leave battery plugged into the USB fast charger any longer than 7 hours maximum.
DO NOT leave battery on charge overnight.
During charging, when the battery becomes hot, please stop charging immediately.



USB power adapter not included

A: . Connect the USB charger into the USB adaptor.



power bank not included

B: Connect the USB charger into the power bank.

The USB charger can either be connected to the cellphone USB power adaptor or the power bank.

The specification of the power bank and cellphone USB power adaptor should be 5V , 2A above.

When the USB charger is connected to power supply , the red indicator is constantly on.


During the charging period, the blue indicator will blink.

When it is fully charged, the blue indicator is constantly on.

The charging time is about 5 hours.

INSTALL BATTERY IN BOAT

IMPORTANT: Always switch on transmitter firstly, then Connect boat battery.
When you don't use boat, disconnect boat battery firstly, then switch off transmitter.

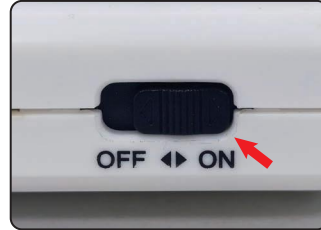

A: Switch on transmitter, Transmitter emit "Di" sound, two green LED light are flashing. (Note:Switch off transmitter when not use boat to save transmitter battery.)



B: Press down black button on hatch.




C: Pull out hatch,



D: Place battery in the mounted position inside cabin.



E: Plug battery DC connector into power socket in receiver box.
Now boat LED navigation lights come on. Transmitter emit "Di Di" sound, transmitter two LED lights change to solid on. That means radio automatically bind with boat.

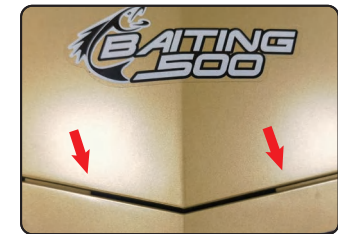

F: Follow photo to install back the hatch on cabin. Press down hatch align to cabin two mounted slot.

BOAT FUNCTION TESTING



A: Push left stick forward, left and right propeller rotate as photo shown.
This control drive boat forward, propeller rotate speed will change proportionally base on how you push left stick forward.



B: Pull left stick backward, left and right propeller rotate as photo shown.
This control drive boat backward (reverse).



C: Push right stick to the right, this control drive boat steering to right.
Push right stick to the left, this control drive boat steering to left.



D: "TRIM" button adjust boat run in straight line. If no steering input, boat steer to right, Press left "TRIM" button. If no steering input, boat steer to left, press right "TRIM" button.



E: Press "LED" button on transmitter, Forward blue LED and rear red LED will stay bright.



F: Close the two hopper doors, push lock latch to lock the hopper doors. Press button "D.OPEN" on transmitter, hopper doors fully open to release bait.


RADIO BIND INSTRUCTION

Switch on transmitter power, transmitter emit "Di" sound, two green LED light are flashing. Plug battery DC connector into power socket in receiver box. Now boat LED navigation lights come on. Transmitter emit "Di Di" sound, transmitter two LED lights change to solid on. That means radio automatically bind with boat. No need to bind transmitter with boat by any process.

IMPORTANT:

Always switch on transmitter firstly, then Connect boat battery. When you don't use boat, disconnect boat battery firstly, then switch off transmitter.


BAIT RELEASE

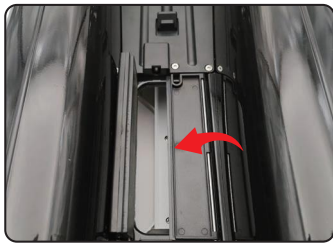


A: Switch on transmitter power, Plug battery DC connector into power socket in receiver box. Close right door firstly. (view from bow)




B: Close left door secondly. (view from bow)

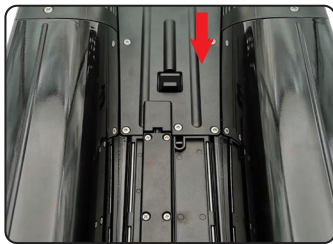

C: Push lock latch to lock two doors. (view from bow)

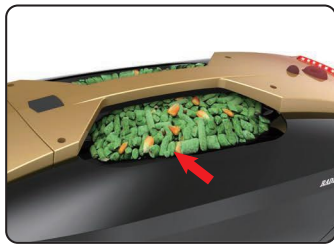

D: Load 500g bait inside the hopper.

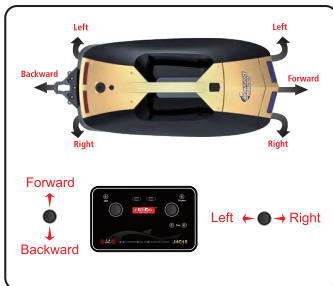


E: Place boat on water, drive boat to your desired spot.




F: Close the two hopper doors, push lock latch to lock the hopper doors. Press button "D.OPEN" on transmitter, hopper doors fully open to release bait.

DELIVERY HOOK

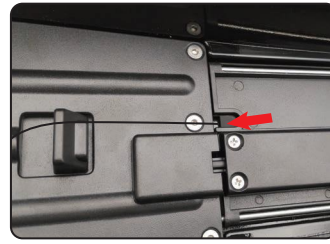

A: Insert your hook by passing it under the boat and up through the hopper. Close the hopper door manually from below, ensuring "click" closure.

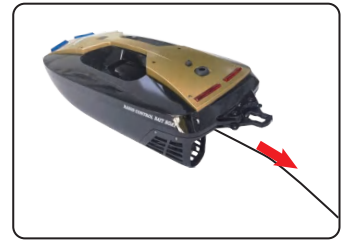

B: Place boat evenly, pull line straight out from hopper.



C: Drive boat to chosen spot and press "D.OPEN" button to release hook and drive boat back.

LED NAVIGATION LIGHTS



A: Press "LED" button on transmitter to switch on navigation LED lights.



B: Forward Blue LED light, Rear Red LED light. To tell direction when drive boat.

LOW BATTERY WARNING

When boat battery running low:

A: no matter you switch on LED lights or not. The Navigation LED lights will keep blinking.

B: When LED lights begin to blink. The boat battery will still allow you have 10 minutes time to drive boat back (driving distance around 400meters). you need to drive boat back immediately to recharge the boat battery.

UPGRADE WITH PORTABLE WIFI FISH FINDER

(NOTE: Optional part, not included. Select and purchase the suitable unit in market separately.)

Use fishing line to attach WIFI fish finder to the rear support of boat. Keep the line length within 100mm.

SPARE PART LIST

| | |
|--------|--|
| 315103 | Antenna seal+wire seal(3151V3 & V4) |
| 315110 | 4.8V 5000mAh NiMH battery(3151V3 & V4) |
| 315116 | Water seal EVA rubber for forward and rear cabin(3151V3 & V4) |
| 315124 | USB fast charger(3151V3 & V4) |
| 315127 | Bait hopper Swinging doors set(3151V3 & V4) |
| 315131 | Front and rear LED lights(3151V4) |
| 315132 | bait hopper door lock set(3151V4) |
| 315133 | Left and right propeller set(3151V4) |
| 315134 | Golden Hatch(3151V4) |
| 315135 | Boat handle with Golden painting(3151V4) |
| 315136 | Receiver box(3151V4) |
| 315137 | J4C15 Transmitter(3151V4) |
| 315138 | Left and right motor set (3151V4) |
| 315139 | Hull with black painting and decal sticker(3151V4) |
| 315140 | Left and right propeller cover(3151V4) |
| 315141 | Battery mount tray(3151V4) |

MAINTENANCE & AFTERSALES SERVICE

AFTERSALES SERVICE

During usage of bait boat, unexpected situation occur to damage boat. Check carefully which component damage, and purchase the spare parts base on last page of manual and easily replace for working properly again.

NOTE: Each components of boat are designed as modular construction.It is convenient for replacement components.

MAINTENANCE NOTICE

A: Take transmitter's batteries and boat battery out when not use boat.
B: Use fresh water to wash boat hull, hopper and left & right propeller.
C: When obstacle or waterweeds get into the propeller covers, must clear them out before next time drive.

D: When not use boat in a long time, keep the hopper door open, if door keep in closure, the spring of door will deform.
E: After using bait boat, open the hatch, let the boat air dry for one day.
F: It is recommend to pack boat back to packaging box when intend not use for a long time.



www.fishingpeople.net

**FISHING PEOPLE is a trade mark of
Joysway Hobby International Ltd.**

CHINA PATENT NO.: 201830087925.3
HONG KONG PATENT NO.: PATENT PENDING
NOT INTENDED FOR PERSONS UNDER 14 YEARS OF AGE
UNLESS CLOSELY SUPERVISED BY AN ADULT.
JOYSWAY HOBBY INTERNATIONAL LTD. ALL RIGHTS RESERVED

