

# MERCURY

## 1:10 High-simulated Remote Control Car-Chassis

Item#48780 MERCURY Chassis Kit  
Fit for KB#48601 1/10 Toyota Land Cruiser Hard Body



High/ Low Speed



Front/ Rear  
Differential Lock



4WD/RWD  
Switching



Engine Simulation



High-simulated  
Chassis



## WARNING



To prevent serious personal injury and/or property damage, operate all remotely controlled models in a responsible manner as outlined herein.

### CHOOSE THE RIGHT PLACE TO OPERATE YOUR RC MODEL.

- Do not run on public streets or highways. This could cause serious accidents, personal injuries, and/or property damage.
- Never run R/C models near people or animals.
- To avoid injury, do not run in confined spaces.
- Do not run where loud noises can disturb others, such as hospitals and residential areas.
- Never run indoors. There is a high risk of fire and/or damage.

### INSPECT YOUR MODEL BEFORE OPERATION.

- Make sure that all screws and nuts are properly tightened. It is also a good idea to use removable thread lock wherever metal screws go into metal, especially for engine mounts and the engine pilot shaft.
- Always use fresh batteries for your transmitter and for your receiver to avoid losing control of the model.
- Always test the brakes and throttle before starting your engine to avoid losing control of the model.
- Make sure no one else is using the same radio frequency as you are using.

 
### AFTER OPERATION OF YOUR R/C MODEL

- Turn off receiver first, then turn off transmitter, this will prevent runaways.
- Be careful when handling batteries, they will be hot after running.
- Replace any batteries that have been dented or have frayed wires, short circuits can cause fire.
- Be sure to keep your R/C model clean and free of excess dirt and grease, this will increase the life.

## EQUIPMENT NEEDED


### Radio Control System

You will need 6-channel radio system with four servos, a Motor/ESC 2in1, a receiver.

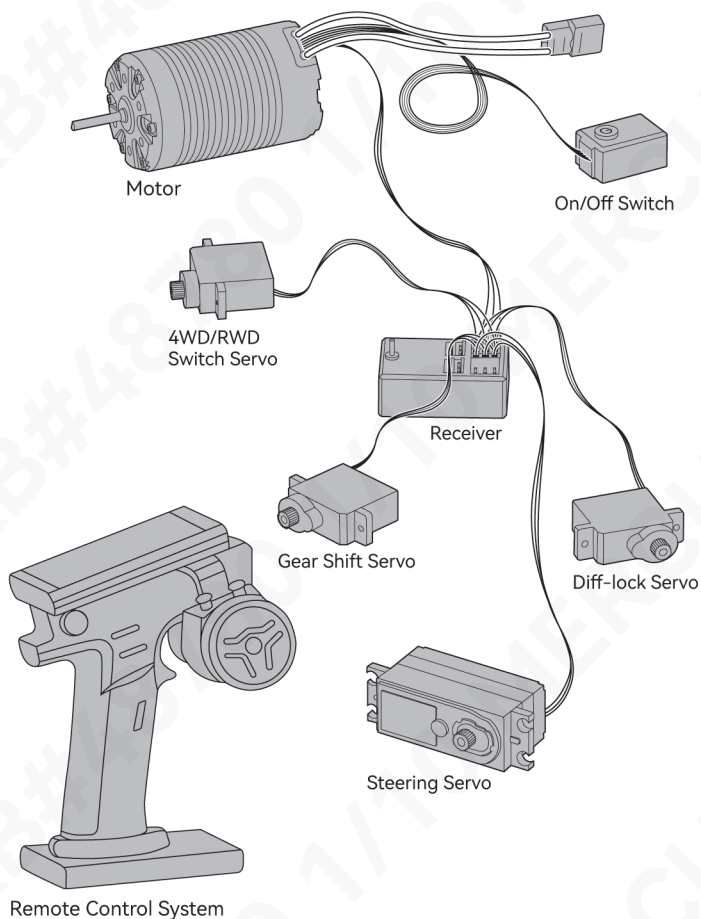


### Radio Control System

 You will need 6-channel radio system with four servos, a 540 motor, a electronics speed control.

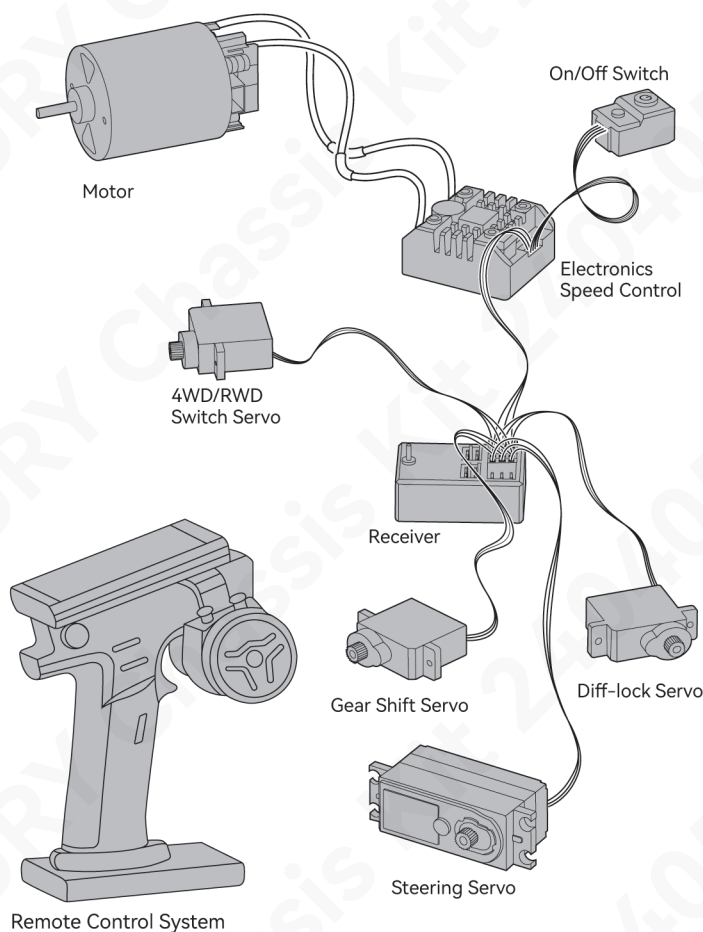


## Battery

 Maximum Size: 93mmx44mmx18.5mm

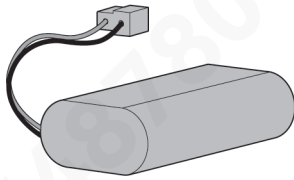


Li-Lon Battery 2S/7.4V

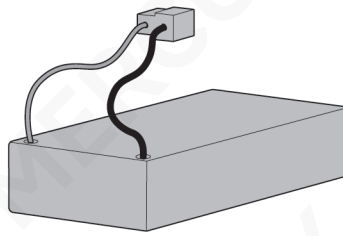 


LiPo Battery 2S/7.4V

## Charger

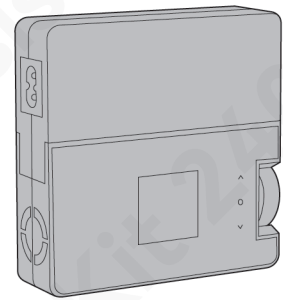 


## Tools Recommended

 
Allen Wrench 1.5mm



Allen Wrench 2.5mm

 

Screwdriver (large)

 

Screwdriver (small)



Screwdriver (small)



Tweezers



 
Socket Driver 2.0mm




Socket Driver 3.0mm



Socket Driver 4.0mm




Socket Driver 7.0mm

 

Plastic Cement



 
Apply Threadlock




Apply Grease



 
Long Nose Pliers

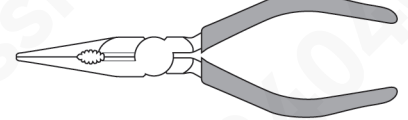


Side Cutters

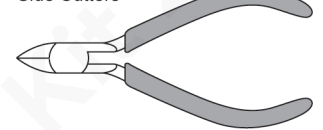 

Curve Scissors

 

Modeling Knife

 


## ALUMINIUM ALLOY UPGRADE PARTS



**48777**

 Front/ Rear Axle Upgrade Sets  
Aluminium alloy

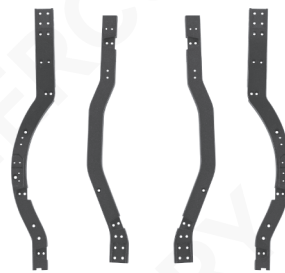

**48779**

Frame Upgrade Sets  
Aluminium alloy  
Fit for KB#48780 MERCURY Chassis



**48811**

Frame Upgrade Sets  
Aluminium alloy  
Fit for KB#48760 MERCURY Chassis



 
**48809**

Steering Knuckle Upgrade Sets  
Aluminium alloy



**48810**

Suspension Loop Upgrade Sets  
Aluminium alloy

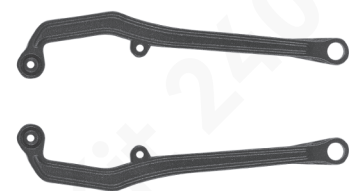

**48808**

Control Arm Upgrade Sets  
Aluminium alloy

 
## PARTS REFERENCE

### A


#### Chassis Frame Kit

##### A1 Side Member

###### A1① F/R

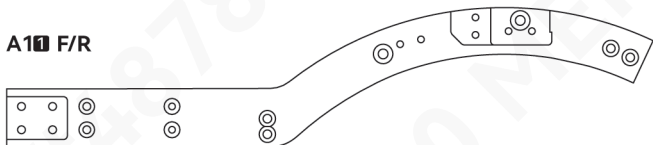

###### A1② F/L

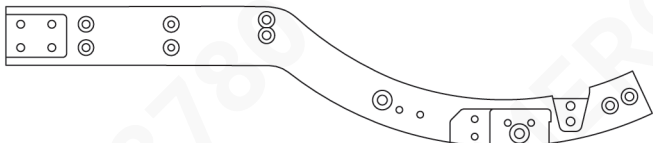 

##### A3 Side Adjustable Extension Sections

###### A3① x2

 


###### A3② x2




##### A2 Side Member

###### A2① R/L

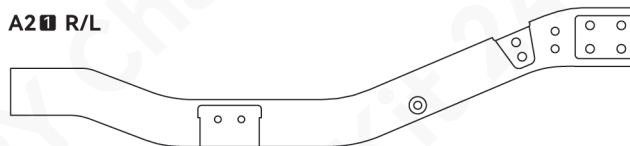

###### A2② R/R

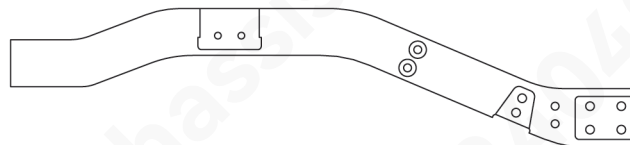 

###### A2-1①



###### A2-1②



##### A4 Side Member Part

Side Member Part for 48780

###### A4①



###### A4②



Side Member Part for 48760

###### A4③



###### A4④



###### A4⑤ x2



### B

#### Fuel Tank and Chassis Beam Kit

##### B1 Cross Member

###### B1①



###### B1②



###### B1③



###### B1④



###### B1⑤



###### B1⑥

Front Axle Collision Beam



##### B2 Fuel Tank

 
###### B2①

Lower Part of Fuel Tank



###### B2②

Upper Part of Fuel Tank

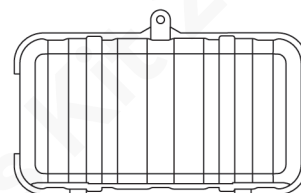




## PARTS REFERENCE

### C


#### Battery Compartment Shell Kit
 
##### C1 Differential Lock Servo Bracket

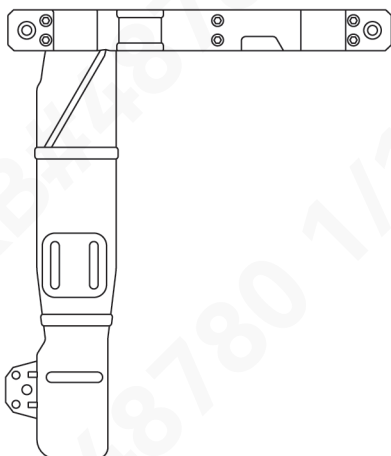


##### C2 Lower Part of Battery Box

 C2 1

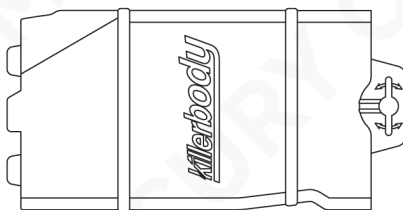

C2 2

 

C2 3




C2 4

Spring 5.5x5mm



##### C3 Upper Part of Battery Box

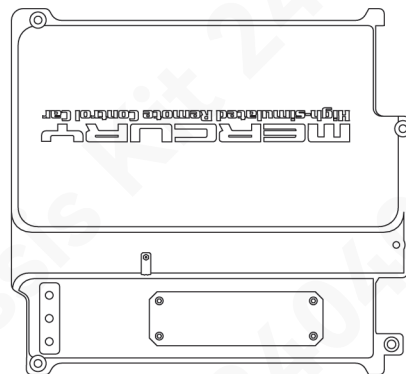 

C3-1 Steel Wire accessories x4



### D

#### Engine and Transmission Housing Set

 
##### D1 Motor Gear

D1 1

Pinion 48DP 20T



D1 2

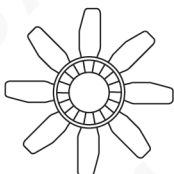

D1 3



D1 4




D1 5



##### D2 Engine Mount

 D2 1



D2 2




M3x8mm X 2

##### D3 Cylinder Cover

 
D3 1




D3 2



D3 3

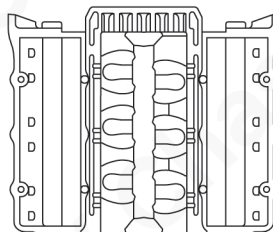 

D3 4 x2

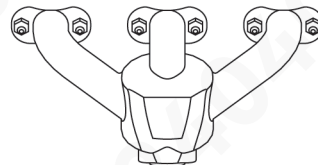 

##### D4 Engine and Transmission Housing Set

D4-1 1



D4-1 2 x2



D4-1 3



D4-1 4



 
D4-1 5




D4-1 6




D4-1 7

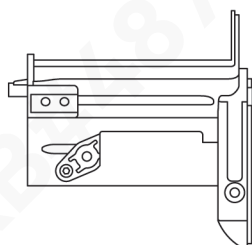


D4-1 8

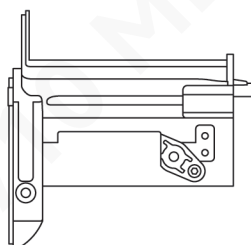 




D4-1 9

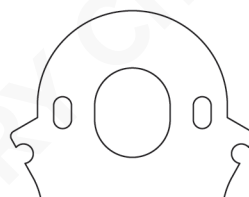 

D4-1 10

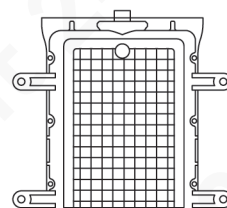 


# PARTS REFERENCE

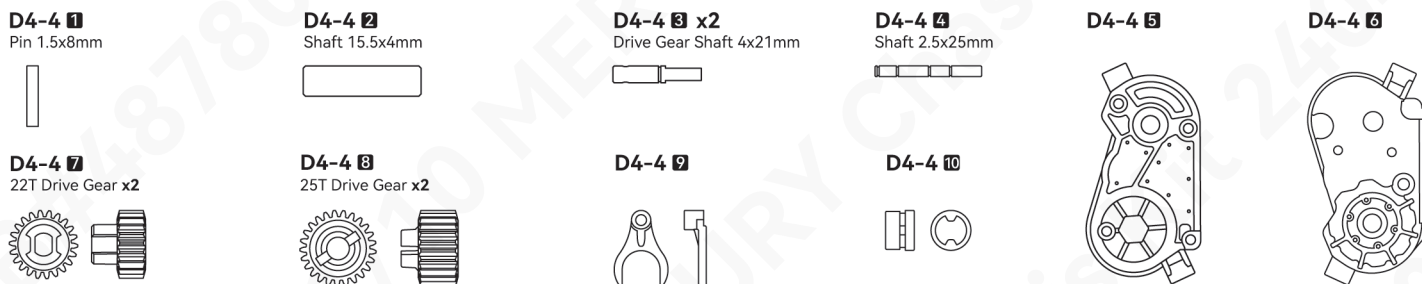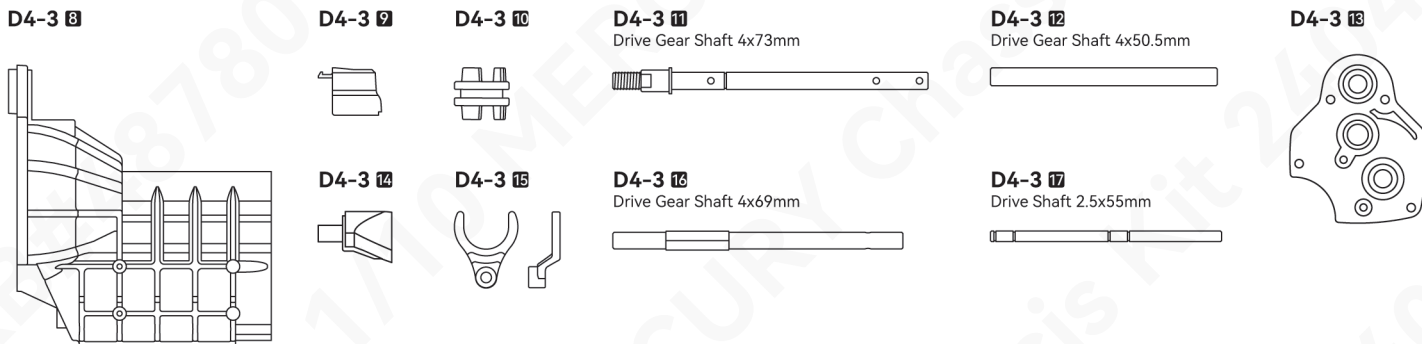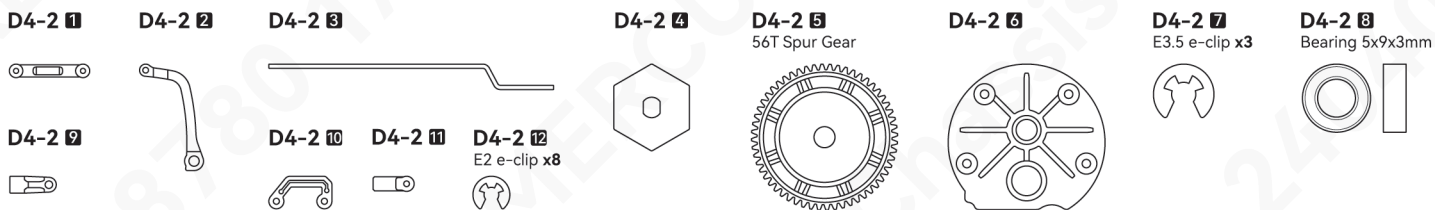   

## **E** Exhaust Pipe Kit
 
### E1 Exhaust Pipe & Muffler

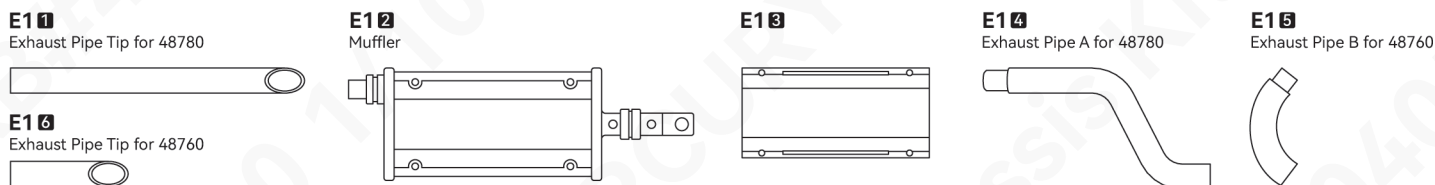

### E2 Exhaust Manifold





# PARTS REFERENCE



## Axle Set

### F1 Differential Lock

#### F11

Length115~120mm Φ2mm



#### F14

Length70~75mm Φ2mm



#### F16

Length250~260mm Φ1mm



#### F17

Length340~350mm Φ1mm



#### F12

Length95~100mm Φ2mm x2



#### F18

Length40~45mm Φ2mm



#### F15

 


### F2 Wheel Hub

#### F21 x4




#### F22 x4



### F3 Front Axle Assembly
 
#### F31 x4



#### F32 x4



#### F33

Pin 1.5x9mm x4



#### F34 x4

 


#### F35


Copper Bushing 4x7x1.5mm x6



#### F36 x2



#### F37 x2

 


#### F38

Copper Bushing 2.5x4.5x4mm x4



#### F39

 Solid Axle 4x83mm



#### F310

Pin 1.5x6mm x4



#### F311 x2



#### F312

Bearing 4x7x2mm x6



#### F313

Spring 15x6mm x2



#### F314

Washer 4x6mm x2



#### F315 x2

 


#### F316

Solid Axle 4x101mm



#### F317

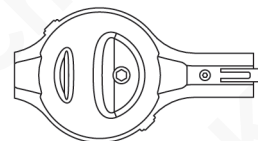


#### F318

Bearing 8x12x3.5mm x4



#### F319

 Bevel Gear 45T X2



#### F320 x4



#### F321

20T Bevel Gear X4



#### F322

15T Bevel Gear X4



#### F323

Shaft 2x16mm x2



#### F324 x2



 
#### F325 x2



#### F326 x2



#### F327

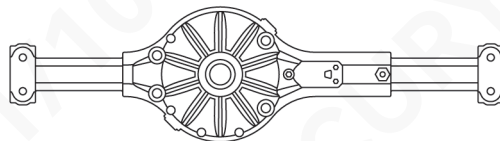

#### F328 x2



#### F329

15T Bevel Gear X2



#### F330 x2

 
Shaft 4x20.6mm




# PARTS REFERENCE

## F4 Rear Axle Assembly


**F4 1**



**F4 2**

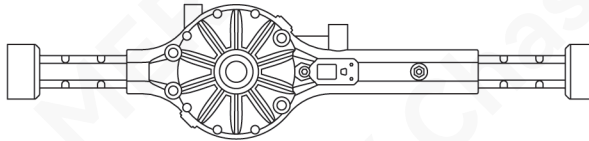 


**F4 3**

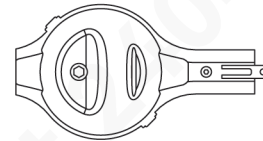 


**F4 4**

 Solid Axle 4x74mm



**F4 5**

 Solid Axle 4x105.5mm



## G Suspension System Package

### G1 Control Arm Set

**G1 1**

Lower Control Arm (L)



**G1 2** x11



**G1-1 1**

Axle Mounting Bracket x2



**G1-2**

Spring

**G1-2 1**

C-shaped ring x4



**G1-2 2**

Base x2



**G1-2 3** x2



**G1-2 4** x2



**G1 3**

Lower Control Arm (R)



**G1-2 5**

Spring 10x56mm x4



**G1-2 6** x2

Spring 10x61mm x4



**G1-3**

Shock Absorber bracket



**G1-3 2**

Bracket



**G1-3 3**

Bracket



**G1-3 4**

Coil Bracket x2



**G1-4**

Shock Absorber



**G1-4 1** x2

**G1-4 2** x2



**G1-4-1**

Washer 2.5x6x0.4mm x2



**G1-5**

Limit Strap Length 53mm x2



### G2 Leaf Springs Set

**G2 1** (L)



**G2 2** x2



**G2 3** x2



**G2 4** x2



**G2-1**

Leaf Spring accessorie

**G2-1 1** x6



**G2-1 2** x2



**G2-1-1**

U-bolt x4



**G2 5** (R)



### G3 Drive shaft

**G3 1**

Front Center Shaft Set A  
5.2x39mm



**G3 2**

Front Center Shaft Set B  
7.5x40mm



**G3 3**

Rear Center Shaft Set A  
5.2x67mm



**G3 4**

Rear Center Shaft Set B  
7.5x140mm



**G3-1**

M2 half thread x6





## PARTS REFERENCE

### G4 Hanger x9



### G5 Tie-rod Set

**G5 1**  
Steering Linkage 3.5x112mm



**G5 4**  
Steering Tie-rod 3.5x68mm



**G5 2** x2



**G5 3** x2



**G5 5**  
Panhard Bar 3.5x90mm



**G5 6**



 
**G5 7**




## Steering Server Support Package

### H1 Servo Saver


**H1 1**  
Shaft diameter 4.6

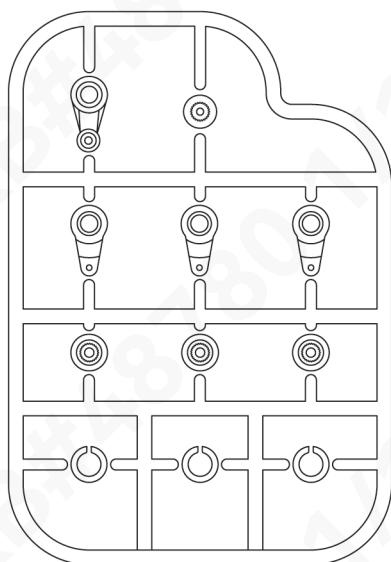

**H1 2**  
Shaft diameter 6.0

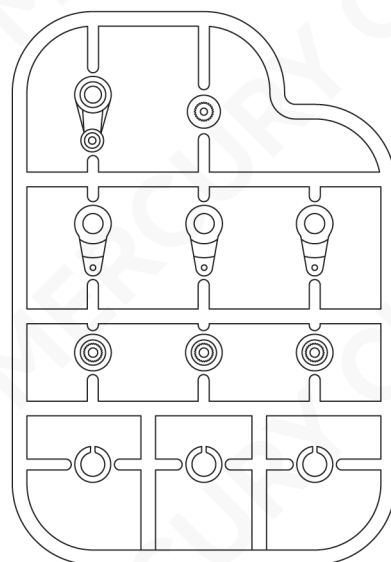 

**H1 3**  
Shaft diameter 5.0

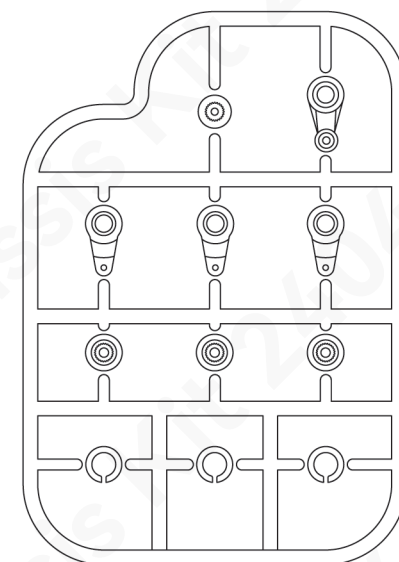 

**H1-1**  
Gasket Clip Rings

**H1-1 1**  
Gasket  
2.5x6x0.4mm x4



**H1-1 2**  
Snap Ring  
10x1mm x8



**H1-1 3** x2  
Spring  
8x5.4mm x2




### H2 Servo Mount

 **H2 1** Standard Servo Bracket




**H2 2** Nonstandard Servo Bracket

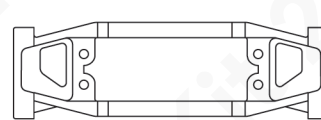

## Liners Fender Flares and Carriage Installation Fixing Point

### I1 Liners Fender Flares

 **I1 1** (L)

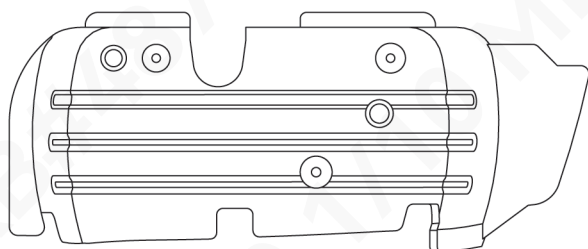

**I1 2**

 


**I1 3**



## PARTS REFERENCE


I1 4 (R)

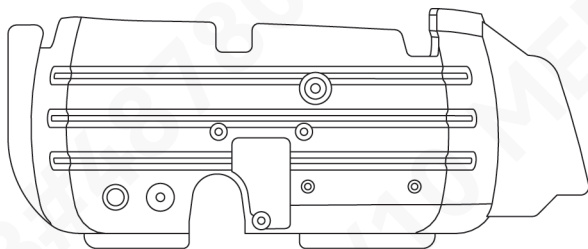


I1 5



 I1 6

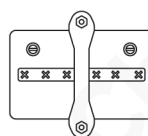

I1 7

 

### I2 Carriage Installation Fixing Point

I2 1 x2



I2 2 x2



I2 3 x2



I2 4 x2



I2 5 x2

 


## J


### Wheel kit

#### J1 Tyre

J1 1 x4  
3.35 inch

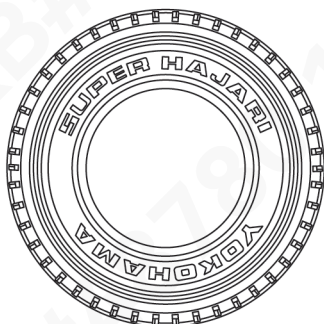


J1 2 x4  
Sponge

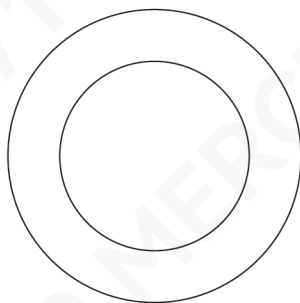 


#### J2 Rim

Aluminum Alloy Wheel 1.68 inch

 
J2 1 x4

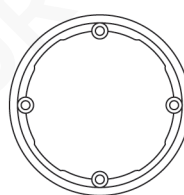

J2 2 x4

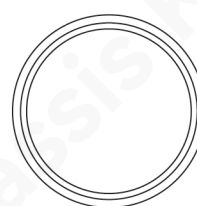 

J2 3 x4

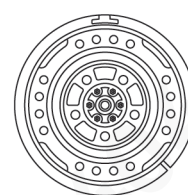 

## K

### Screw and Tool Set

#### K1 Screw



M2x6mm X 20



M2x8mm X 52



M2x10mm X 30



M2x12mm X 36



M2.5x10mm X 4



M2.5x7mm X 3



M1.6x6mm X 8



M2x6mm X 15



M2x6mm X 20  
Outer HEX



O rings X 4

 
 


M1.7mm X 8



M2mm X 4

#### K2 Toolkit



#### K3 Diff Fluid (50W)





# INSTALL

**A**

**1 ~ 3**

Open Bag A



M2x6mm X 4

 


M2x8mm X 4



M2x10mm X 2

**1** L/R

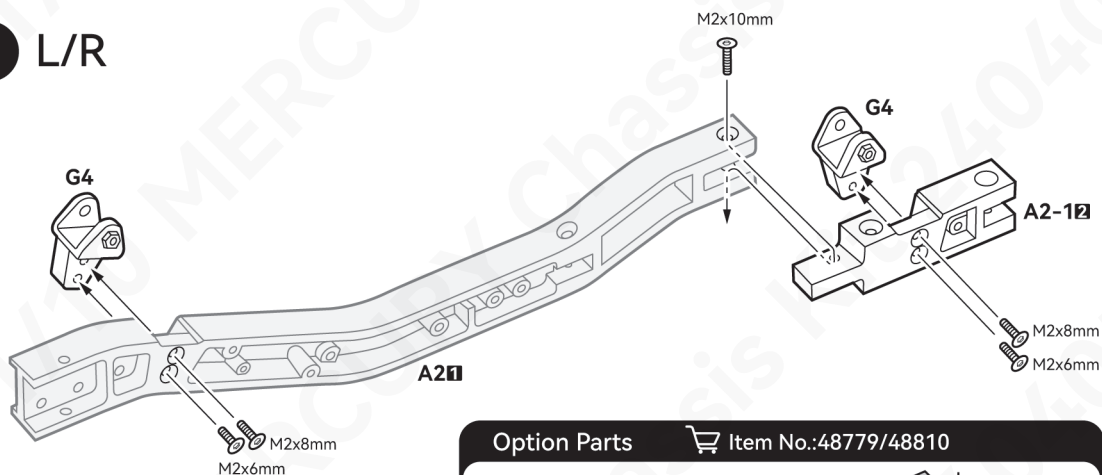

M2x6mm X 2




M2x8mm X 3






M2x6mm X 4

**2**

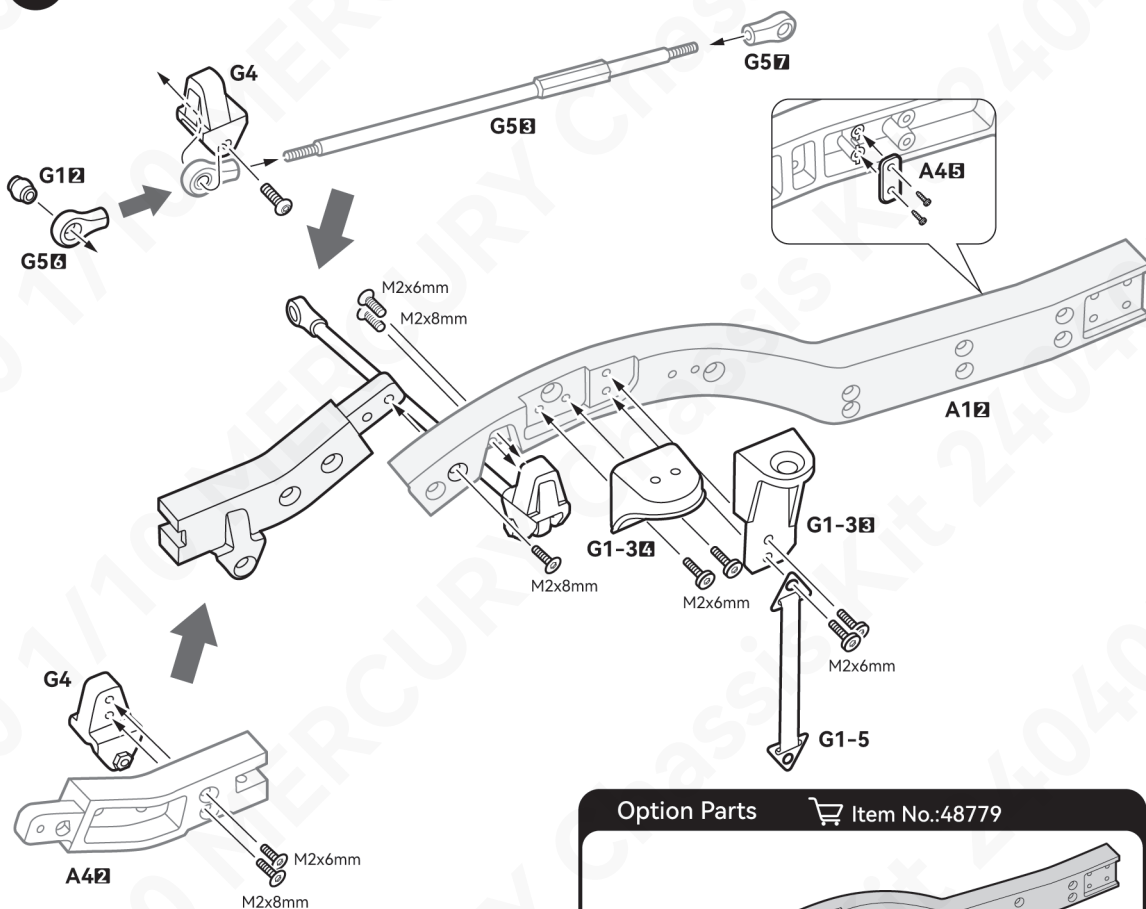 Assembly was completed before delivery for G4 G1-2 G5-3/4/7, this step is shown for easy maintenance!




 -  M2x6mm X1
-  M2x8mm X2
-  M2x6mm X4

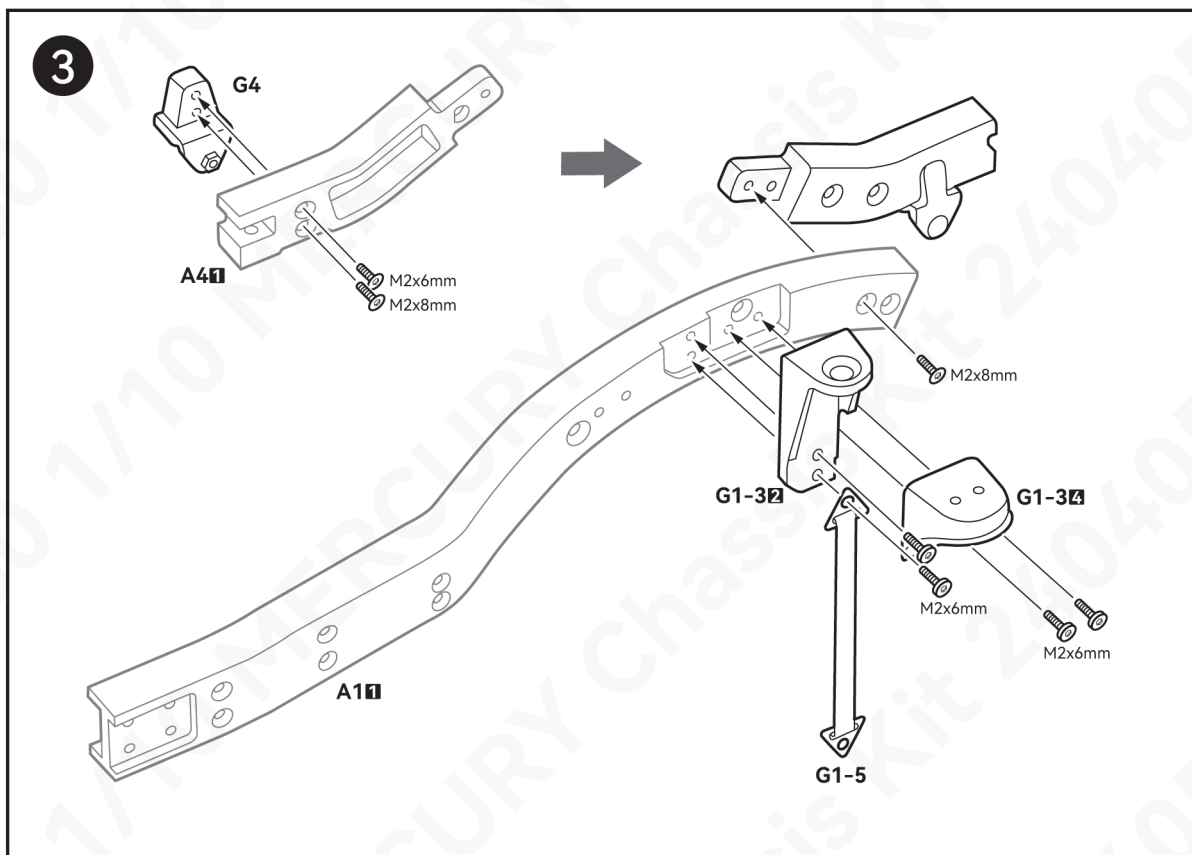

**B** **1** Open Bag B

 -  M2x6mm X1
-  M2x8mm X3
-  M2x10mm X6

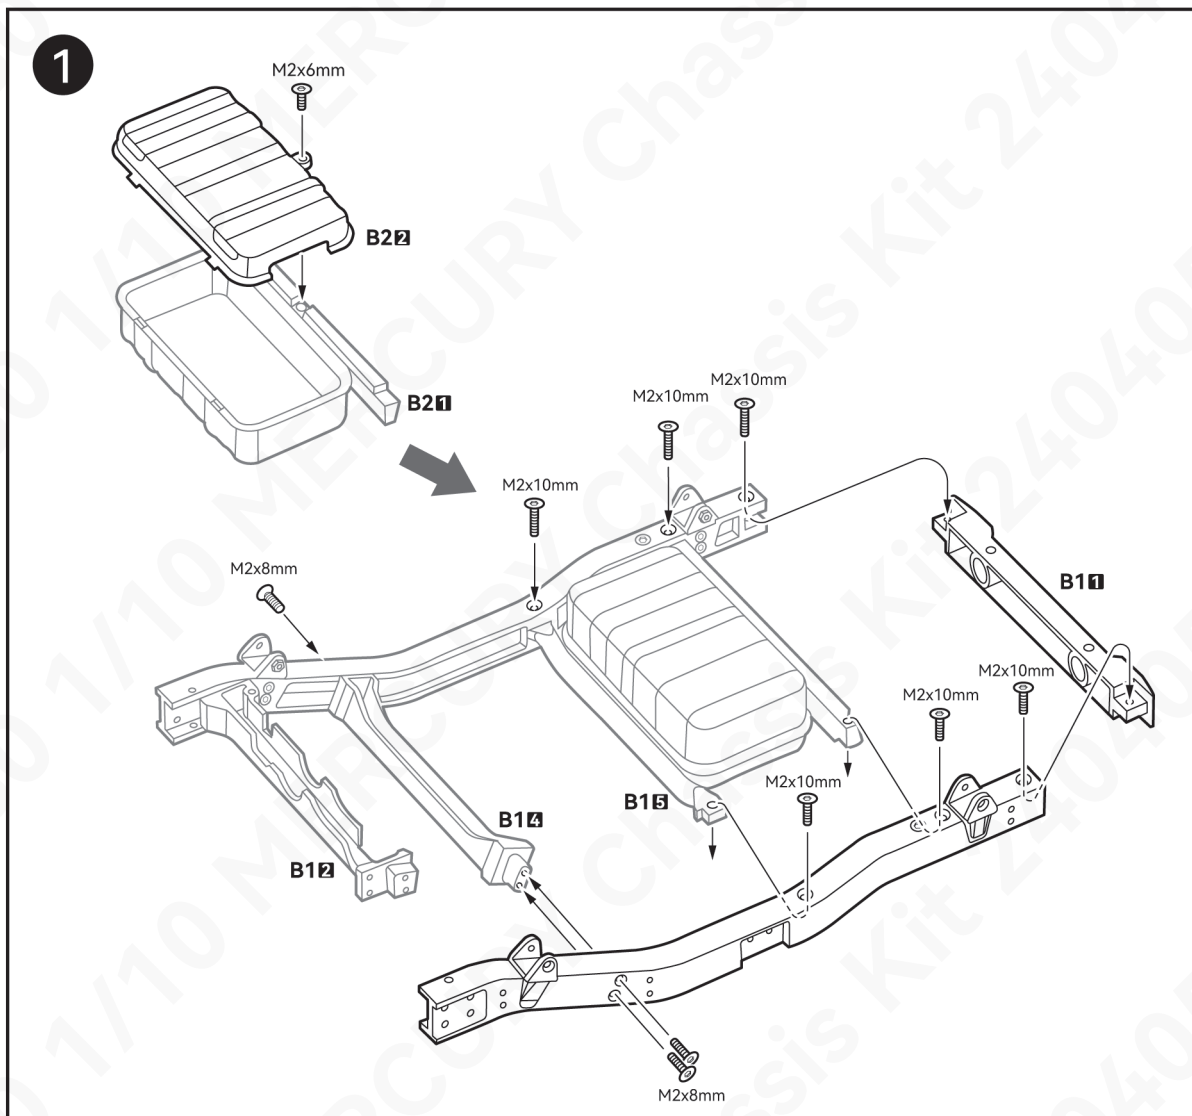




**C** **1** Open Bag C



M2x8mm X 2


**1**

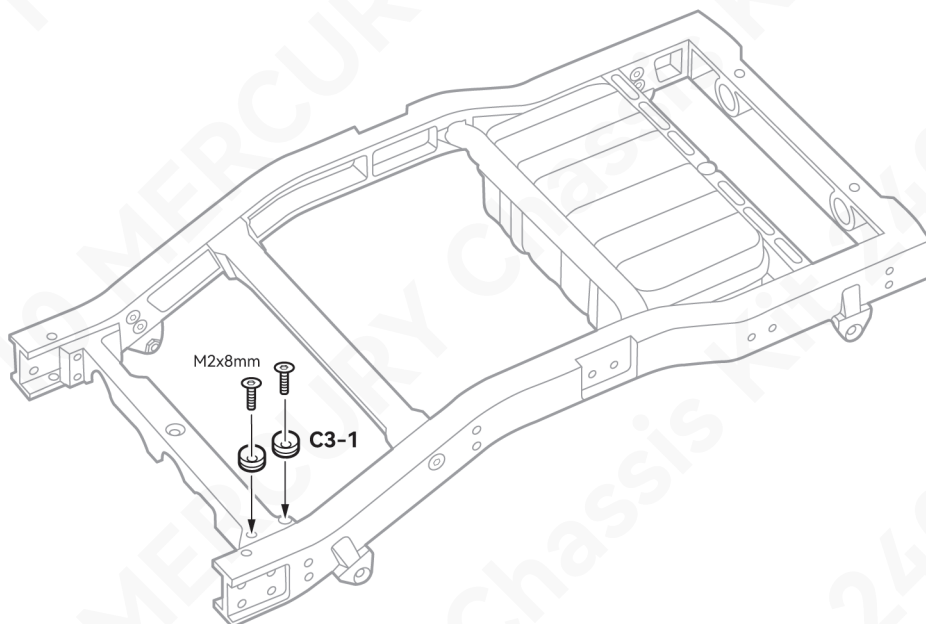 


**D** **1 ~ 14** Open Bag D

**1**

  
Assembly was completed before delivery for **1 3 4 5 6 7**, this step is shown for easy maintenance!  
Warm Prompt: **D4-1 12 13** part, Default without assembling, need to assemble

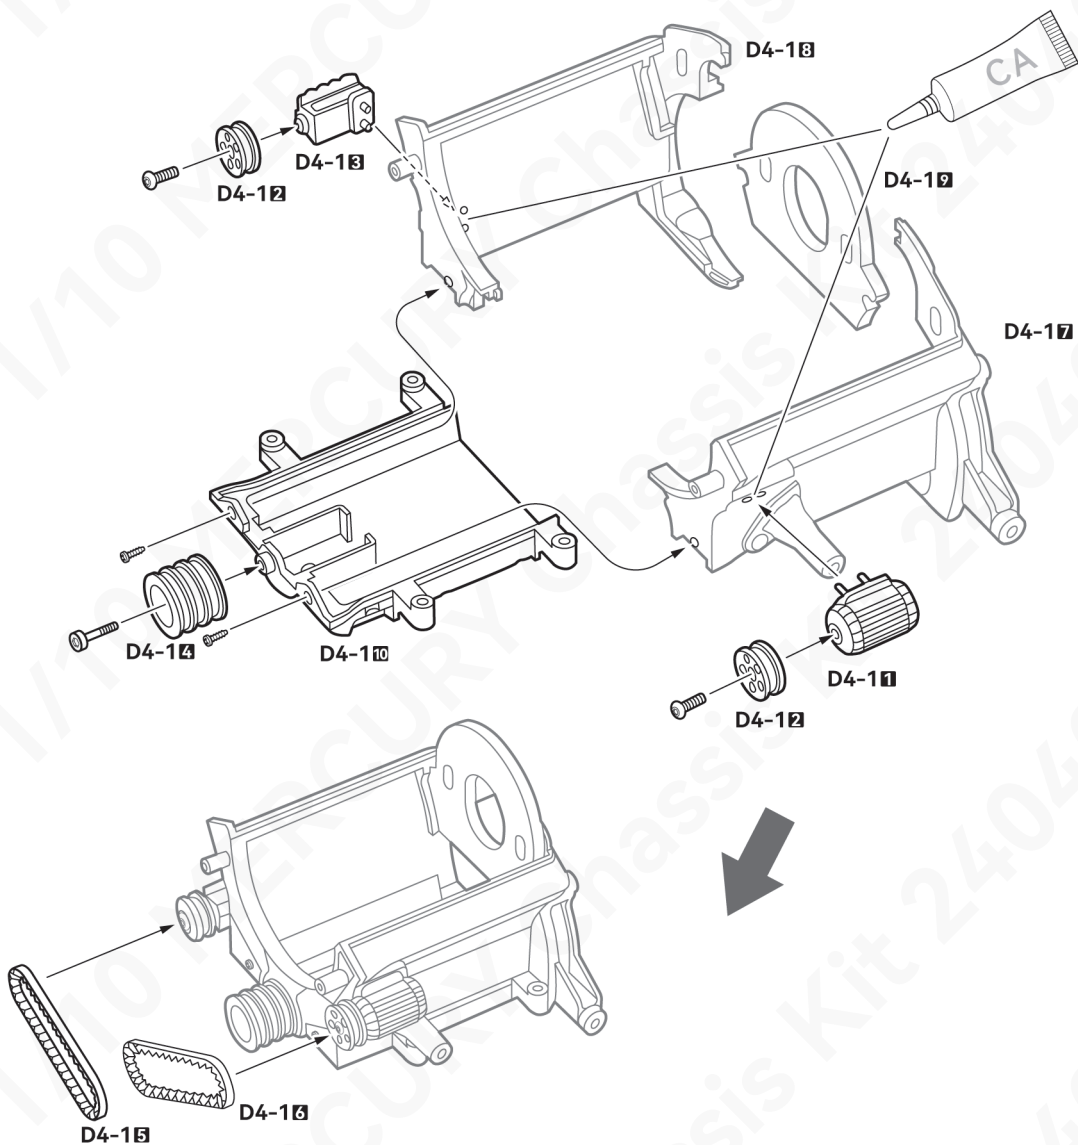



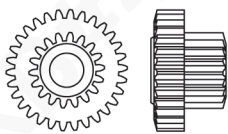

**D4-3 6**  
30T/18T Drive Gear x4

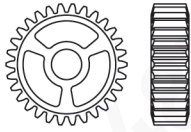 

**D4-3 5**  
30T Drive Gear x2



**D4-3 1**  
Bearing 4x7x2.5mm x4



 
**D4-2 12**  
E2 e-clip x2





**D4-3 2**  
Copper bushing 4x7x2mm x6



**D4-3 3**  
Plastic ring 4x5.5x5mm x2

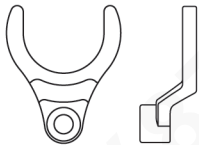

**D4-3 3**

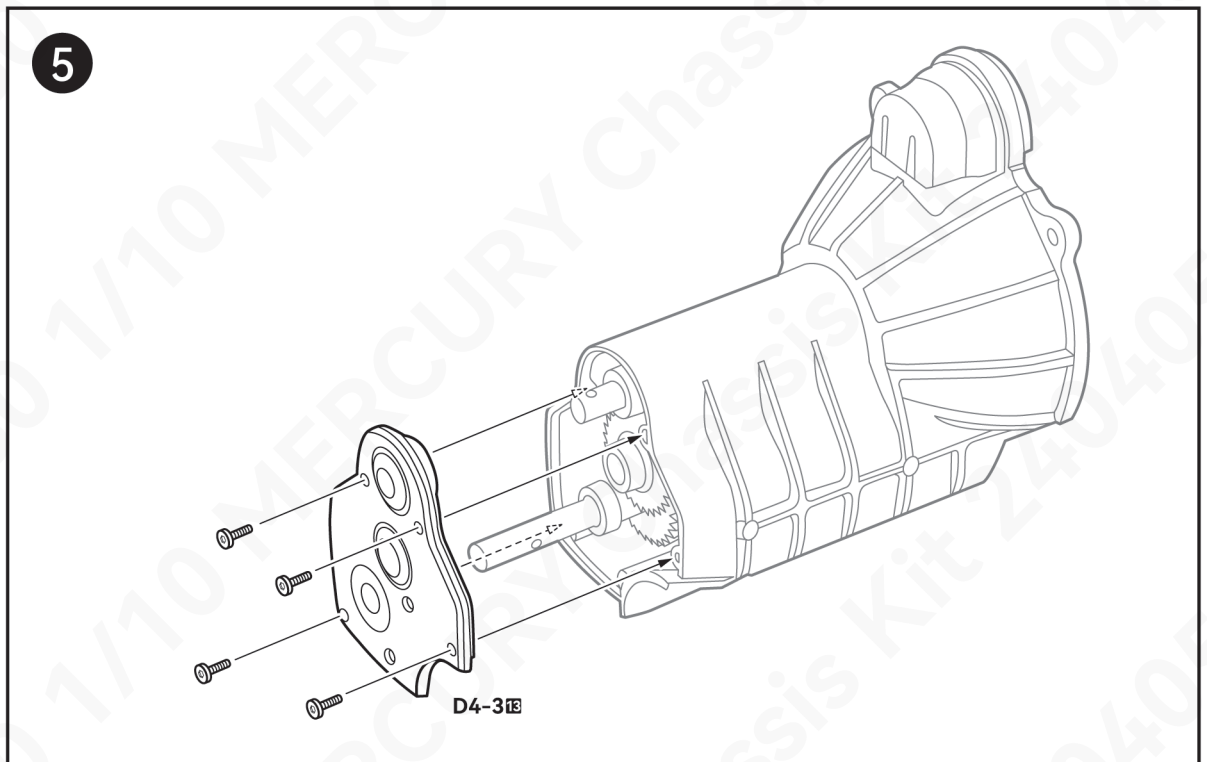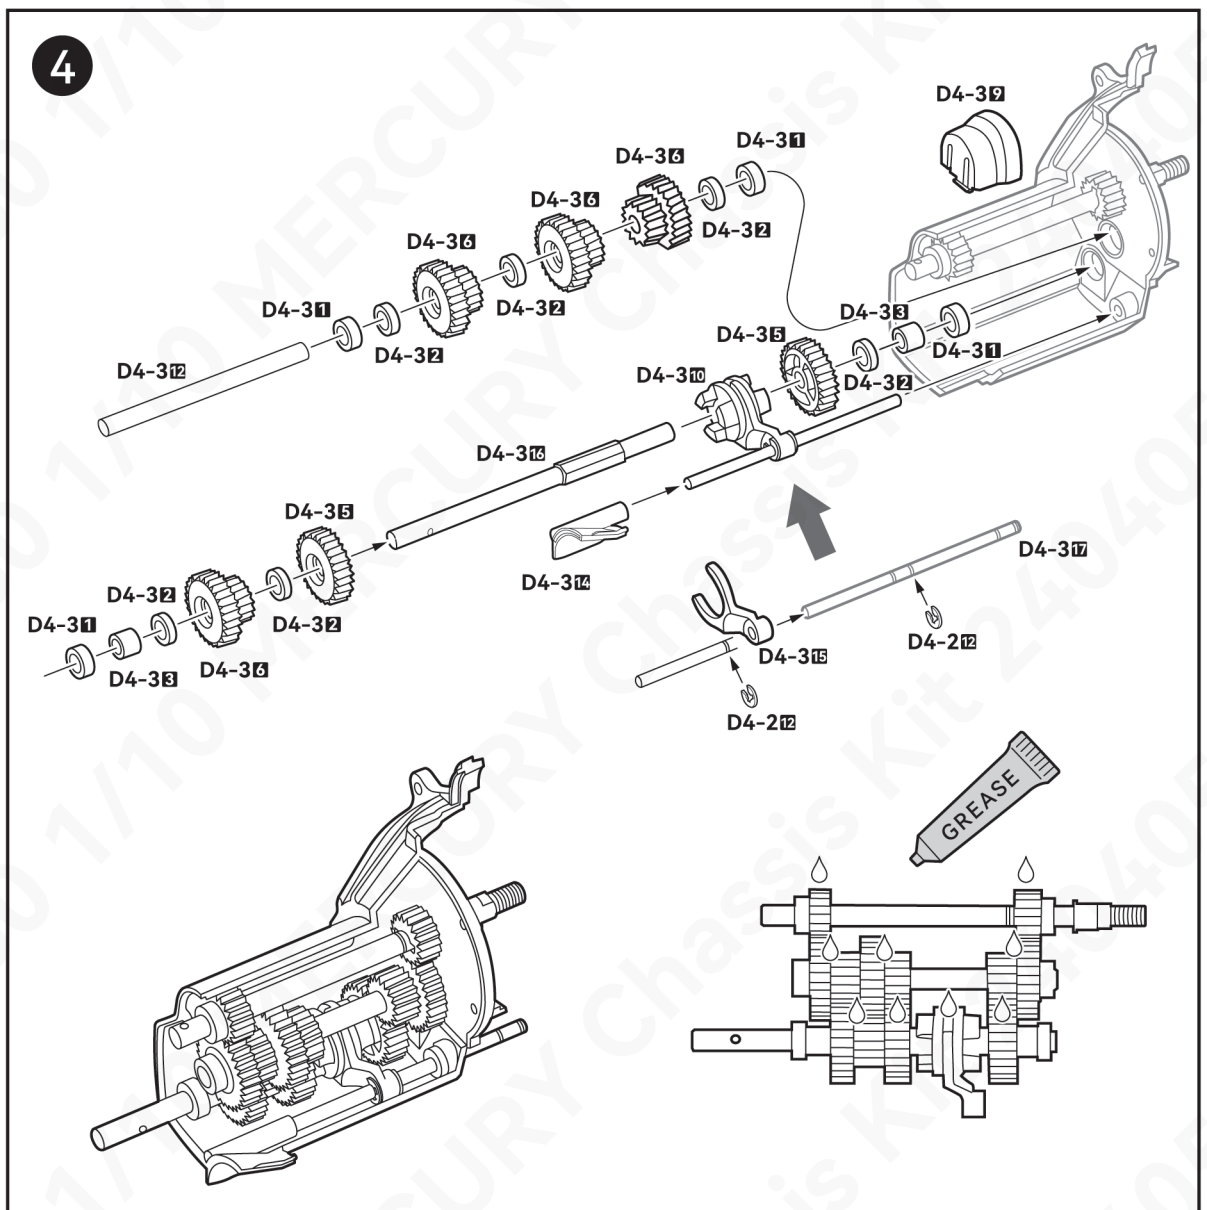  






**D4-3 1**  
Bearing 4x7x2.5mm x6



 
**D4-4 1**  
Pin 1.5x8mm



**D4-4 7**  
22T Drive Gear x2



 **D4-4 2**  
Shaft 15.5x4mm



**D4-4 8**  
25T Drive Gear x2



**D4-2 7**  
E3.5 e-clip x2



**D4-2 12**  
E2 e-clip x2



 
**D4-3 2**  
Copper bushing 4x7x2mm x2



**D4-4 8 x2**  
Drive gear shaft 4x21mm



**D4-4 4**  
Axle 2.5x25mm

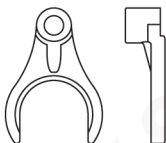



**D4-4 9**




**D4-4 10**

  6

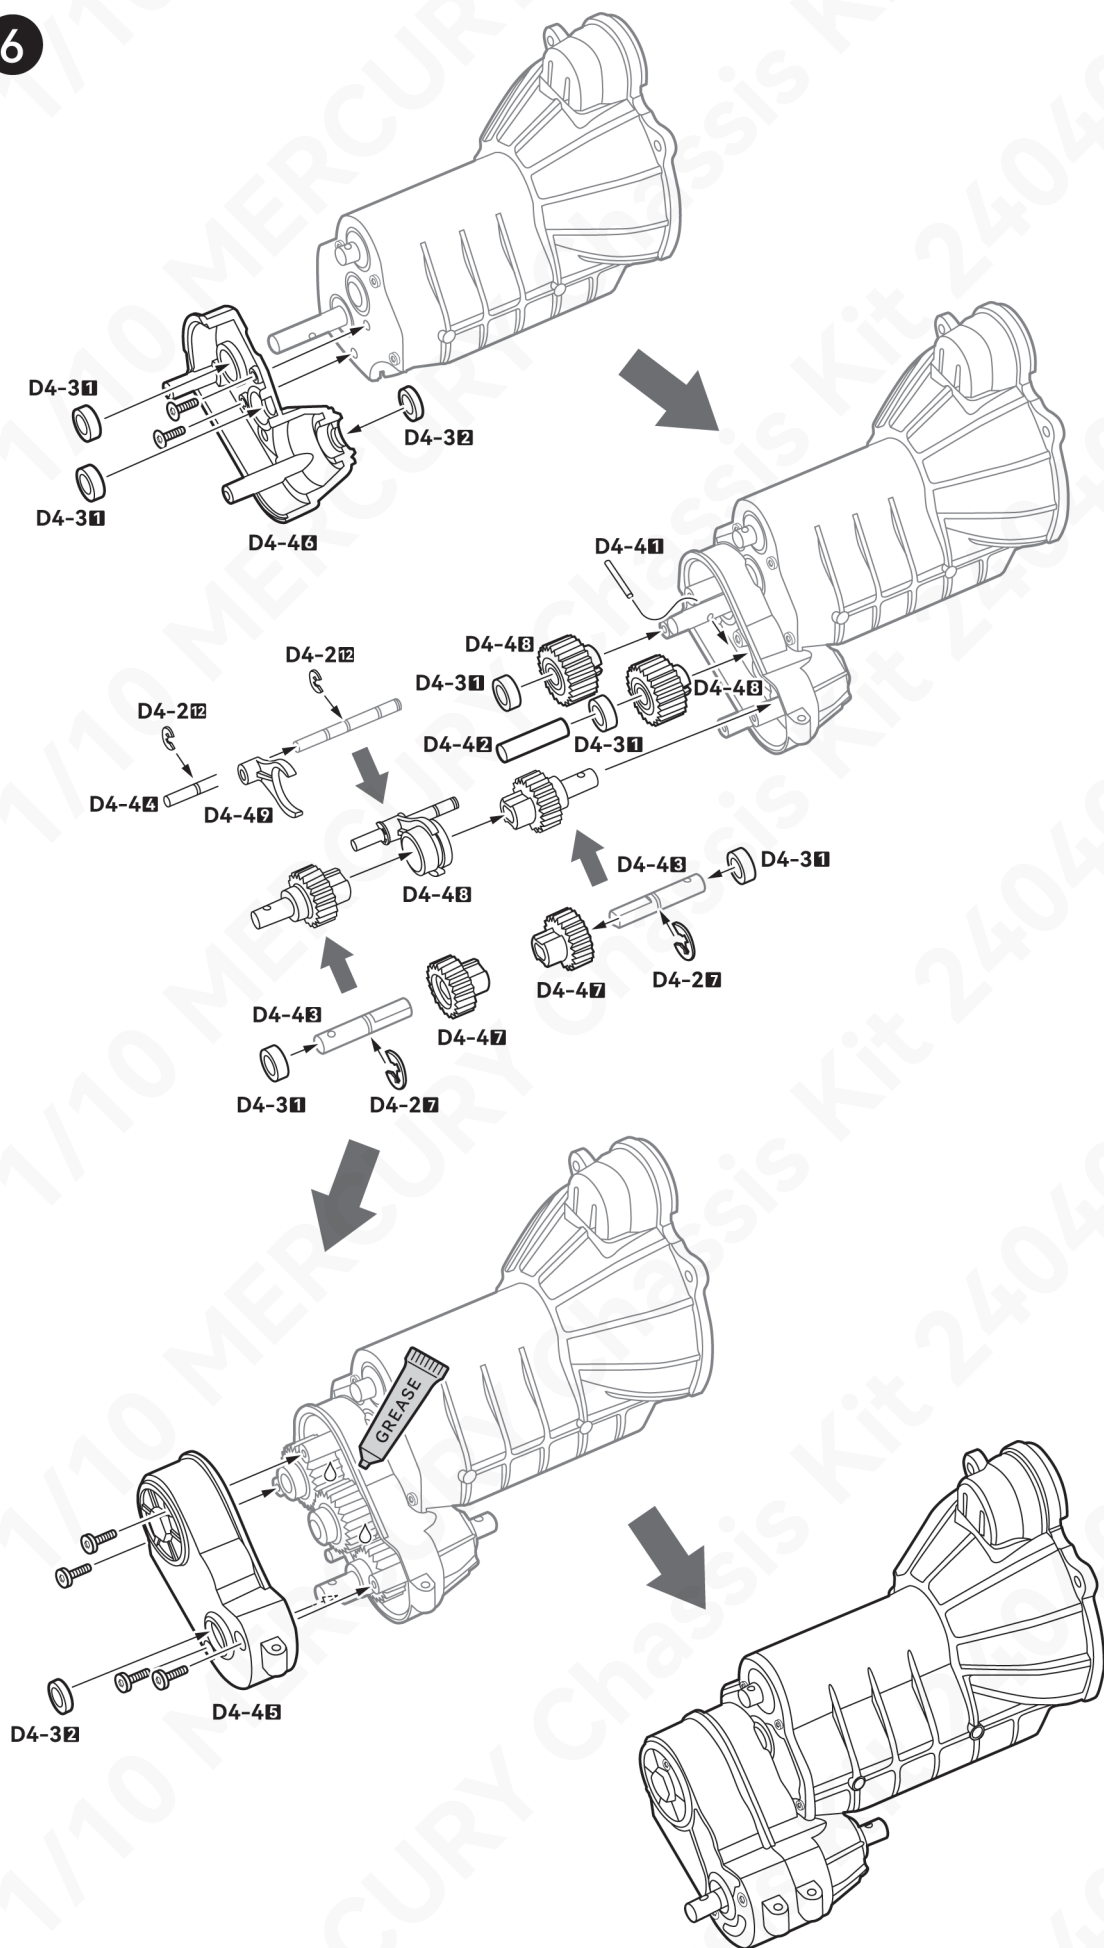

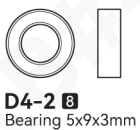


7

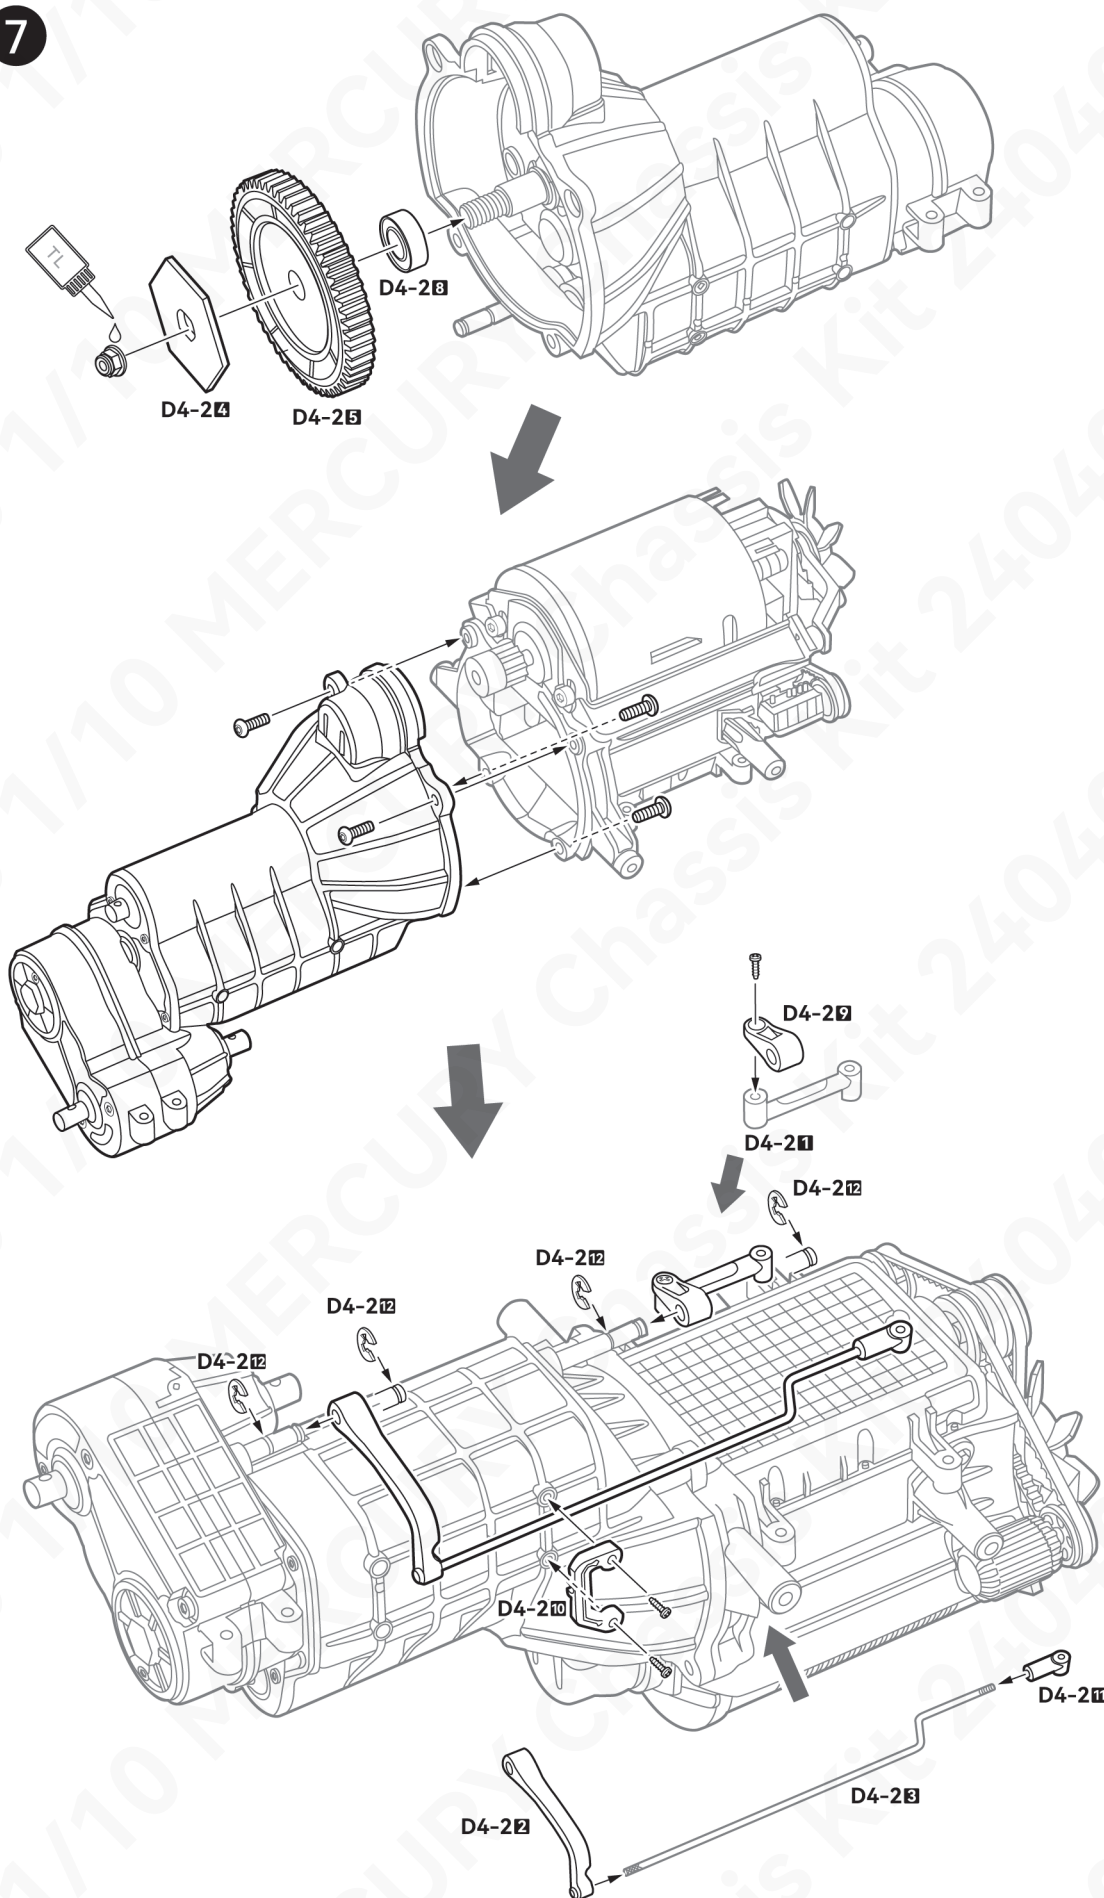 

8

 The servo accessories need to select a suitable one from H1 H2 H3.

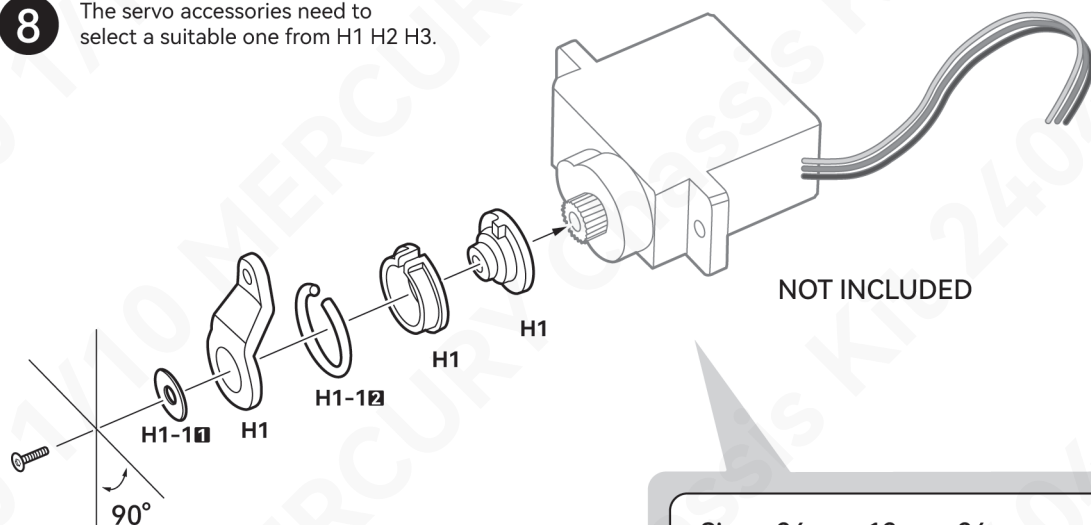

Install when servo is in neutral position.



M2x6mm X 4

 


M1.6x6mm X 2



 
G3-1  
M2 half thread x1


 
9

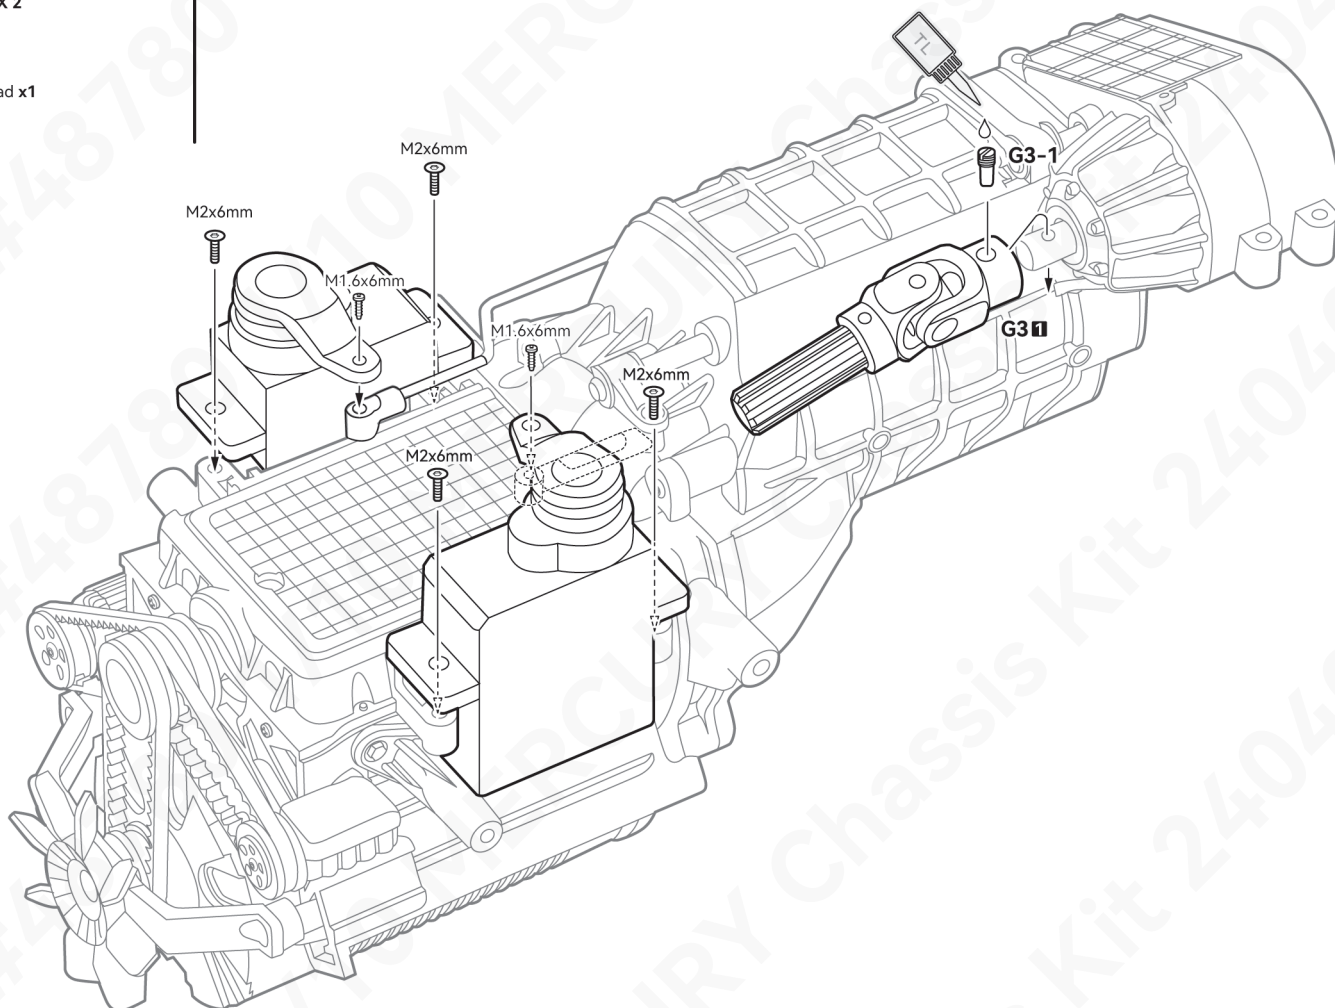




- 10** Assembly was completed before delivery for **D31****D34**, this step is shown for easy maintenance!  
The cylinder cover is fixed with motor screws.

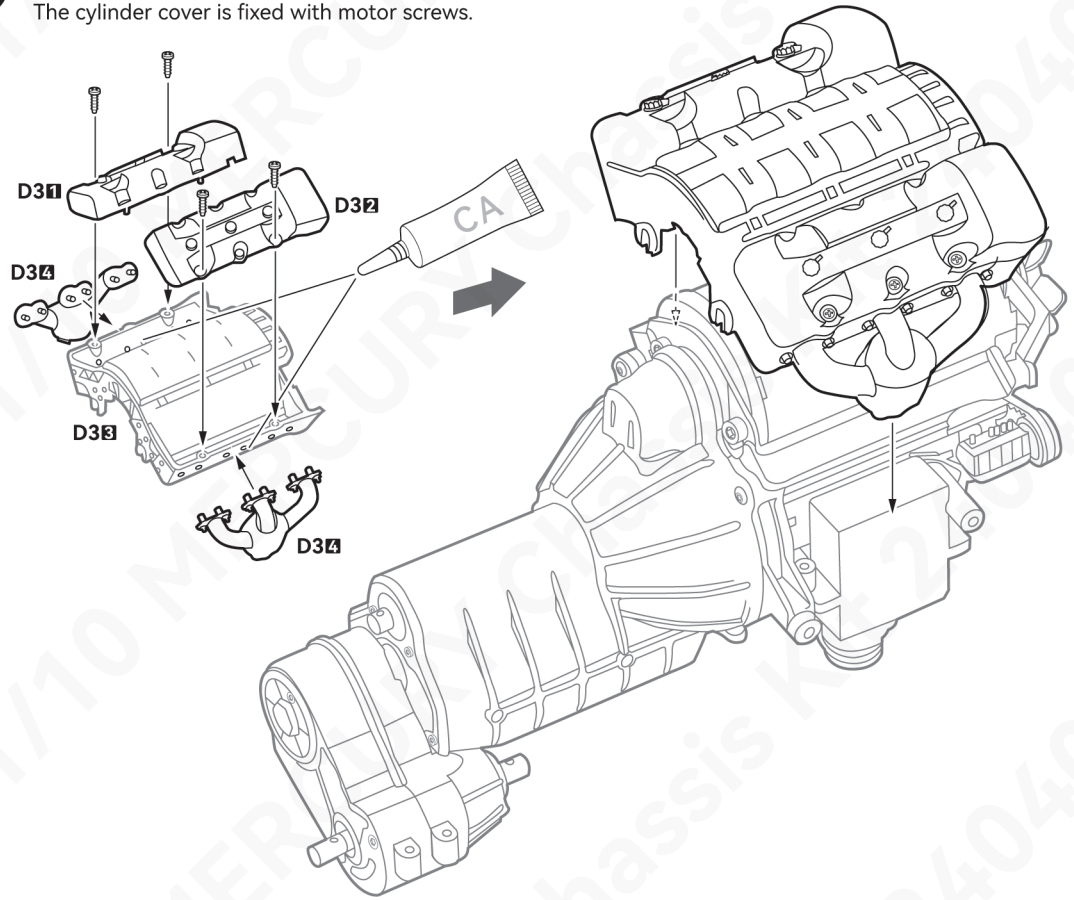

  
M2x8mm X 5  
  
**G3-1**  
M2 half thread x1

**11**

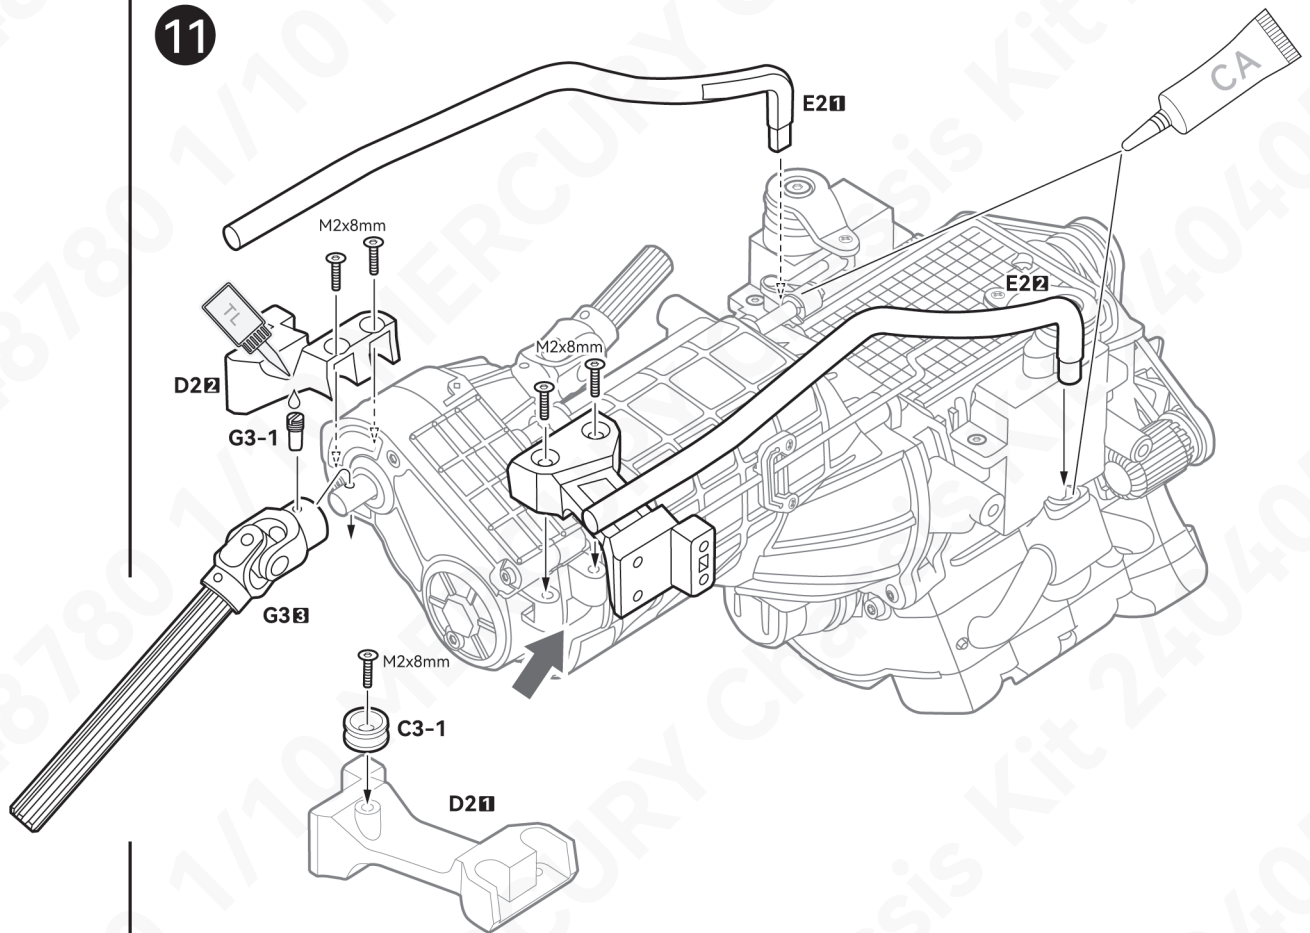 




M2.5x10mm X 4



M2x8mm X 8

 12

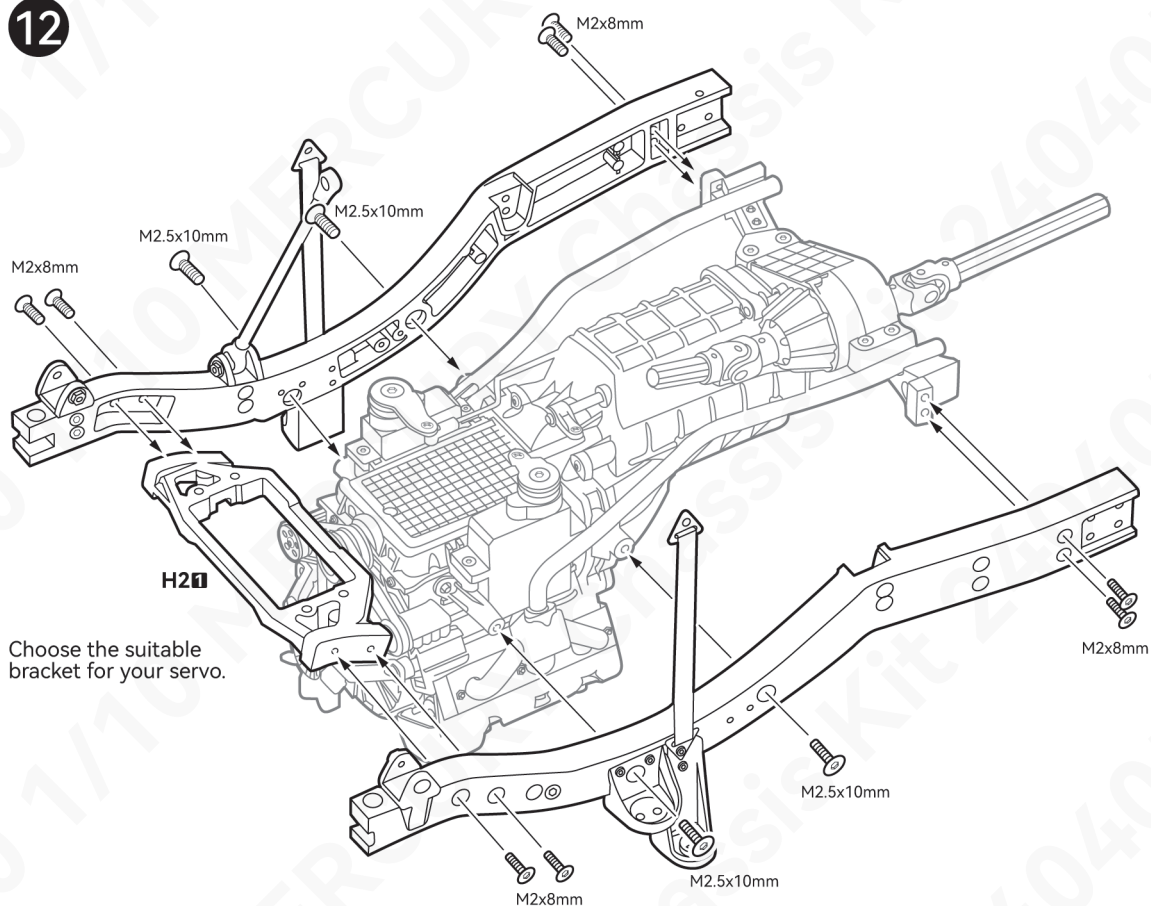


M2x10mm X 2




M2x12mm X 2

 13

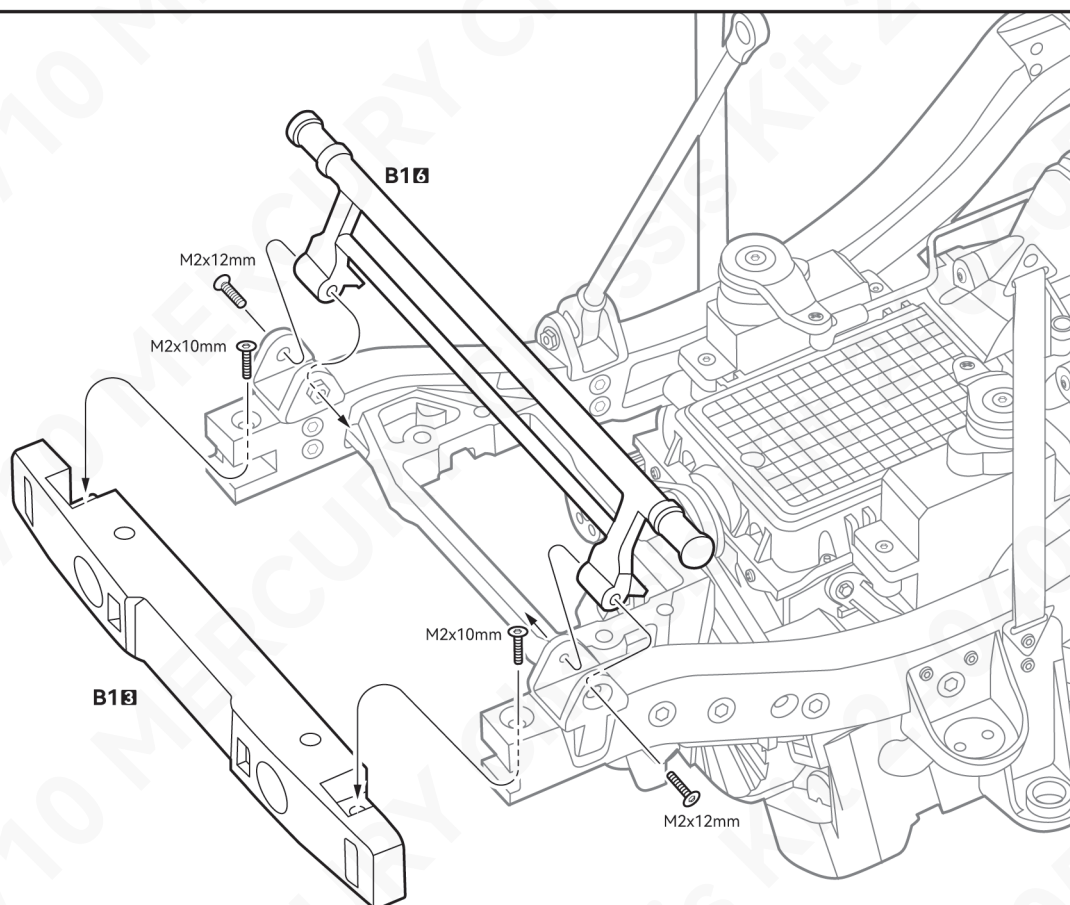

14

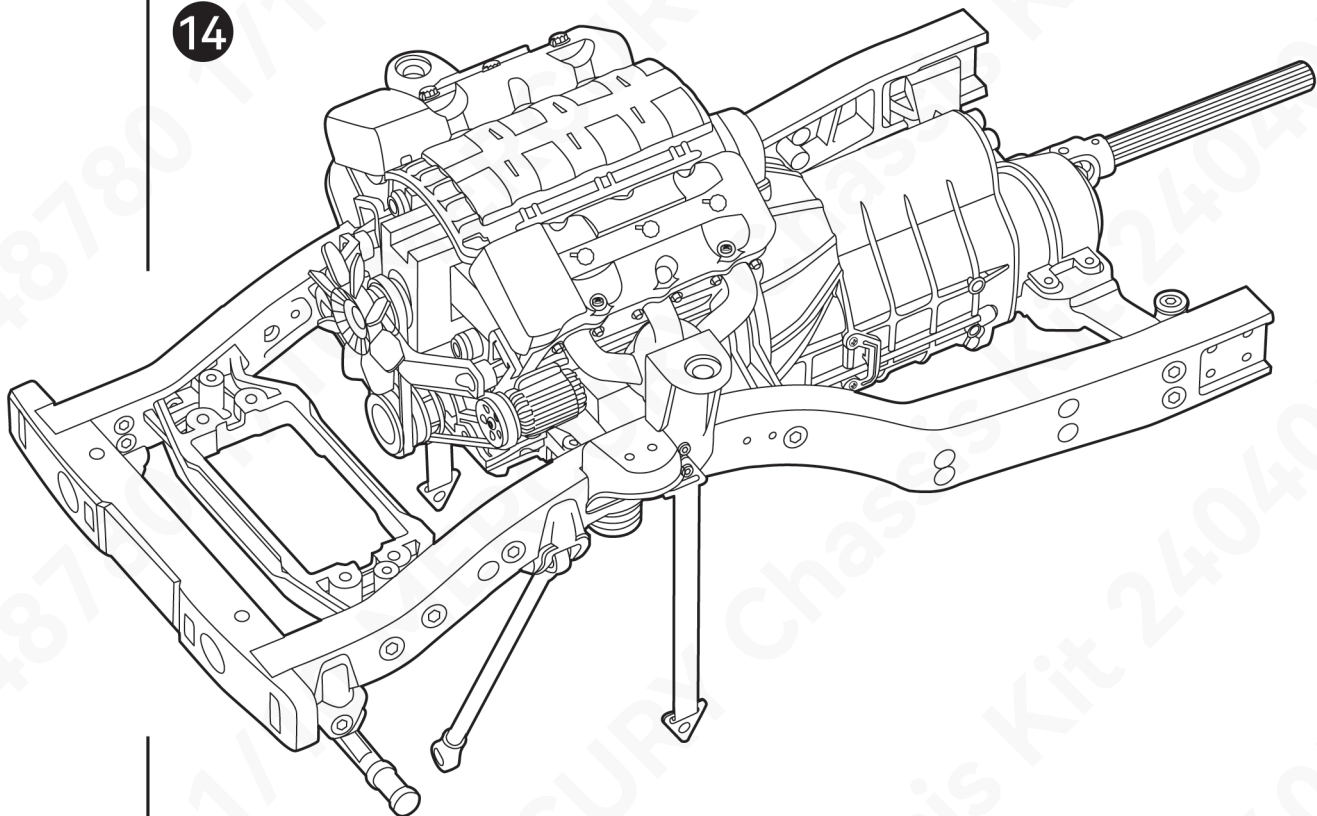 

F

1 ~ 6

Open Bag F



F3 12  
Bearing 4x7x2mm



F3 18  
Bearing 8x12x3.5mm x2



F3 20 x2



F3 21  
20T Bevel Gear X2



F3 22  
15T Bevel Gear X2



 
F3 23  
Shaft 2x16mm



F3 24  
15T Bevel Gear


1

Assembly was completed before delivery for 1 2 3 4 5 6, this step is shown for easy maintenance!

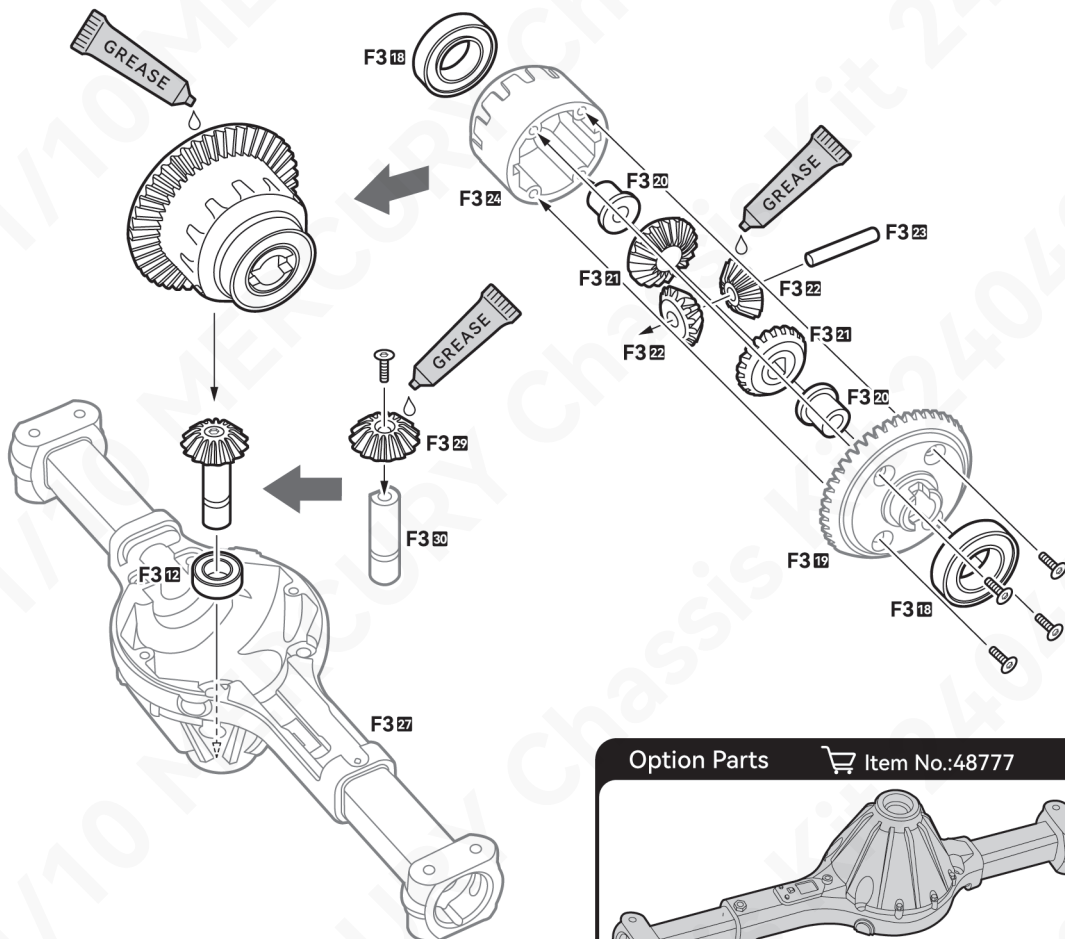

Option Parts

 
Item No.:48777

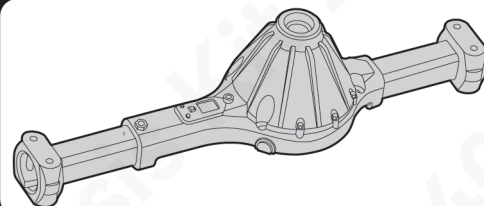






**F3 12**  
Bearing 4x7x2mm x2

 

**F3 15**

 

**F3 16**



**F3 13**  
Spring 15x6mm



**F3 14**  
Washer 4x6mm

 


**F3 10**  
Pin 1.5x6mm





**F3 17**


**2**

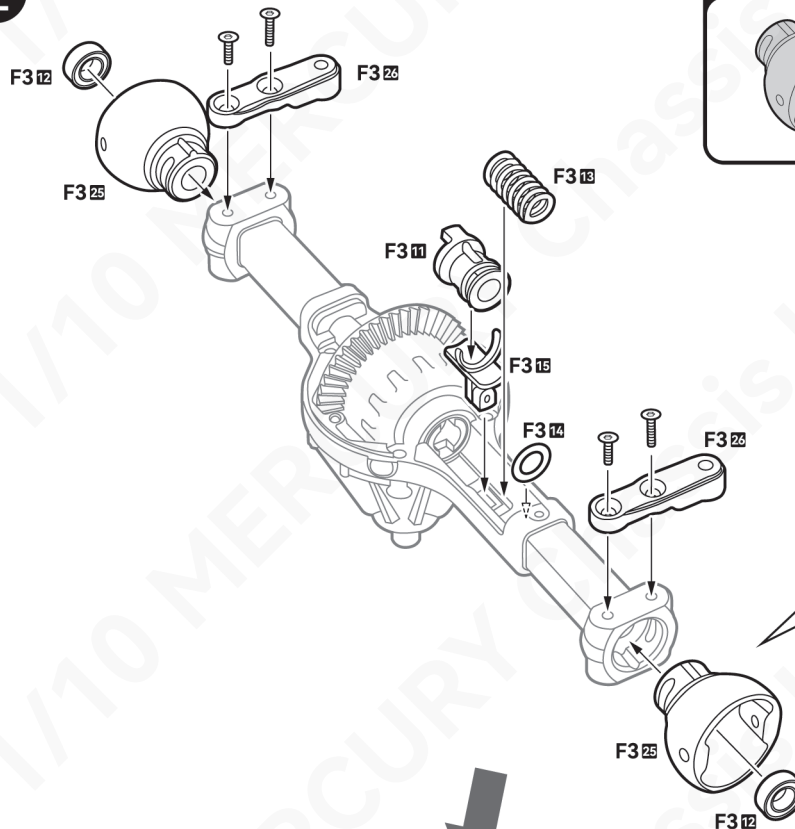

Option Parts Item No.:48809

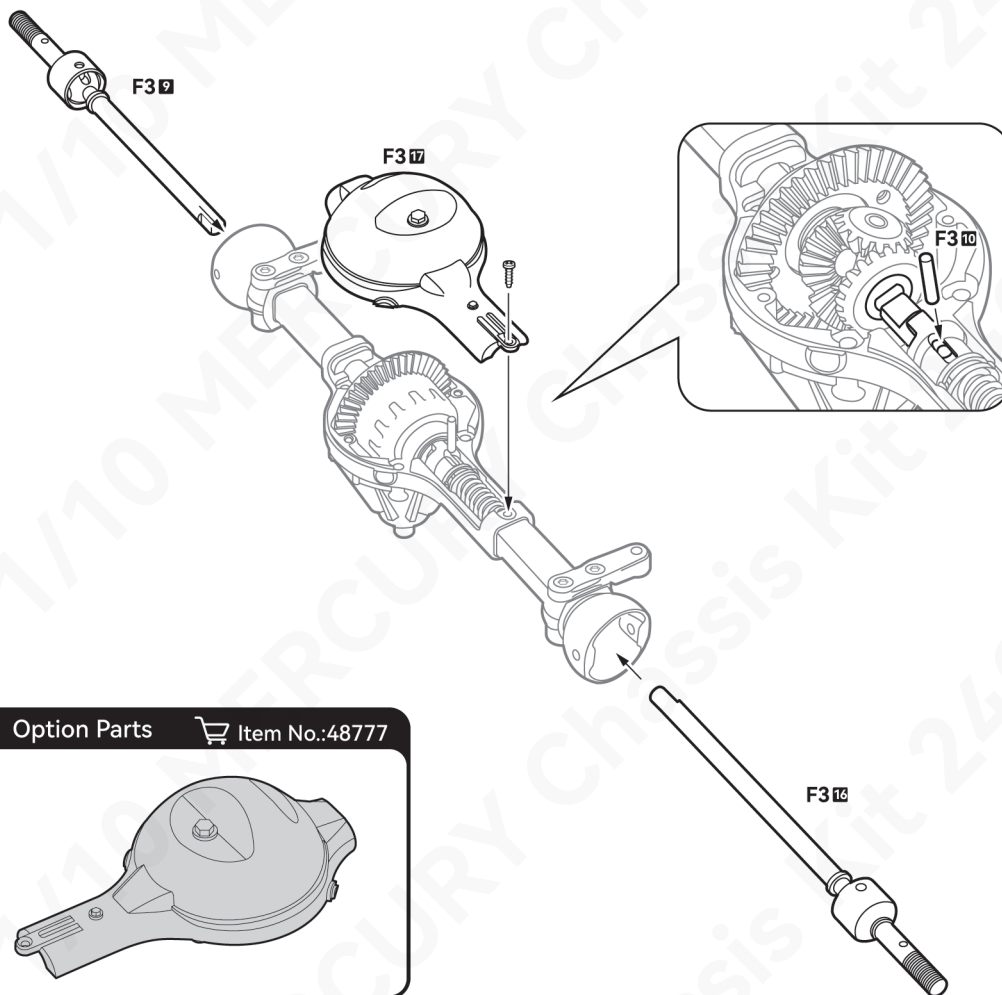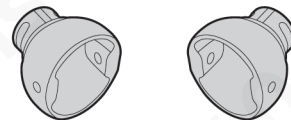  

Option Parts Item No.:48777

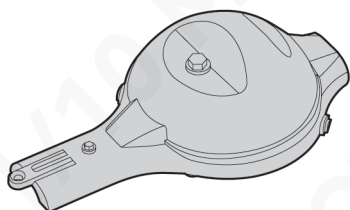 



**F3 5**  
Copper bushing 4x7x1.5mm x2



**F3 8**  
Copper bushing 2.5x4.5x4mm x4




**F3 12**  
Bearing 4x7x2mm x3




**F3 28**



 
**F3 3**  
Pin 1.5x9mm x2

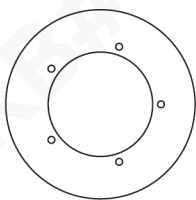

**F3 1** x2

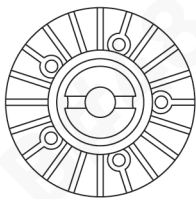 

**F3 2** x2


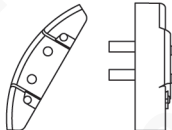 





**F2 2** x2

**3**

   
 
 
Option Parts

Item No.:48809

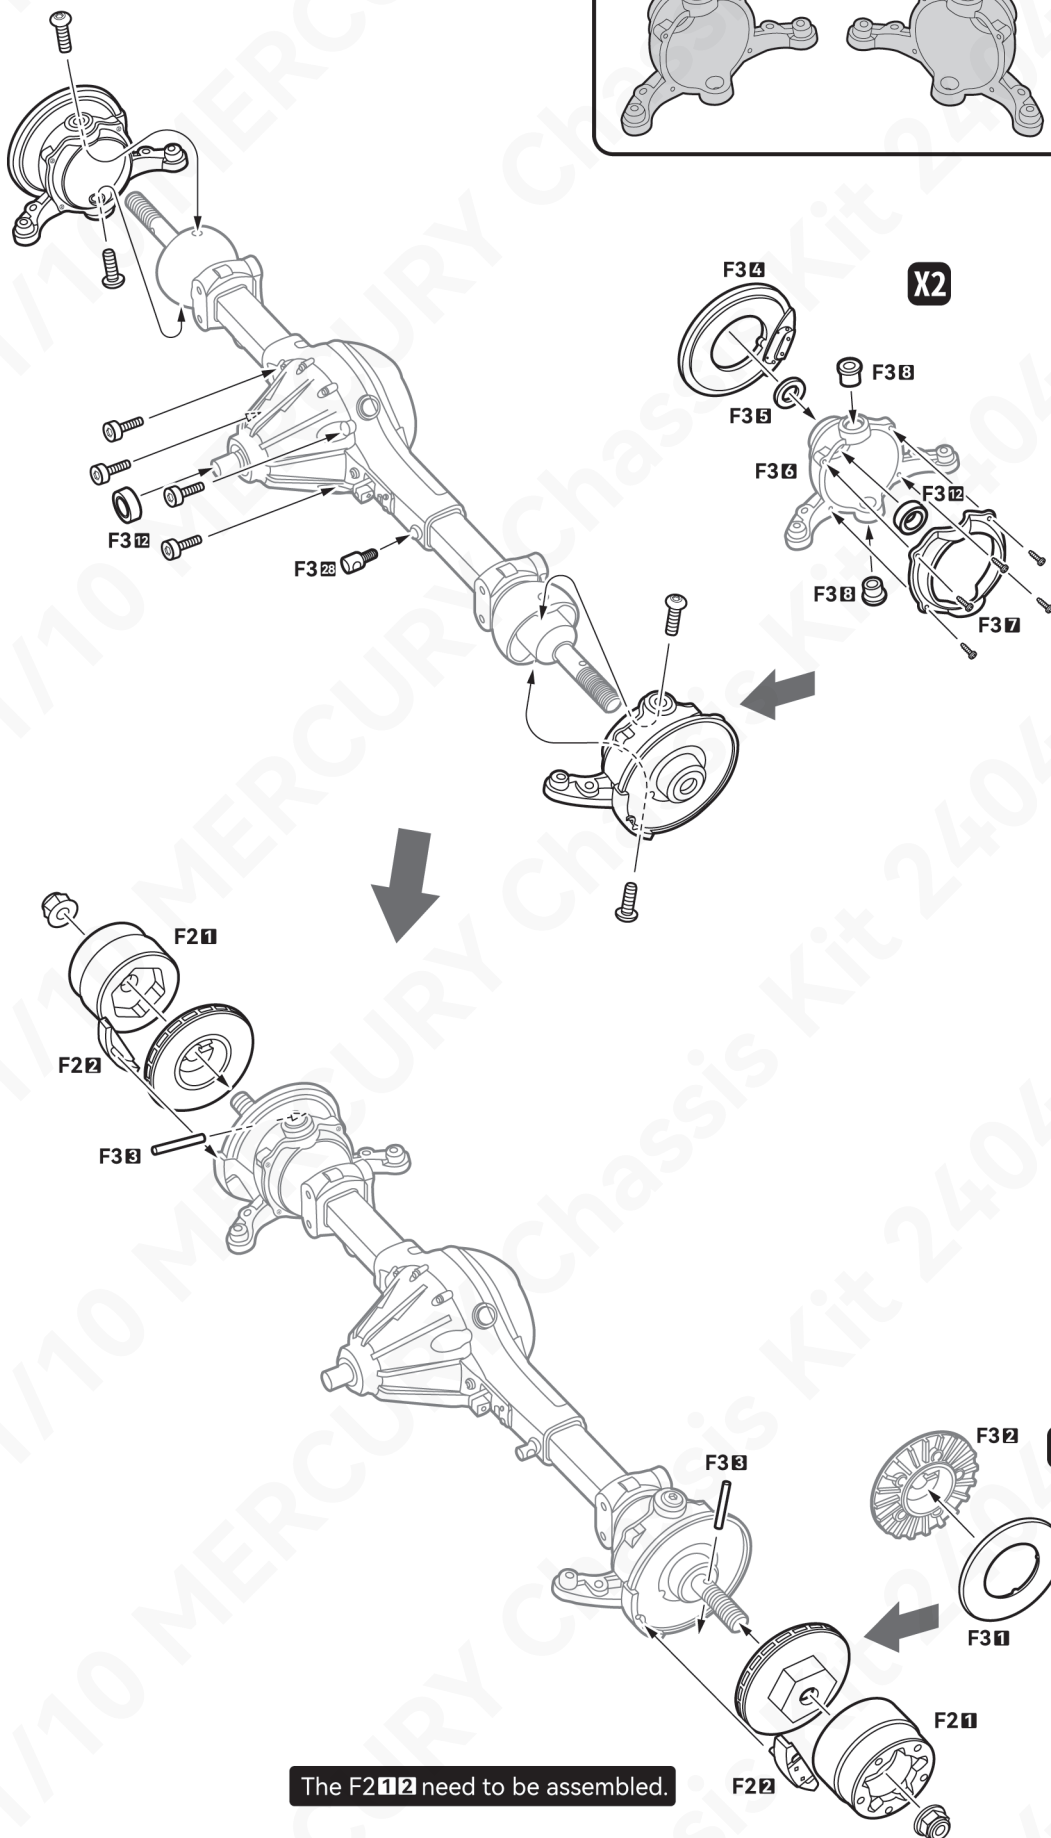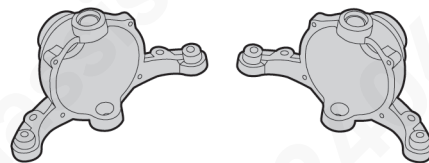


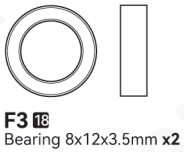

**4**

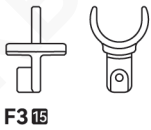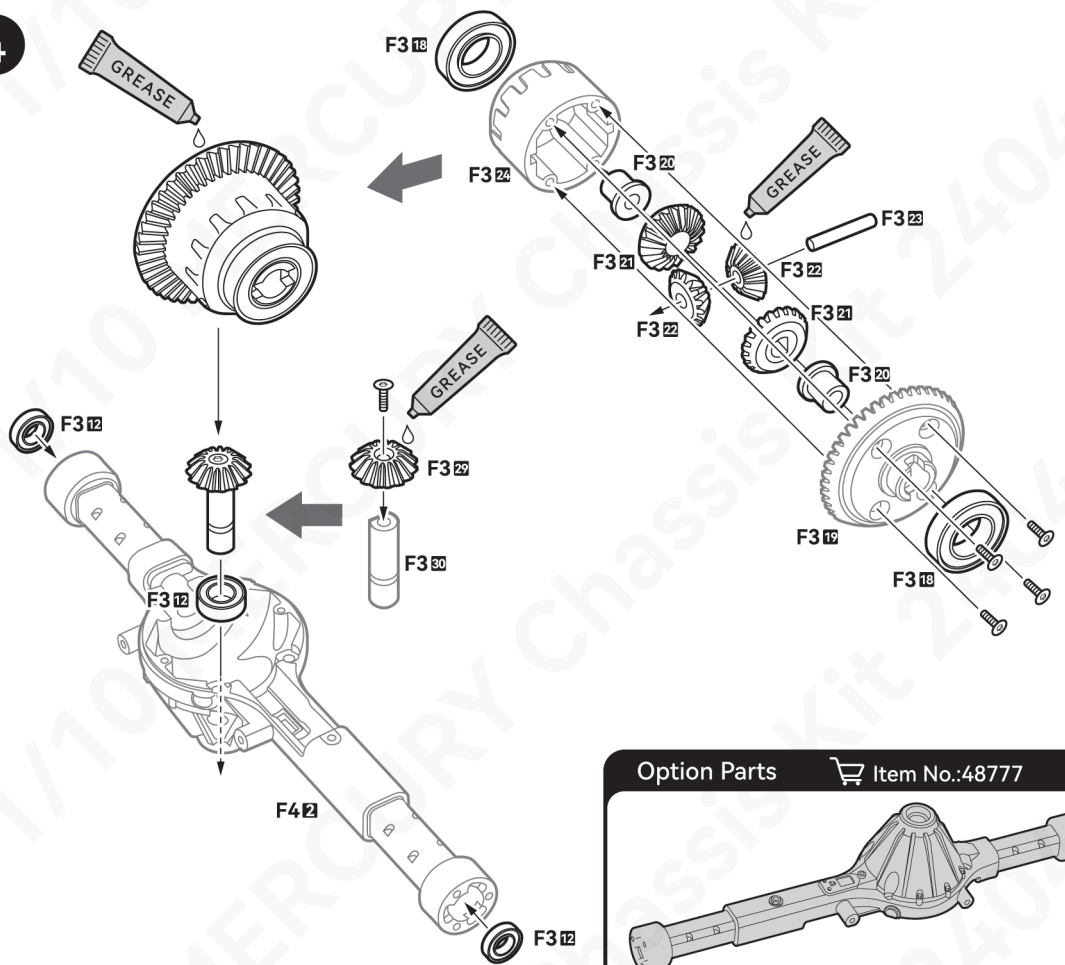   

**5**

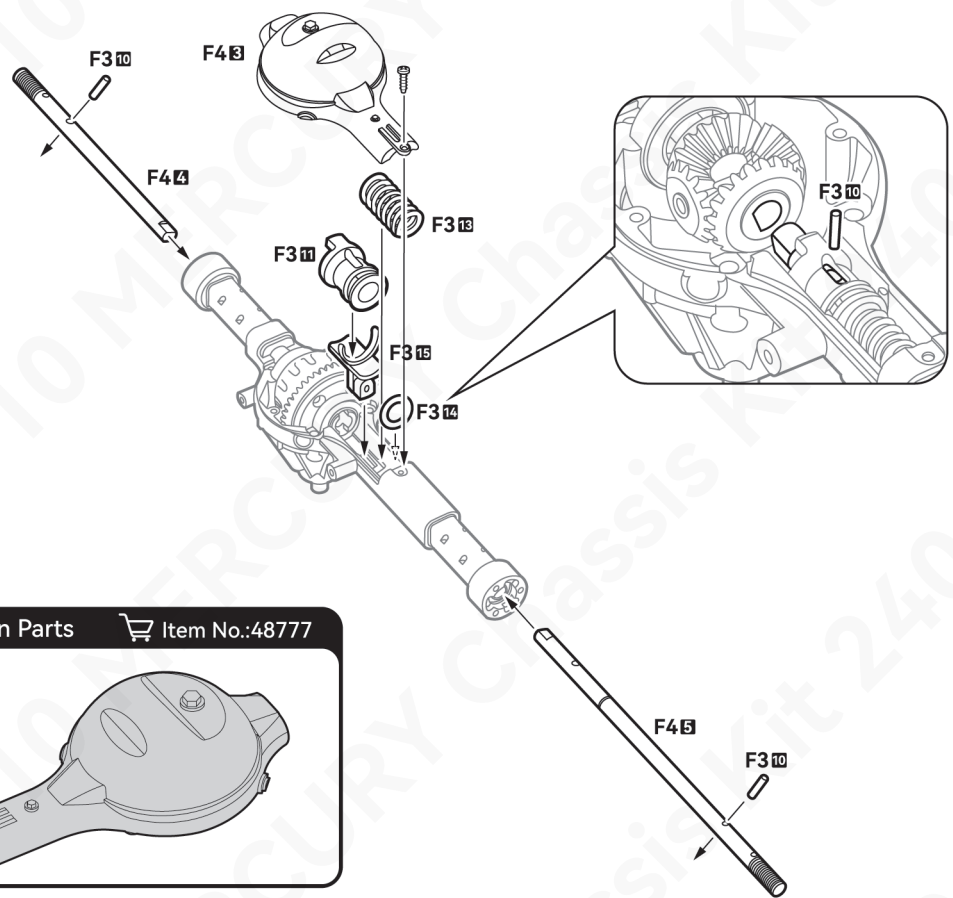 






**F3 12**  
Bearing 4x7x2mm x1


**6**

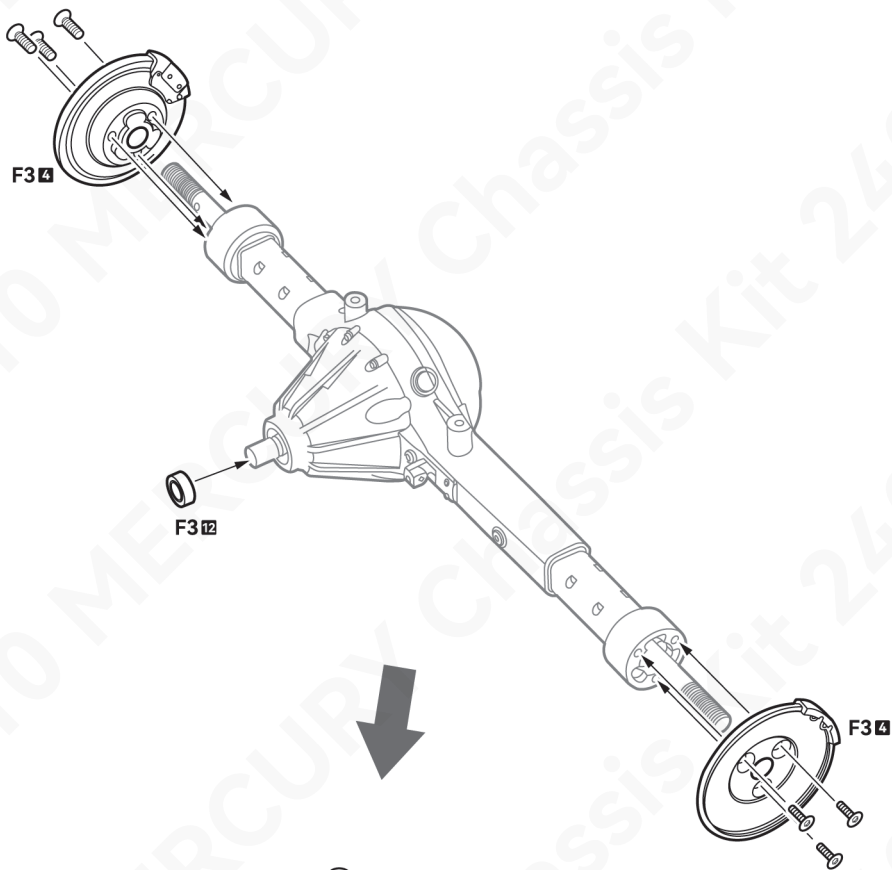 


**F3 28**

**F3 3**

 
Pin 1.5x9mm x2

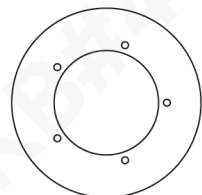


**F3 1 x2**

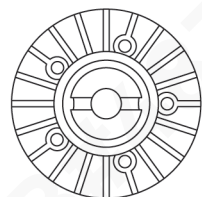 

**F3 2 x2**

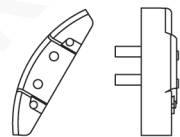 

**F2 2 x2**

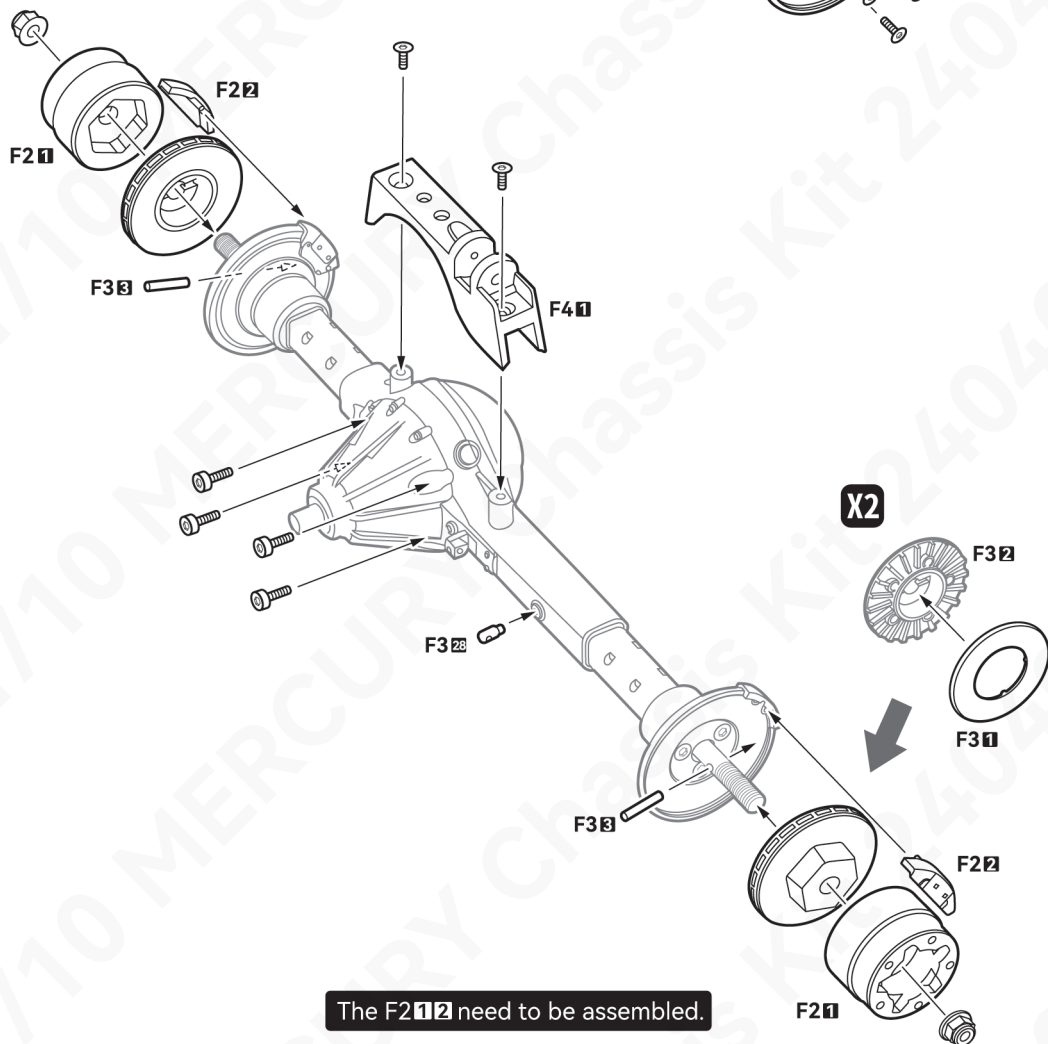 


The F2 1 2 need to be assembled.



M2x8mm X 2

 1

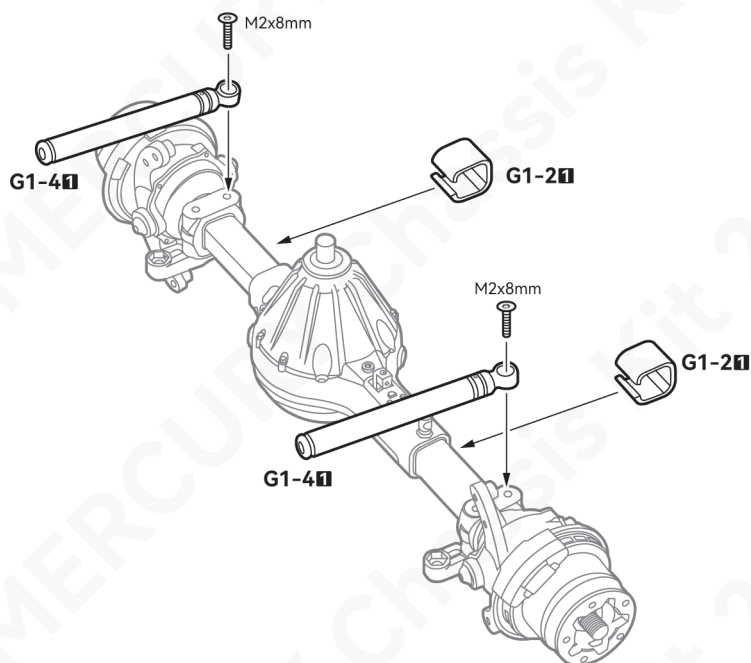


M1.6x6mm X 4



M2x6mm X 4



 O rings X 4



M2x12mm X 4



M2mm X 2



**G1 2 x2**



 
**G1-22**  
Base x2




**G1-2 4 x2**

2

Assembly was completed before delivery for **G1-2246**, this step is shown for easy maintenance!  
Warm Prompt: If you choose the tyres larger than original, you can use the accessory **G1-26**.

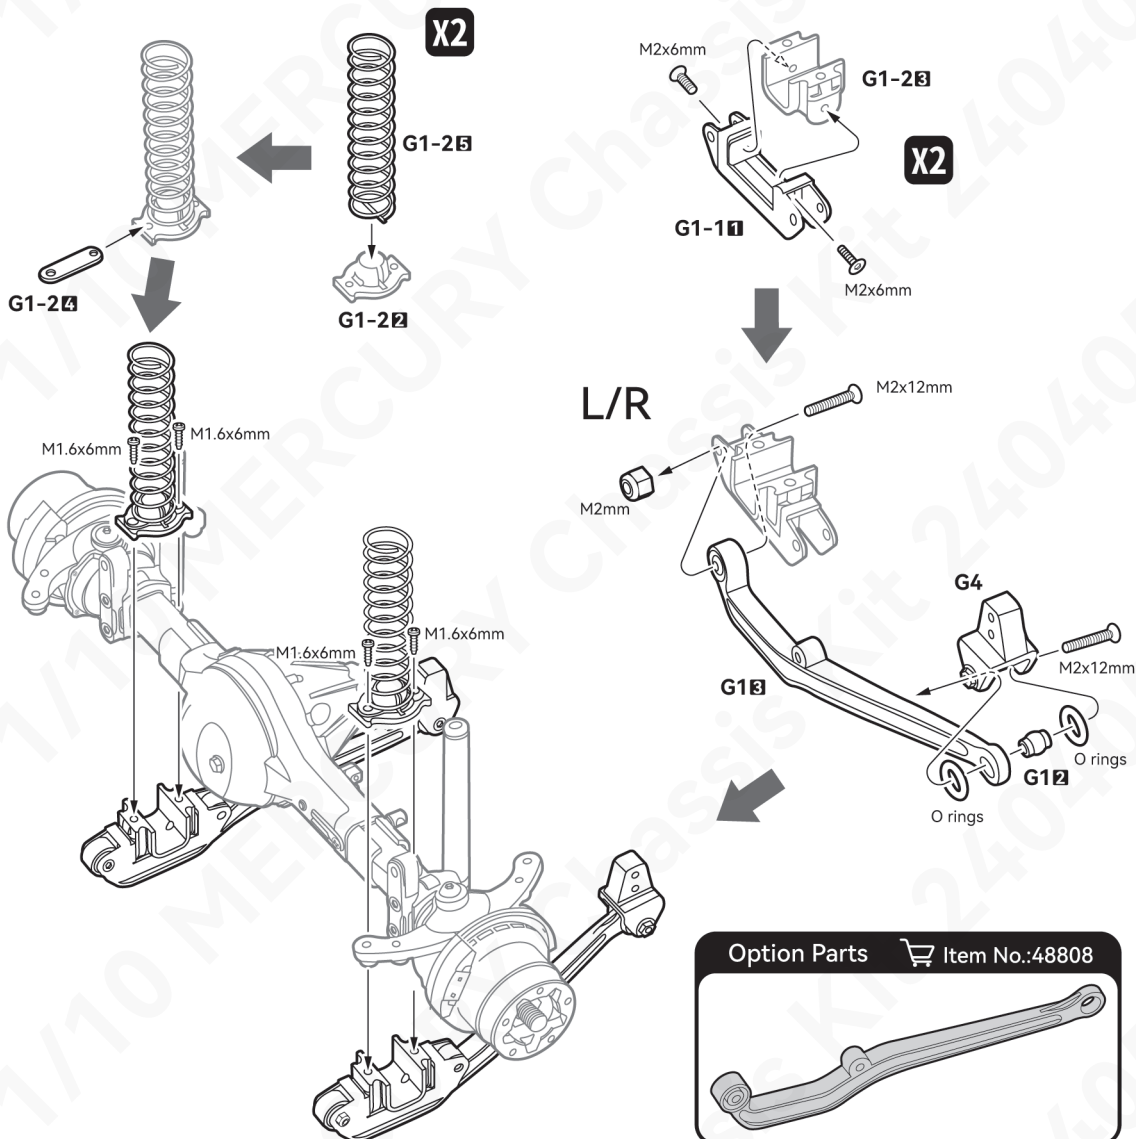


Option Parts  Item No.:48808

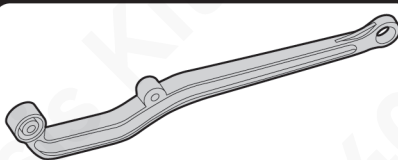 


- M2x10mm X 3
- G3-1  
M2 half thread x1
- G1 2 x4

3

 Assembly was completed before delivery for G12 G51245, this step is shown for easy maintenance!

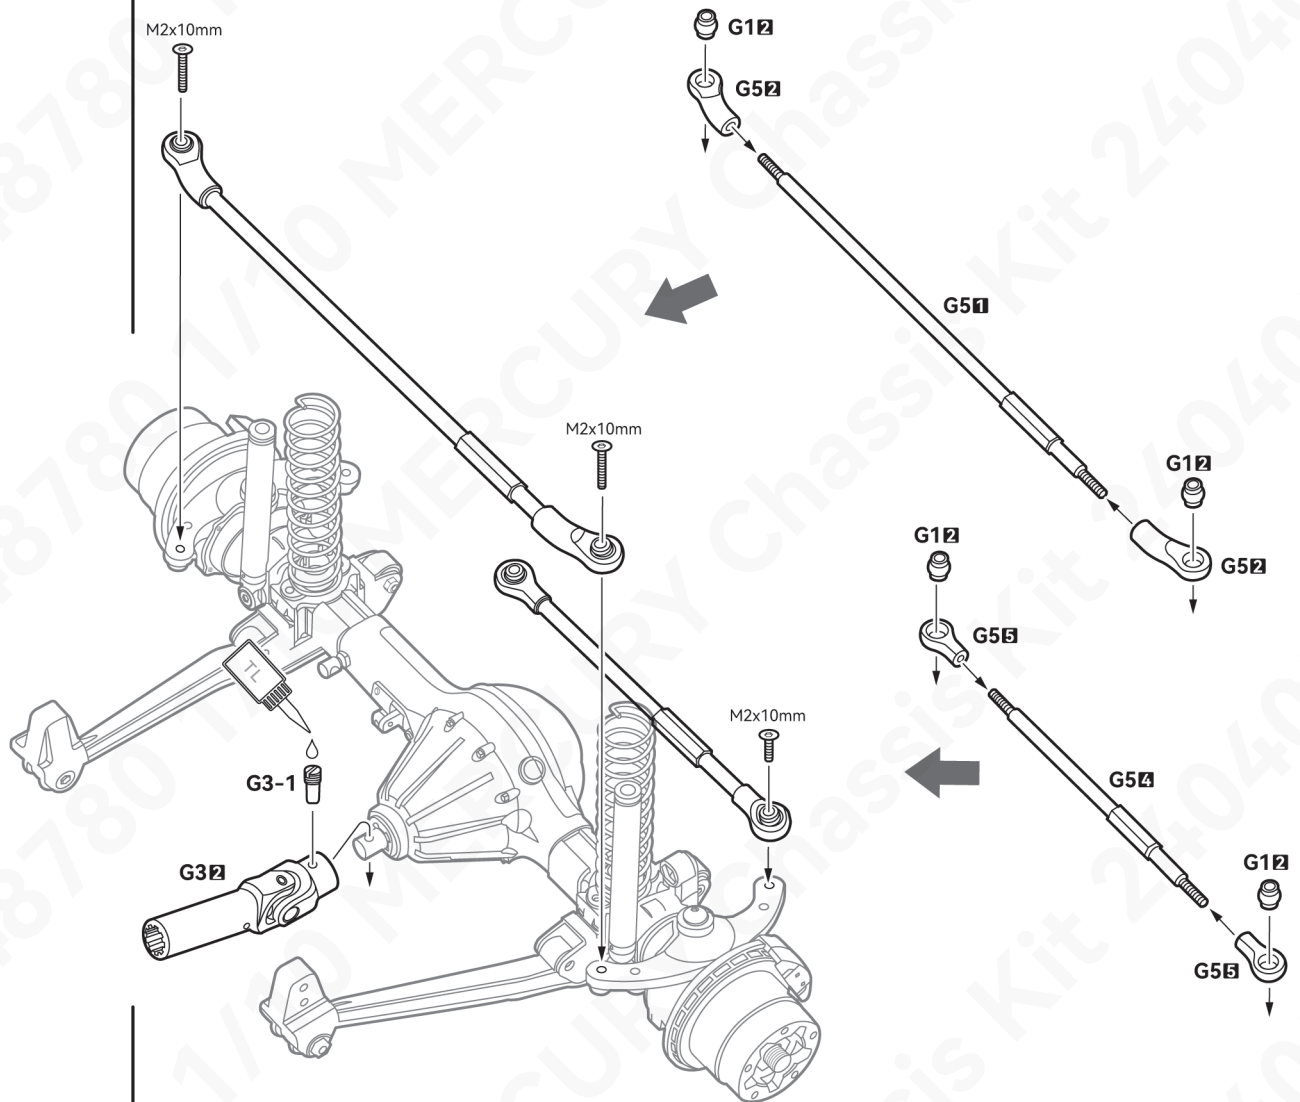


4

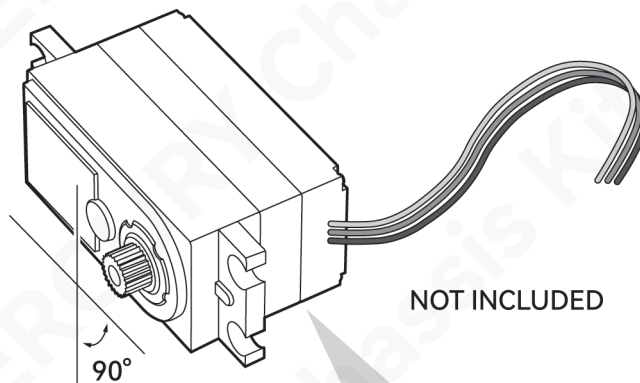 




Install when servo  
is in neutral position.

 Size: 35mmx16mm  
40mmx20mm  
Torque: 5kg /12kg  
(Compatible with standard servo)

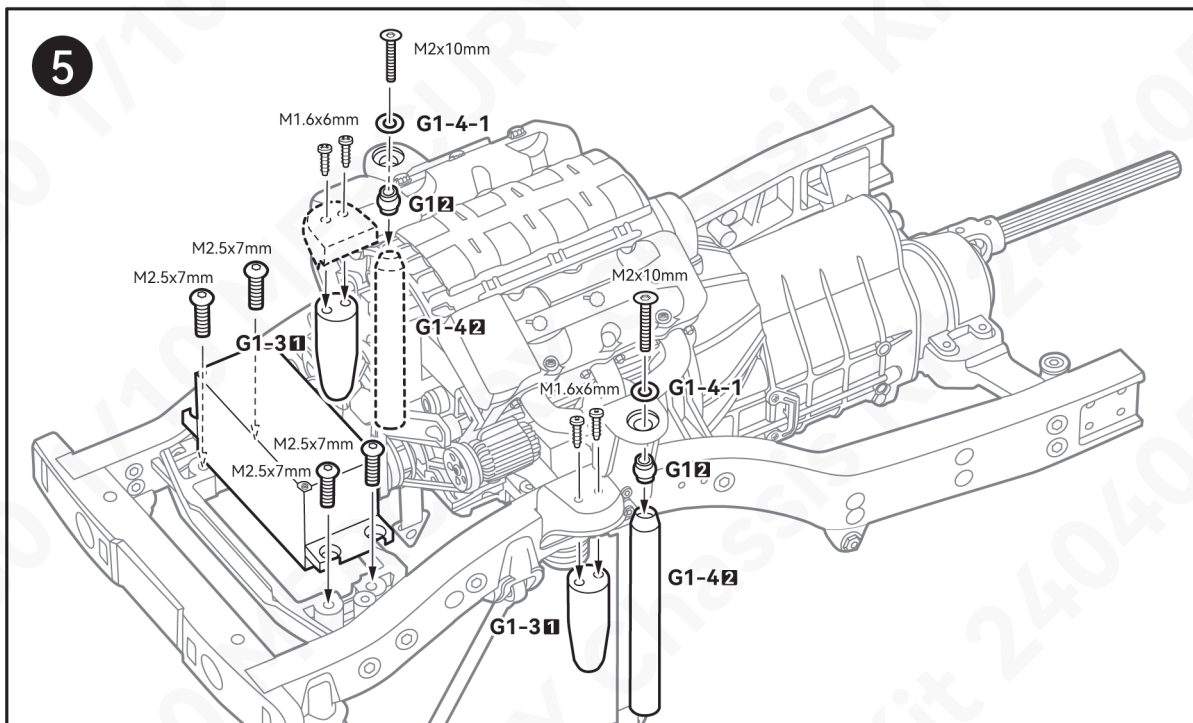

 -  M1.6x6mm X 4
-  M2x10mm X 2
-  G1-3 x2




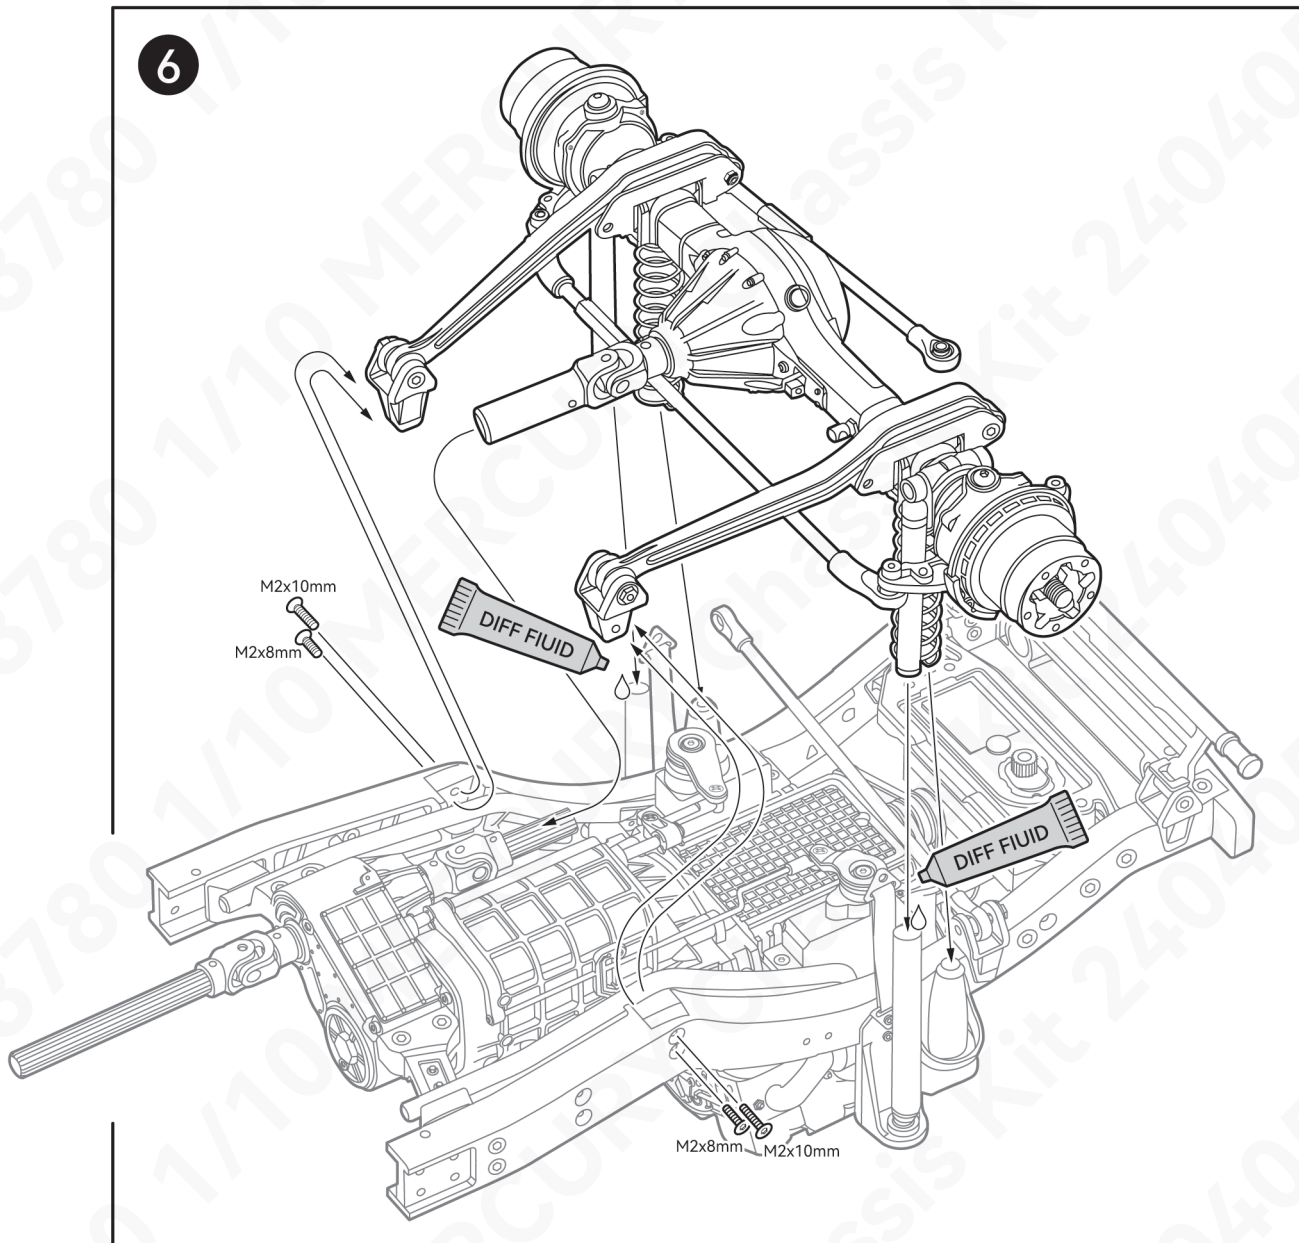

-  M2x8mm X 2
-  M2x10mm X 2



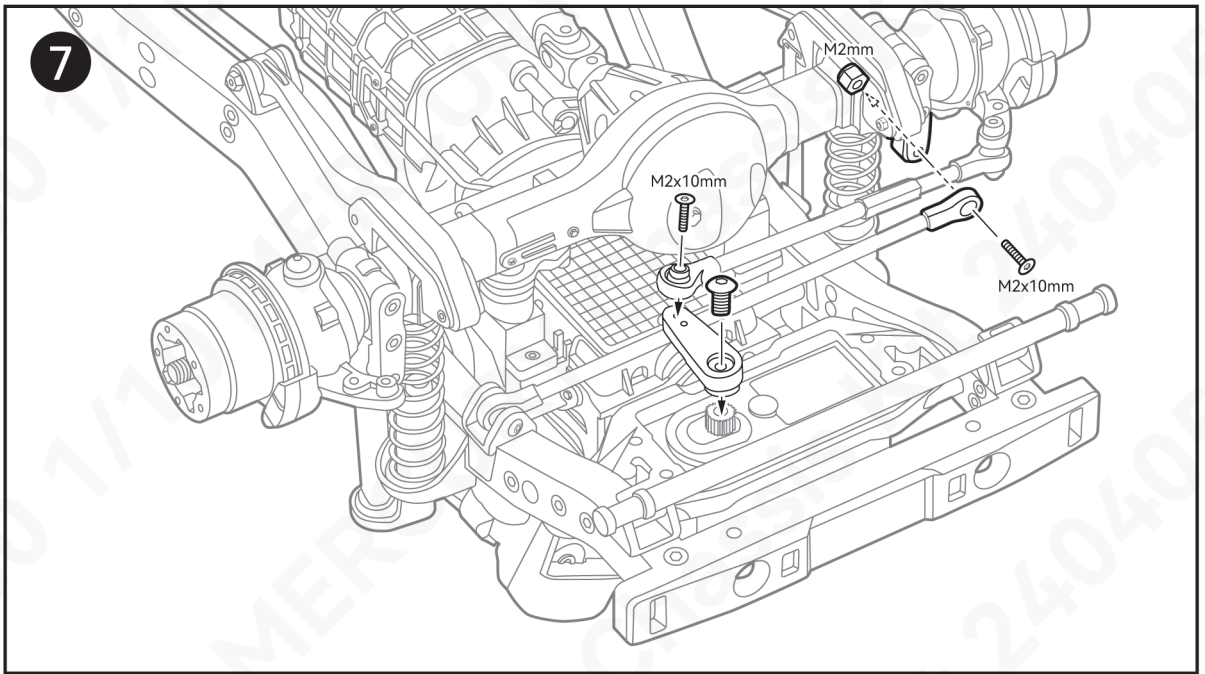 


 M2x10mm X 2  
 M2mm X 1



 M2x12mm X 2  
 M2mm X 2







 G1-5

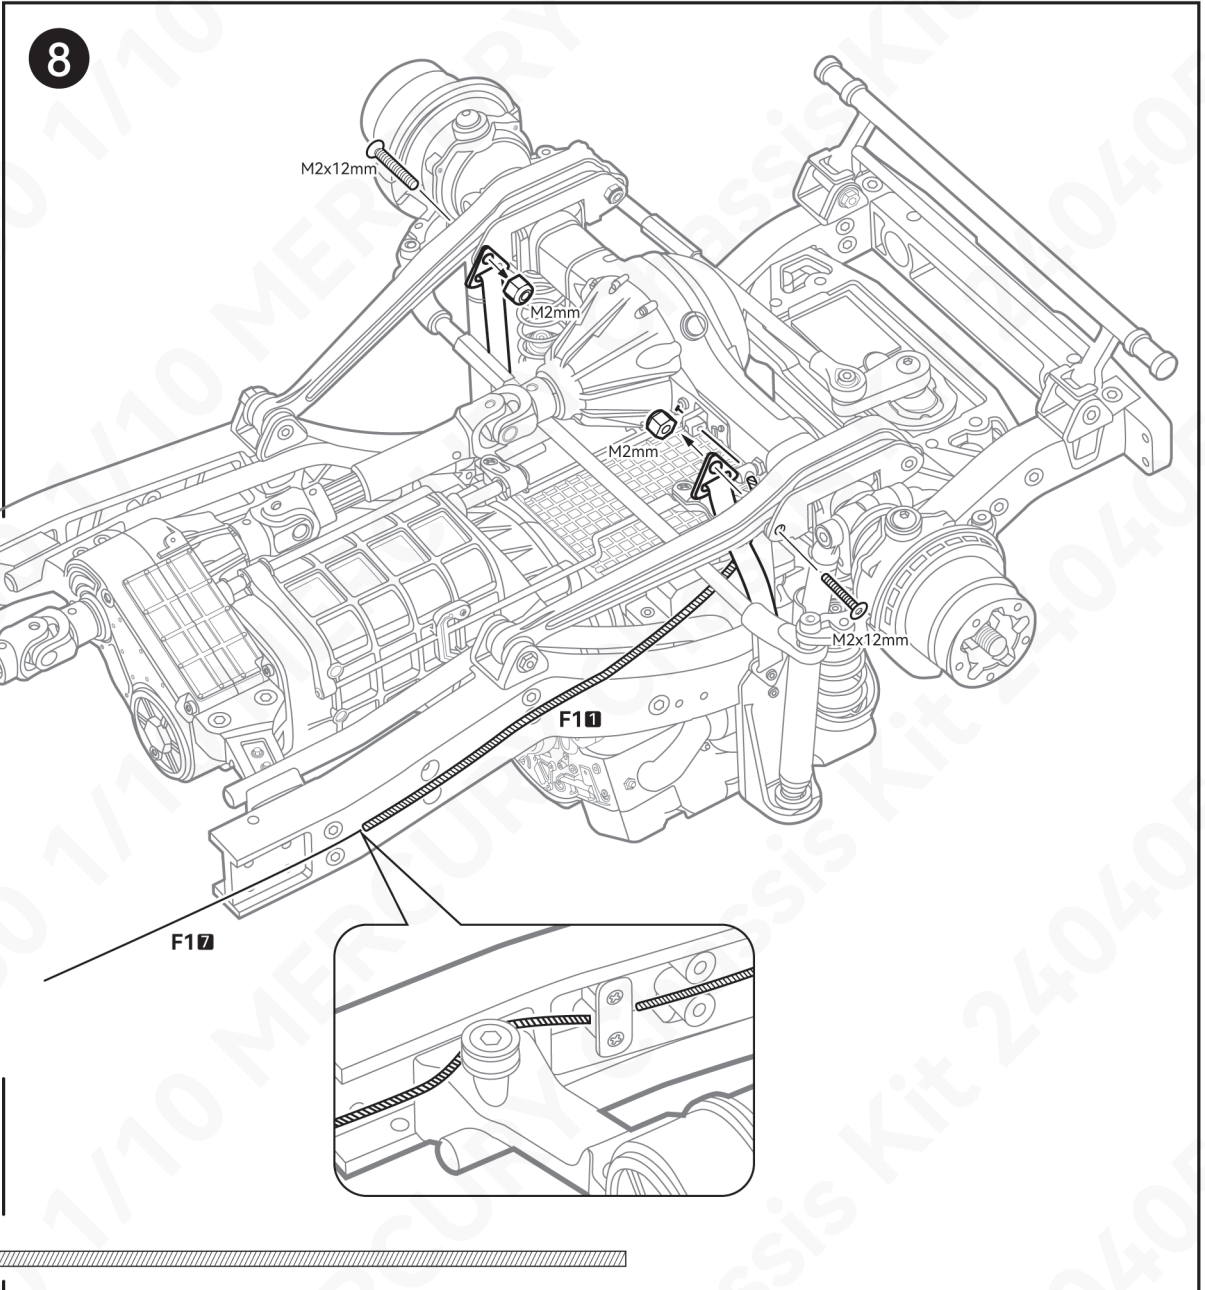

**F10**  
 Length 115~120mm Φ2mm




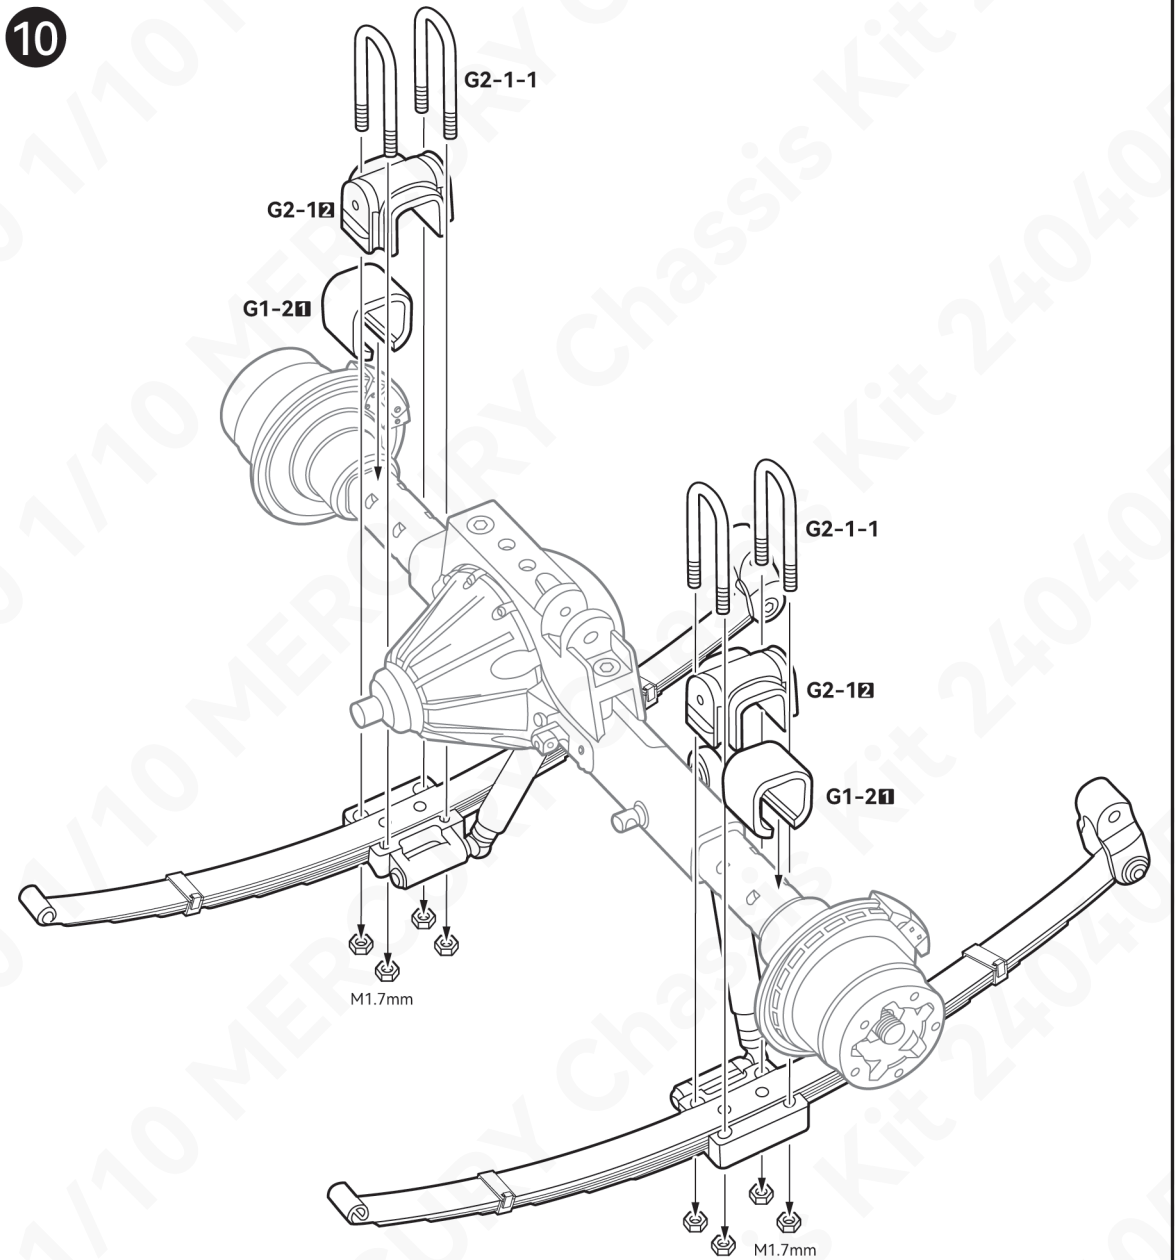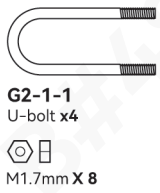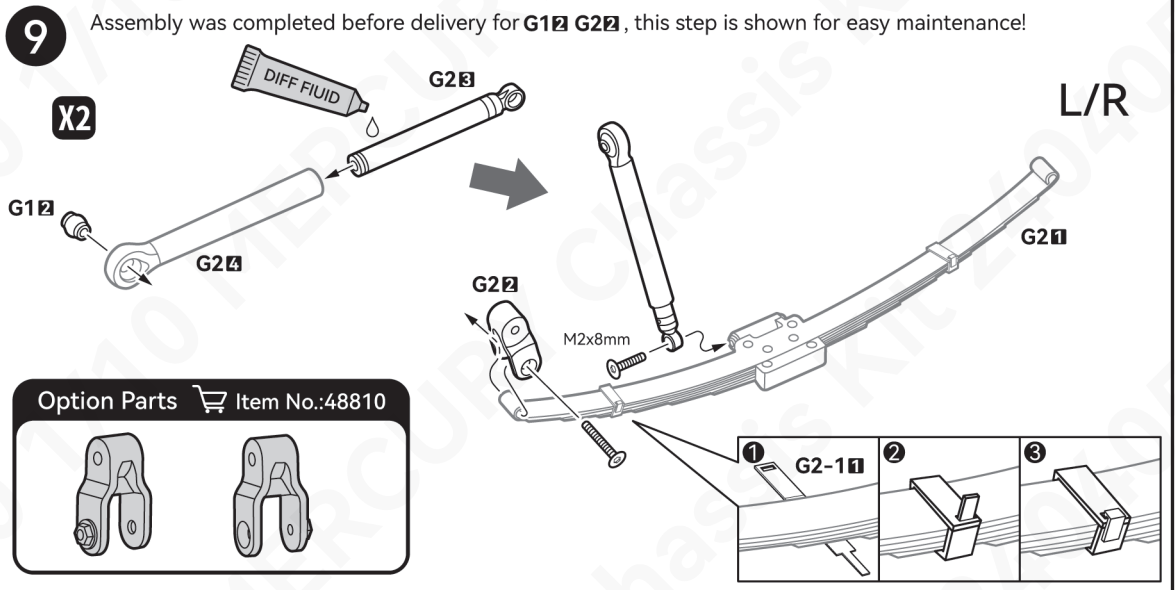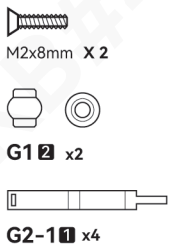    



**G3-1**

 M2 half thread x1

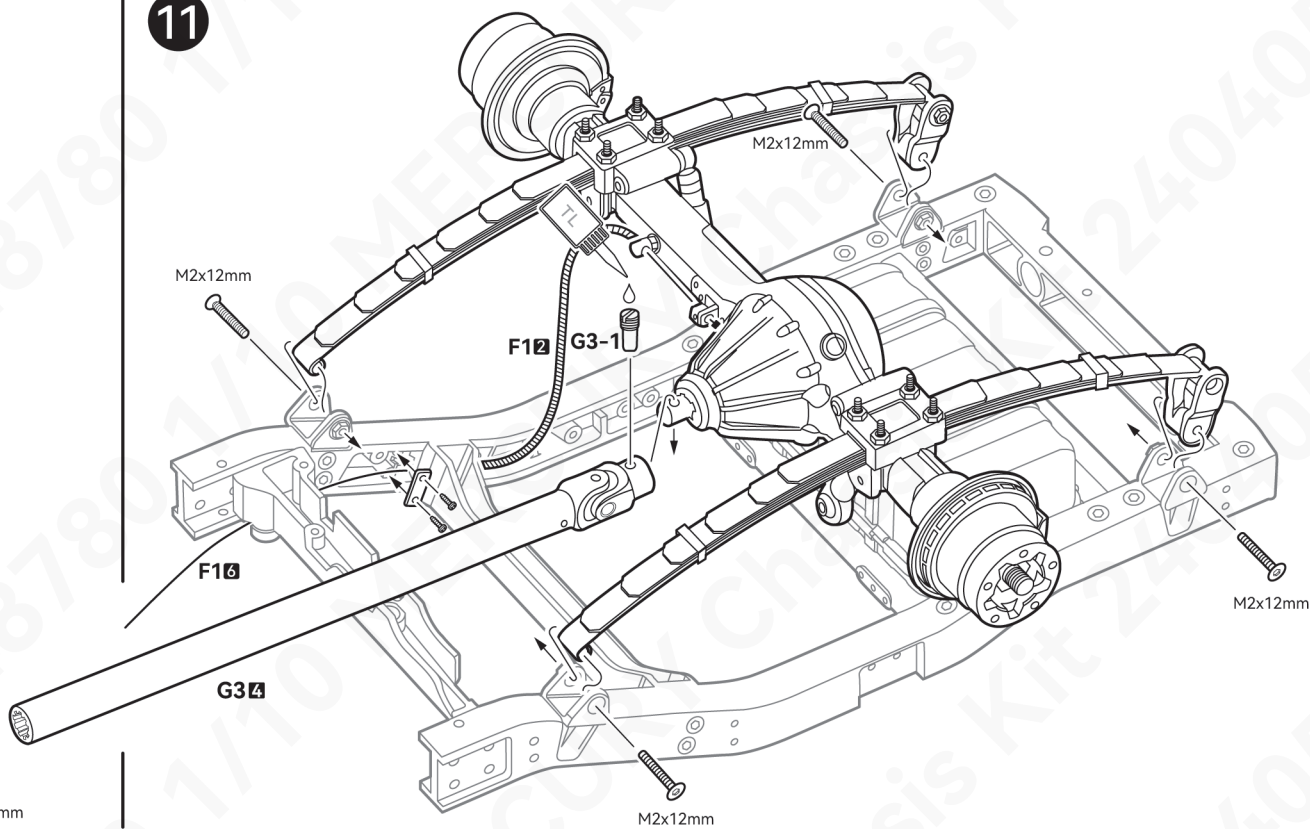

F12

 
Length 95~100mm  $\Phi$ 2mm



M2x6mm X 4



M2x8mm X 2

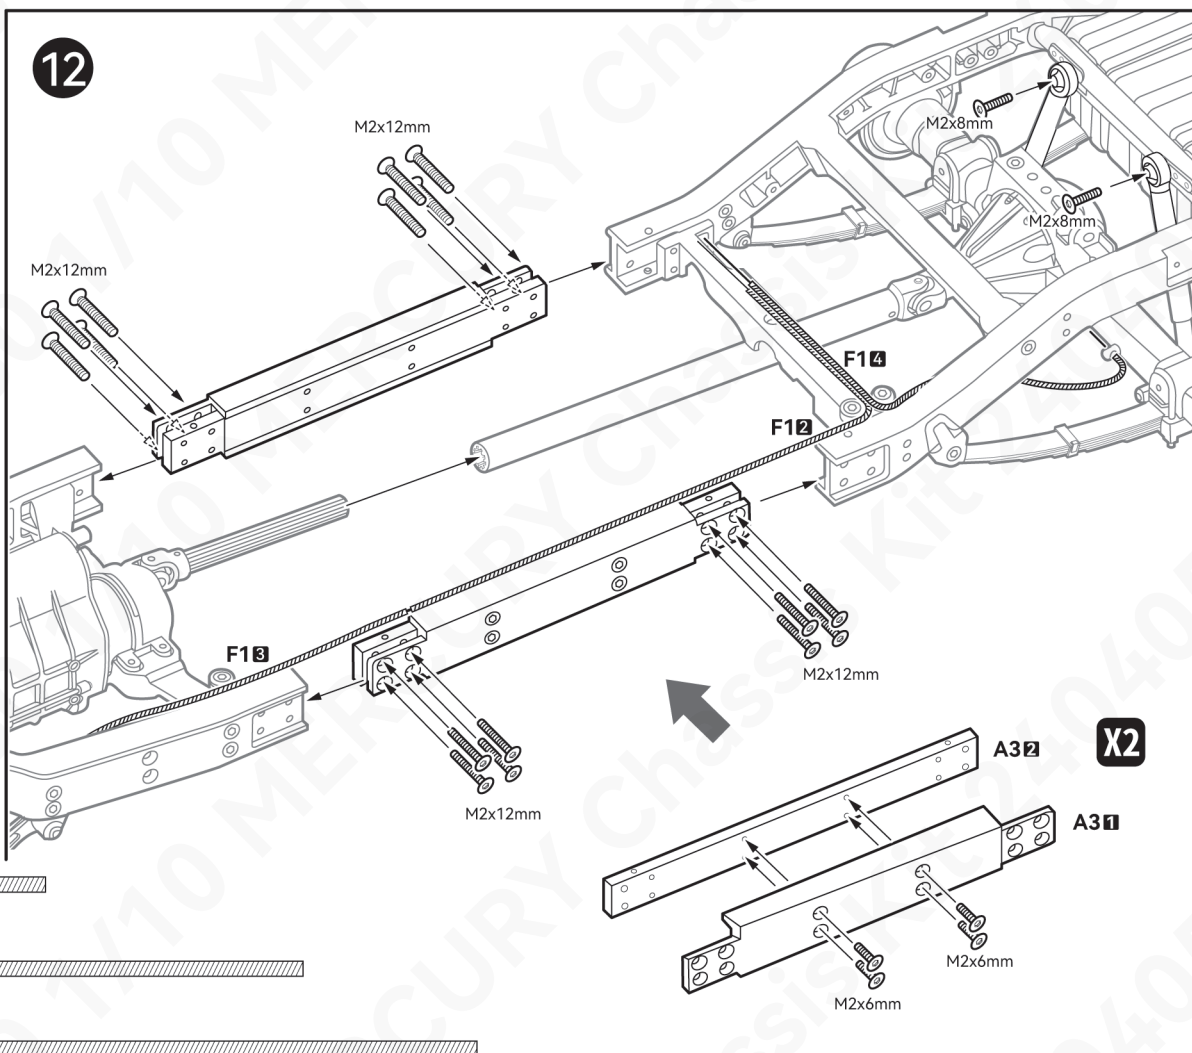

F13

Length 40~45mm  $\Phi$ 2mm

F14

Length 70~75mm  $\Phi$ 2mm

F12

Length 95~100mm Φ2mm



 
M2x6mm X 1



F15

13

The servo accessories need to select a suitable one from H1 H2 H3.

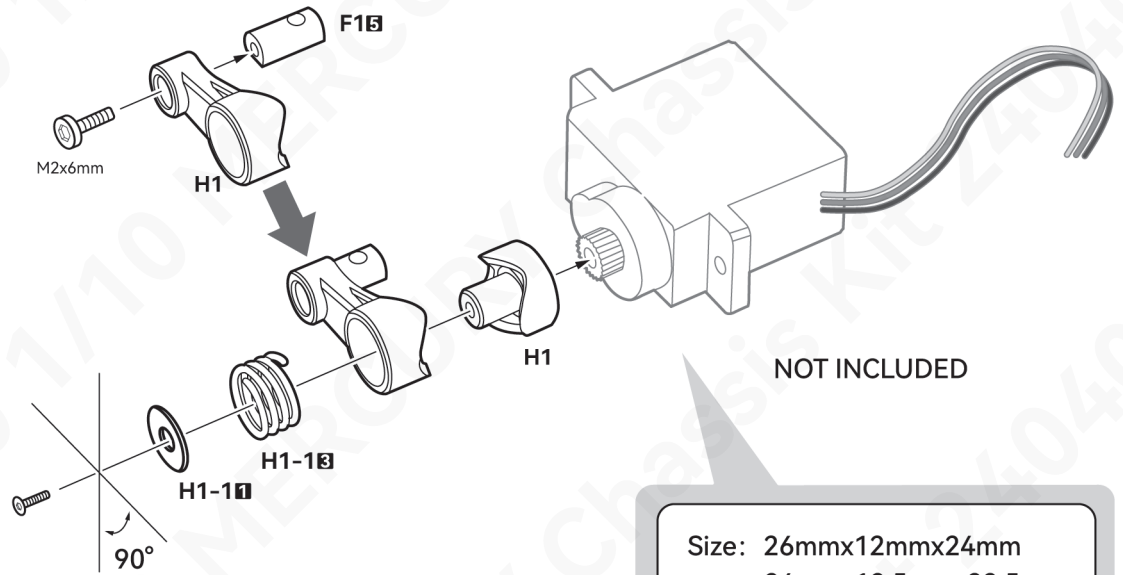


Install when servo is in neutral position.

Size: 26mmx12mmx24mm  
24mmx12.5mmx22.5mm  
Torque: 4kg/2.2kg




M2x8mm X 3

 14

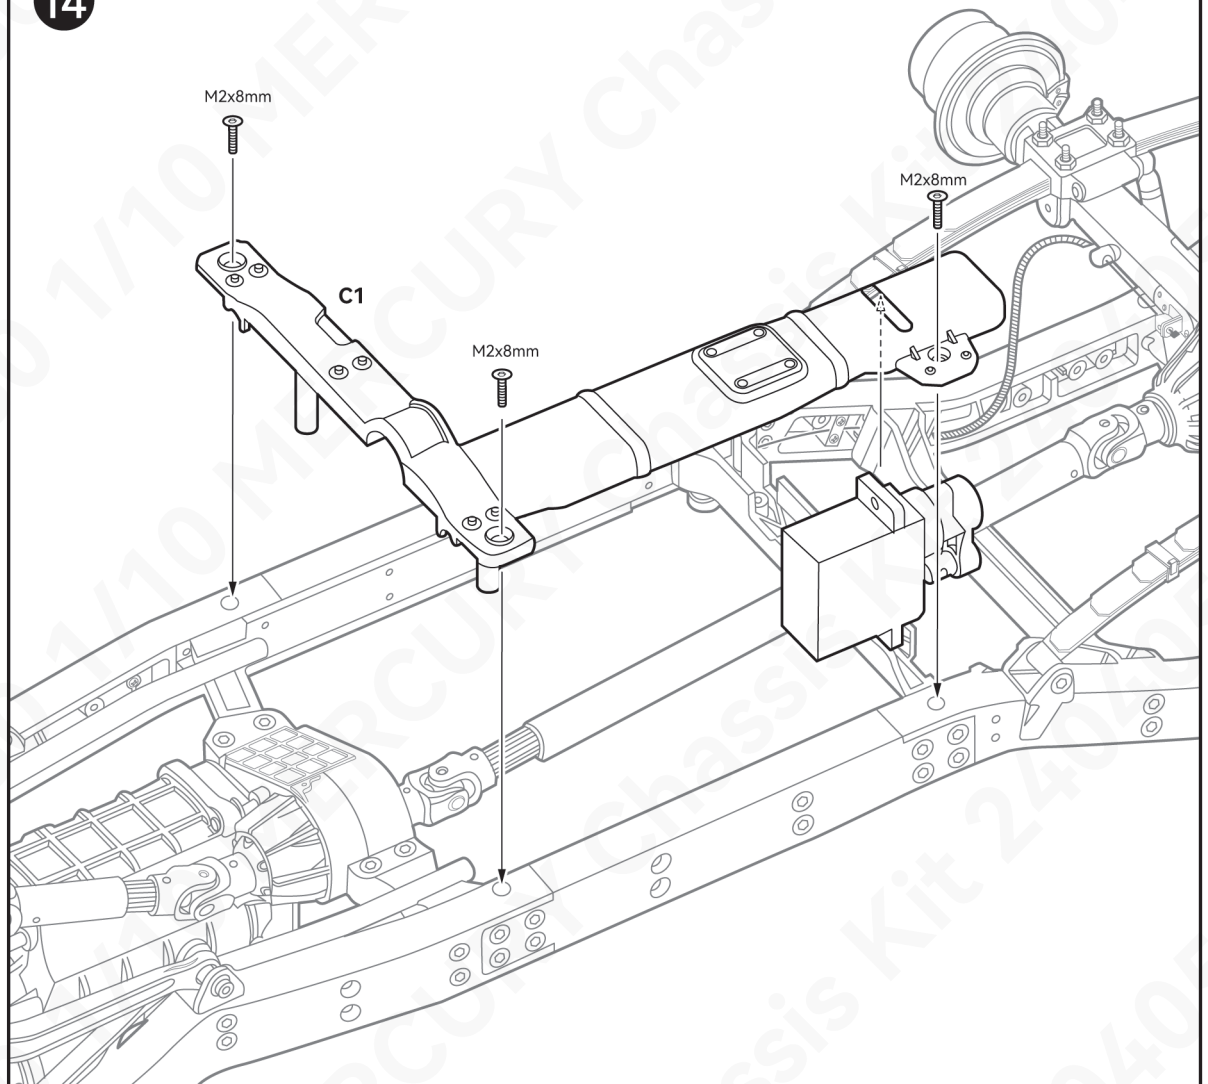


- M2x6mm X 1
- M2x8mm X 1

 **15** Assembly was completed before delivery for **C2234 E123**, this step is shown for easy maintenance!

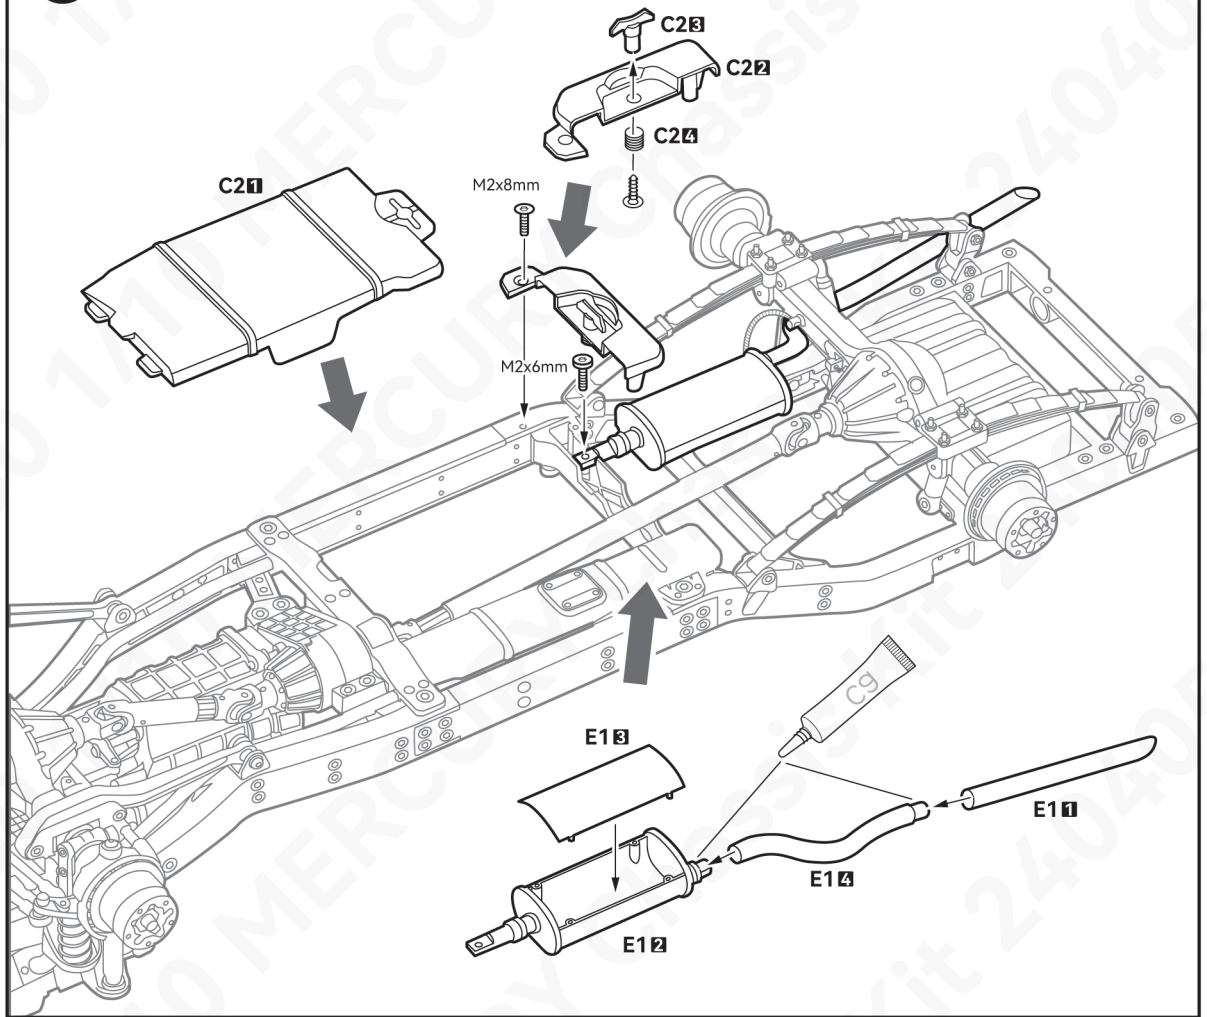

- M2x6mm X 1
- M2x8mm X 4

**16**

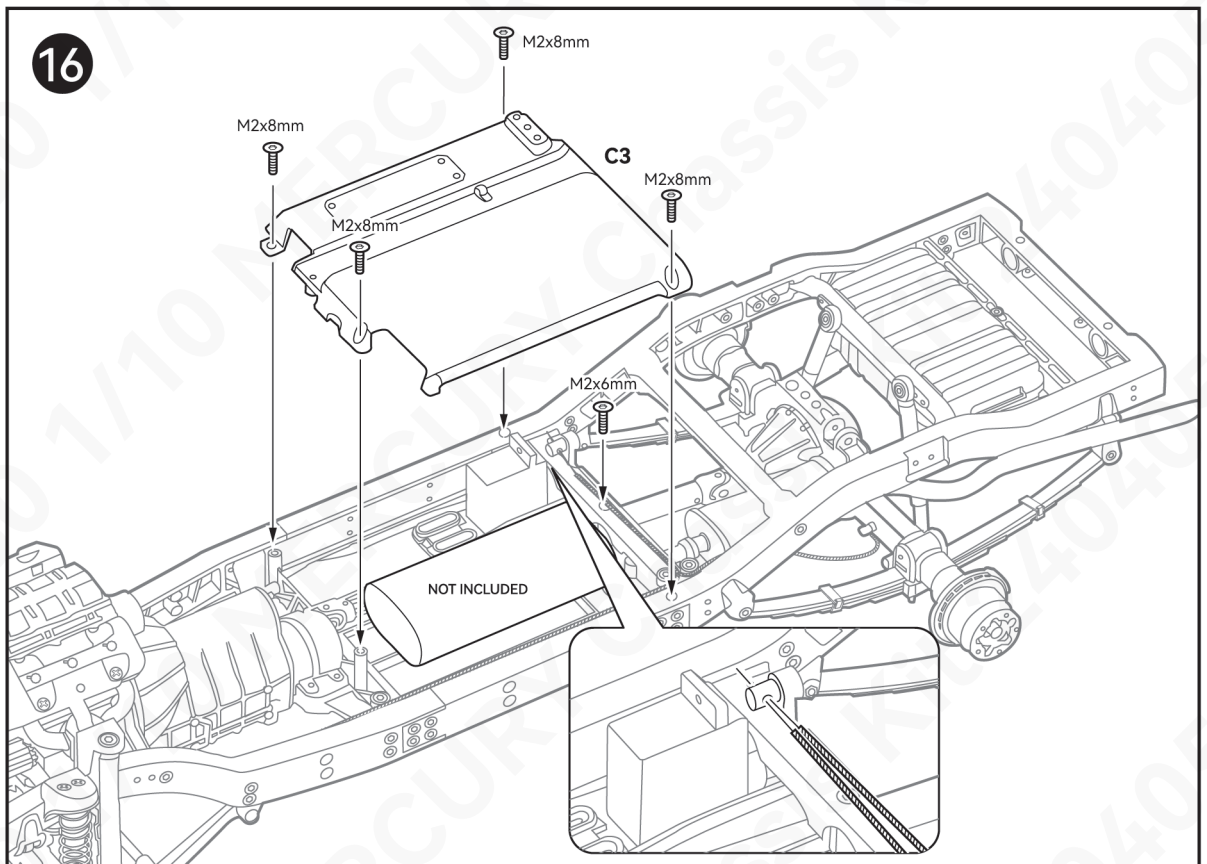 

**1 ~ 3**  
Open Bag I




M2x10mm X 6



M2.5x10mm X 2


**1**

 Disassembling the A4 screws and reassembling the I1 and I2.

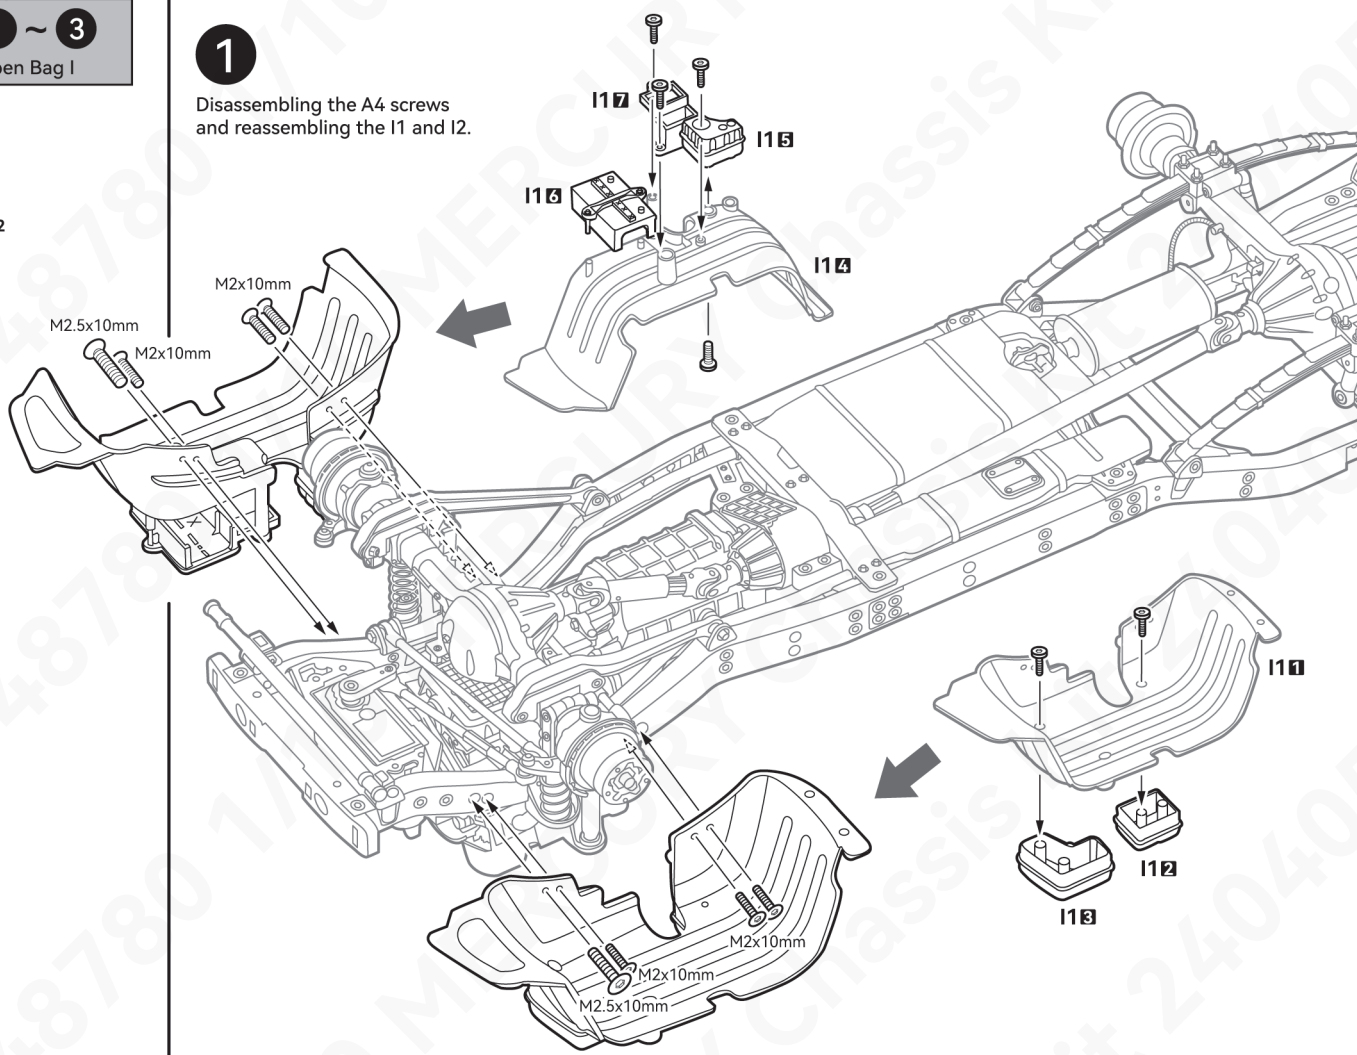

**2**

 Warm Prompt: When installing I24 part, pls disassemble the screws.

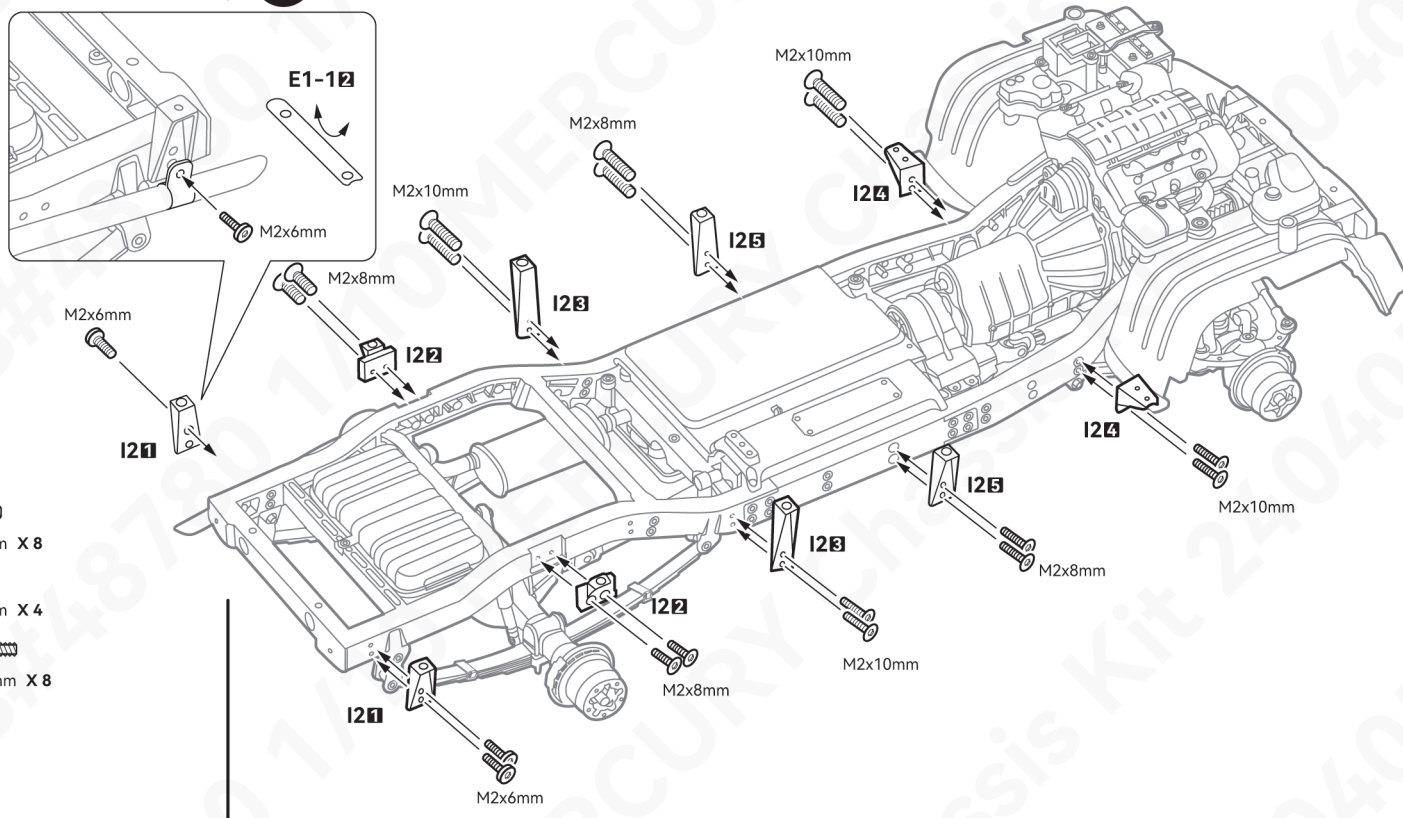

M2x8mm X 8



M2x6mm X 4

 


M2x10mm X 8



3

Warm Prompt: Removing the parts from the switch position to Install the on/off switch.

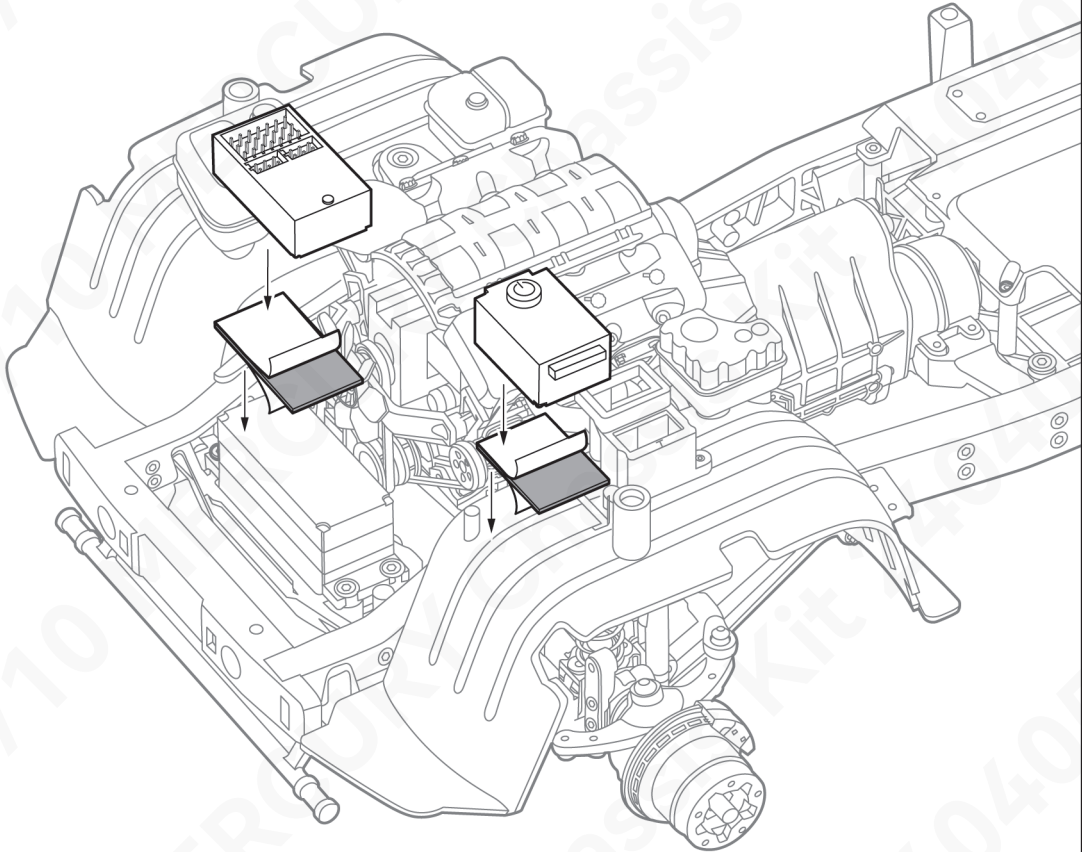

J

 
1 ~ 2  
Open Bag J





M2x12mm X 16

1

X4

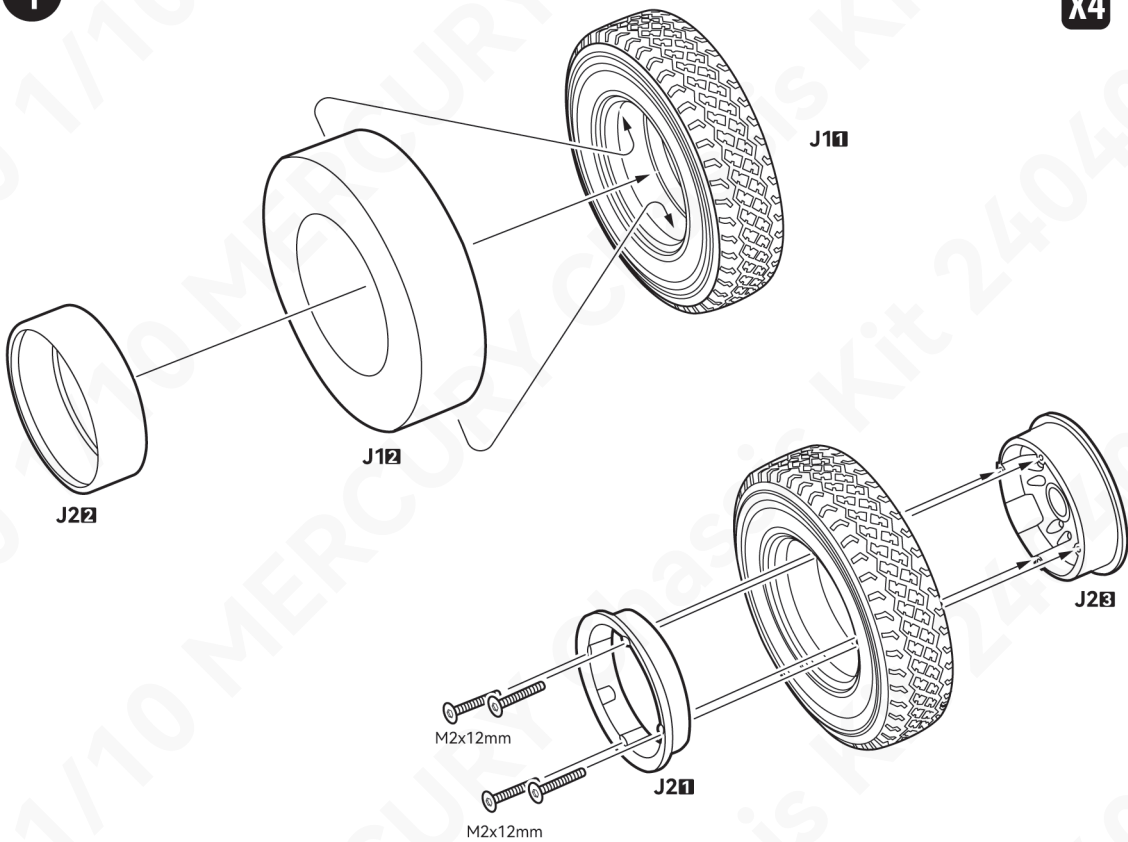

 M2x6mm X 20  
Outer HEX

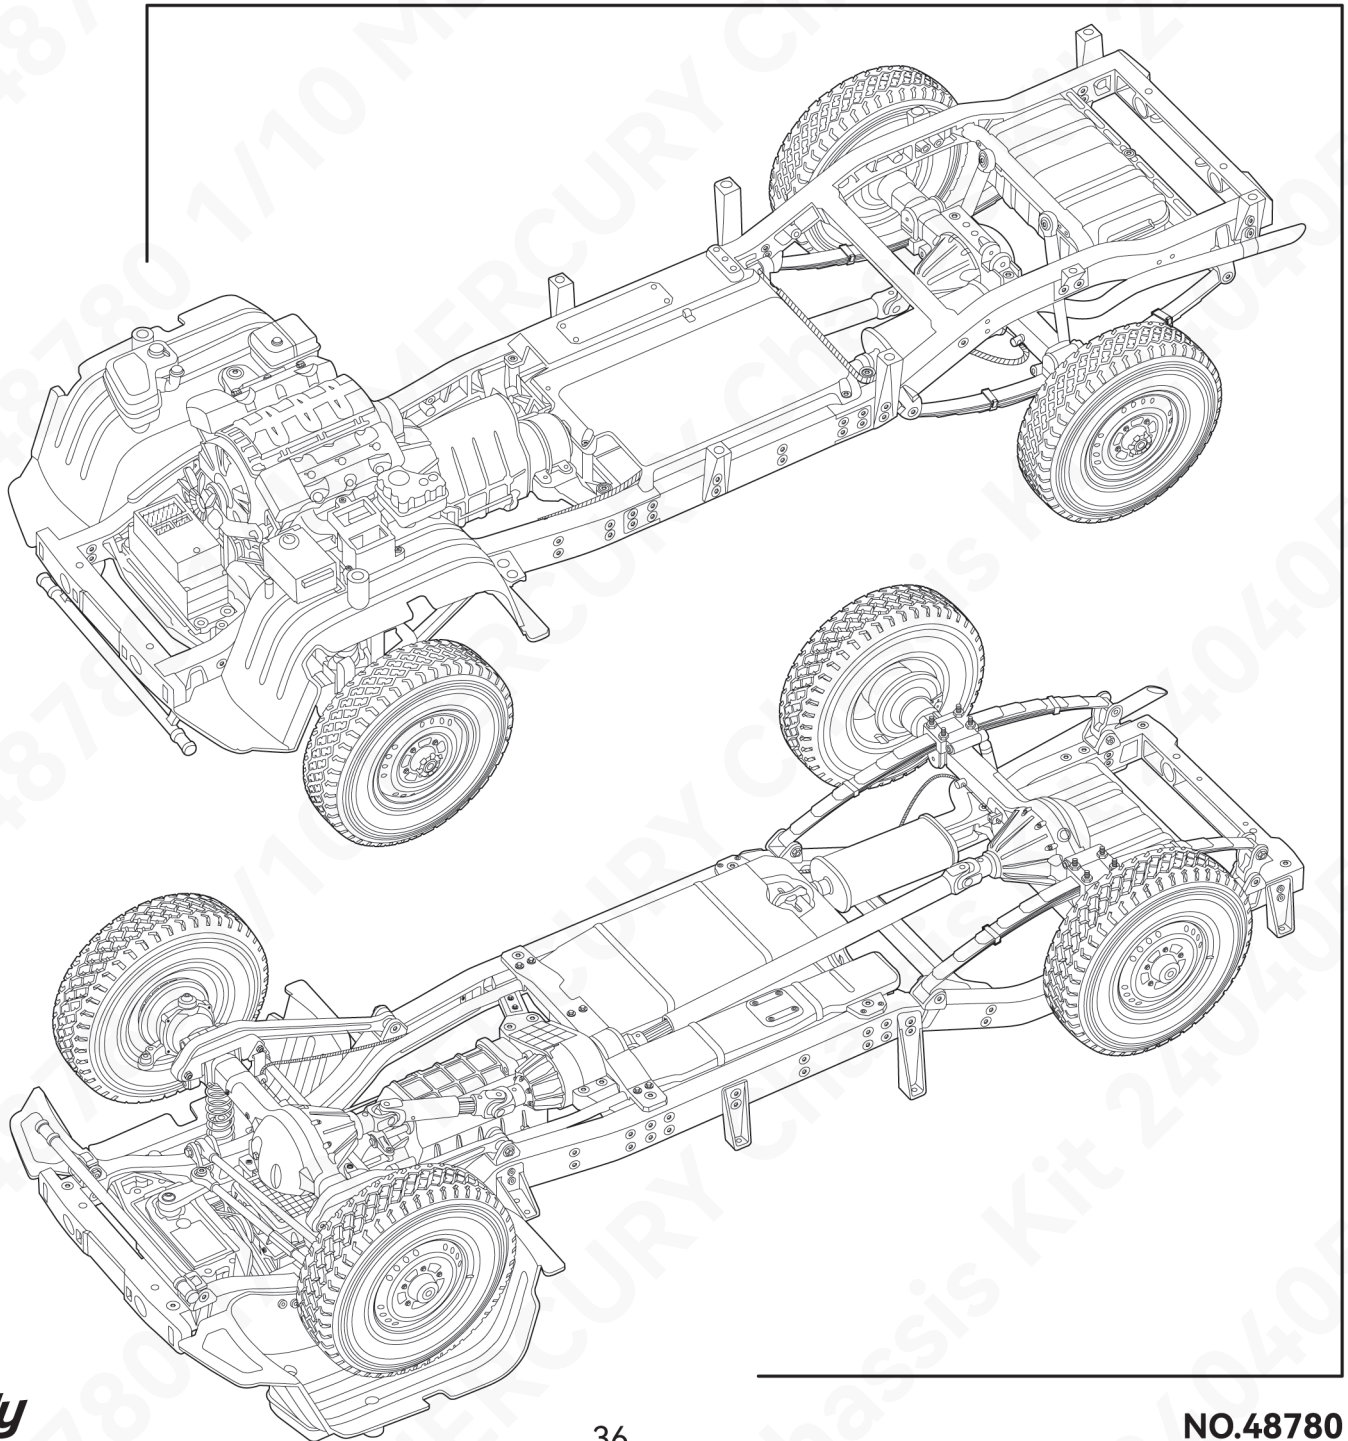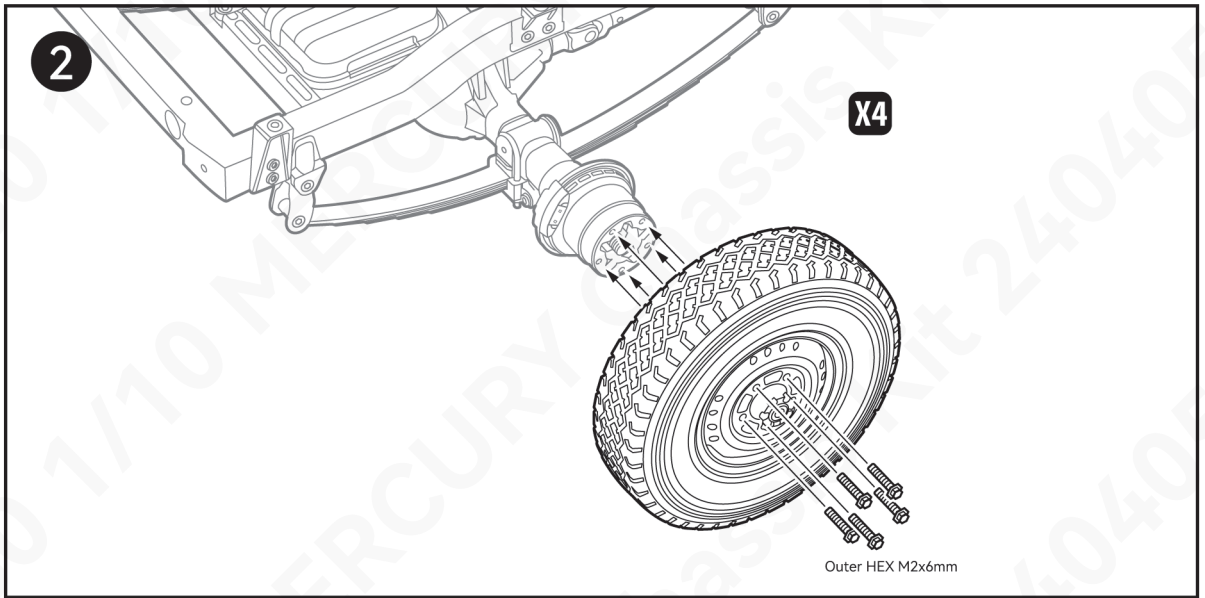  



## Separately Sold Items


Item No.48601

1/10 Toyota Land Cruiser 70 Hard Body Kit Item


No.48615

Cockpit Set (Right & Left)

 Fit for KB#48601 1/10 Toyota Land Cruiser 70

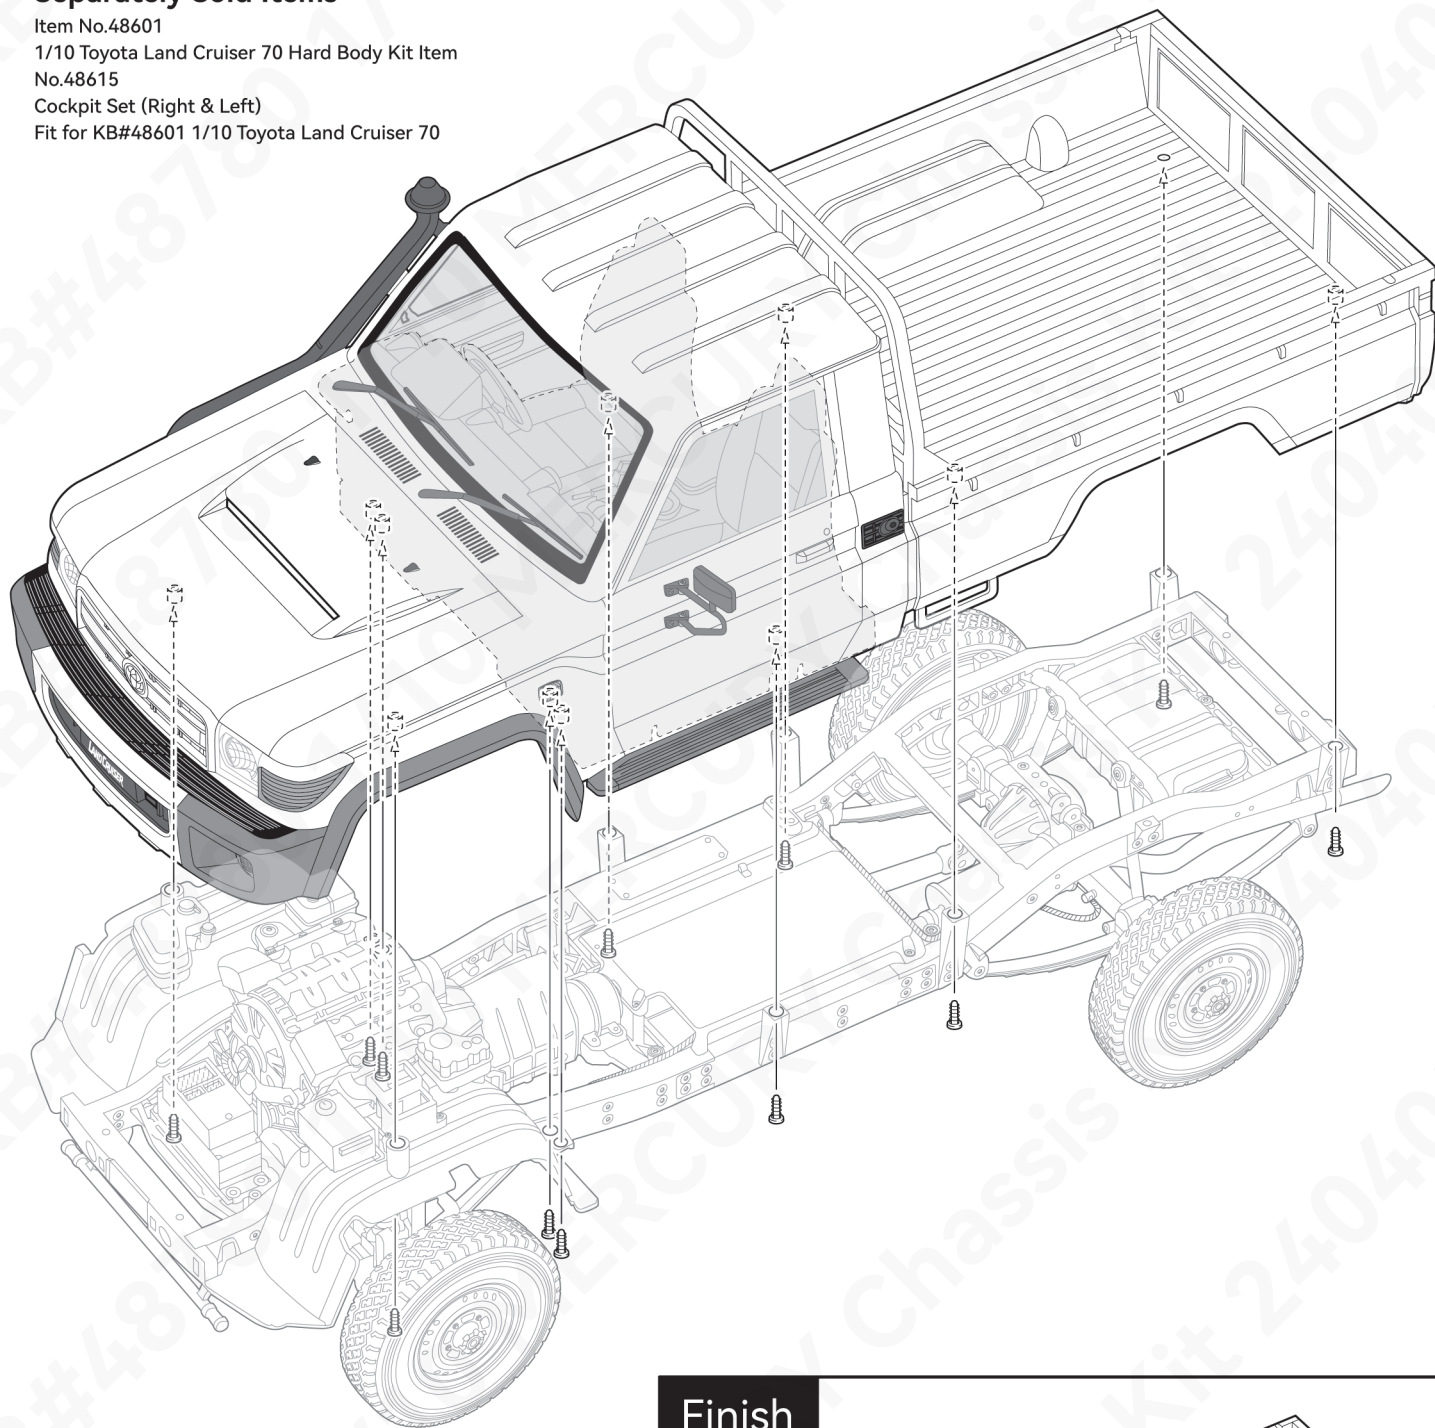

Finish

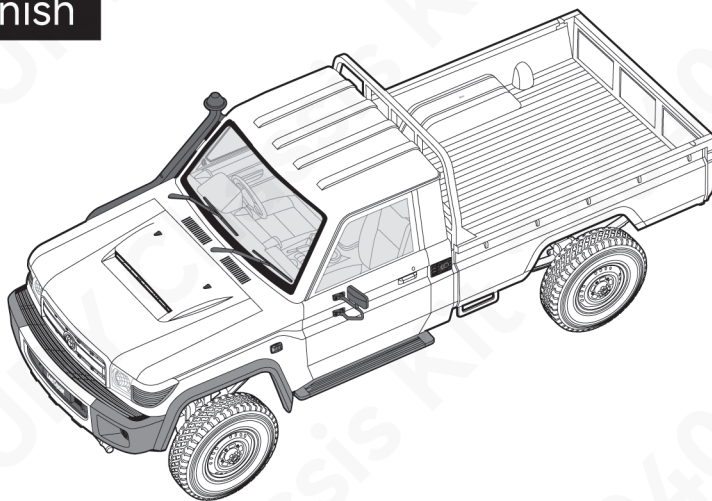 



## OPTION PARTS

Item No.	Description
48691	1/10 Detail Scale Rubber Tyre 3.35 inch Fit for KB48693 Wheel 1.68 inch
48693	Aluminum Alloy Wheel 1.68 inch Fit for KB48691 Tyre 3.35 inch
48782	Leaf Spring W/damper Cylinder Converted Sets
48815	Liners Fender Flares and Carriage installation fixing point Fit for KB#48780 1/10 MERCURY Chassis
48816	Chassis Frame Kit
48817	Tank Shell
48818	Chassis Beam Kit
48819	Battery Compartment Shell Kit
48820	Engine and Transmission Housing Set
48821	Exhaust Pipe Kit
48822	Front Axle Set
48823	Rear Axle Set
48824	Front Axle Suspension System Accessory Package
48825	Steering Rod & Panhard Rod
48826	Universal Joint Transmission Shaft Kit
48827	Steering Server Support Package
48828	Screw and Tool Set

### Aluminium Alloy Upgrade Parts

Item No.	Description
48777	Front/ Rear Axle Upgrade Sets Aluminium alloy
48779	Frame Upgrade Sets Aluminium alloy Fit for KB#48780 MERCURY Chassis
48808	Control Arm Upgrade Sets Aluminium alloy
48809	Steering Knuckle Upgrade Sets Aluminium alloy
48810	Suspension Loop Upgrade Sets Aluminium alloy
48811	Frame Upgrade Sets Aluminium alloy Fit for KB#48760 MERCURY Chassis

### Modification Parts

Item No.	Description
48783	4-linkage Suspension W/damper Cylinder Converted Sets
48692	1/10 Detail Scale Rubber Tyre 3.75 inch Fits best 1.55" wheels Fit for 1/10 Crawler
48694	Aluminum Alloy Wheel 1.55 inch Fit for 1/10 Crawler
48813	1/10 Detail Scale Butyl Rubber Tyre 3.5 inch Fit for KB#48760 MERCURY Chassis
48814	Aluminum Alloy Wheel 1.55 inch Fit for KB#48760 MERCURY Chassis

## Body shell & Corresponding Upgrade Parts

Item No.	Description
48601	1/10 Toyota Land Cruiser 70 Hard Body Kit Fit for KB#48780 MERCURY Chassis
48610	Movable Door & Window Lifter Upgrade Sets Fit for KB#48601 1/10 Toyota Land Cruiser 70
48611	Movable Hood Upgrade Sets Fit for KB#48601 1/10 Toyota Land Cruiser 70
48613	Metal Lock Catch Fit for KB#48601 1/10 Toyota Land Cruiser 70
48615	Cockpit Set (Right & Left) Fit for KB#48601 1/10 Toyota Land Cruiser 70

Item No.	Description
48765	1/10 Jeep Gladiator Rubicon Hard body Fit for KB#48760 MERCURY Chassis
48776	Cockpit Set (Left & Right) Fit for KB#48765 1/10 Jeep Gladiator
48778	LED Unit Set w/Control Box 24 LEDS Fit for KB#48765 1/10 Jeep Gladiator
48812	Liners Fender Flares and Carriage installation fixing point Fit for KB#48760 MERCURY Chassis



Killerbody Industrial Limited  
Unit 5, 27/F., Richmond Comm. Bldg.,  
109 Argyle Street, Mongkok, Kowloon,  
Hong Kong  
[sales@killerbody.com](mailto:sales@killerbody.com)  
[killerbody.com](http://killerbody.com)  
[rc.killerbody.com](http://rc.killerbody.com)  
[hero.killerbody.com](http://hero.killerbody.com)

