



Instruction Manual for Engine Bay and Spring Loaded Hinges

Step 1. Cut these parts with proper tools.

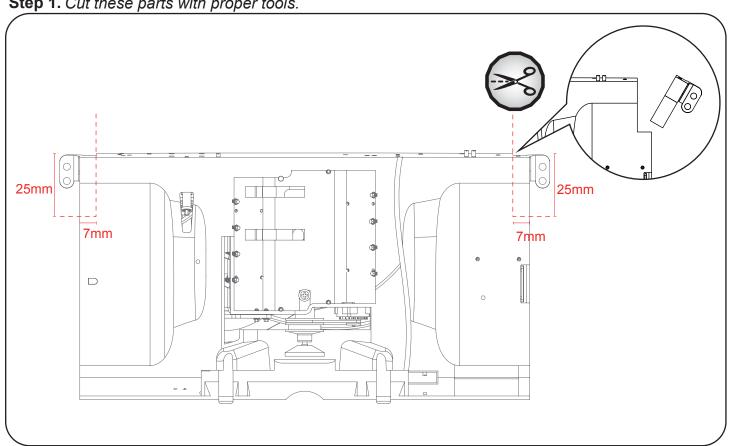


Step 2. Apply glue to the back of the engine bay and front of the bodies firewall, or for a less permanent installation, drilling holes and installing screws would also work.

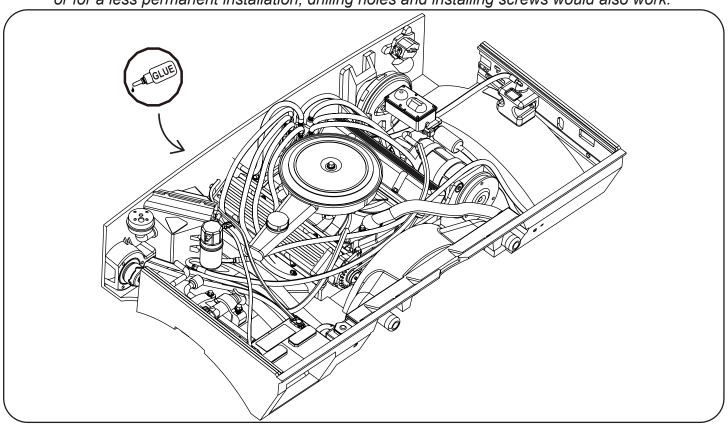




Instruction Manual for Engine Bay and Spring Loaded Hinges

Step 3. Installed on body.

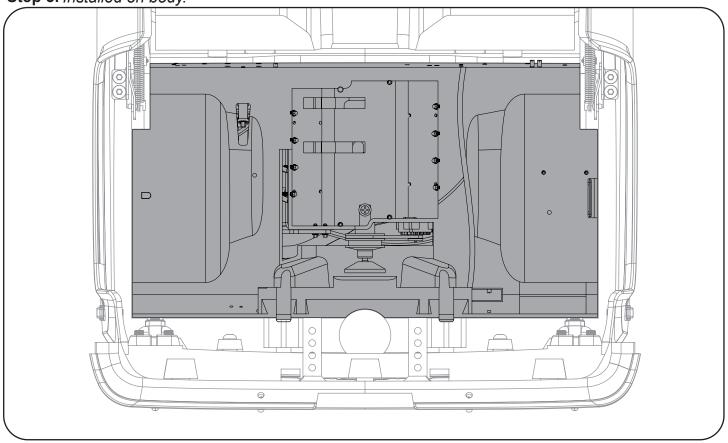

Step 4. Wait for the glue to dry and complete the installation.

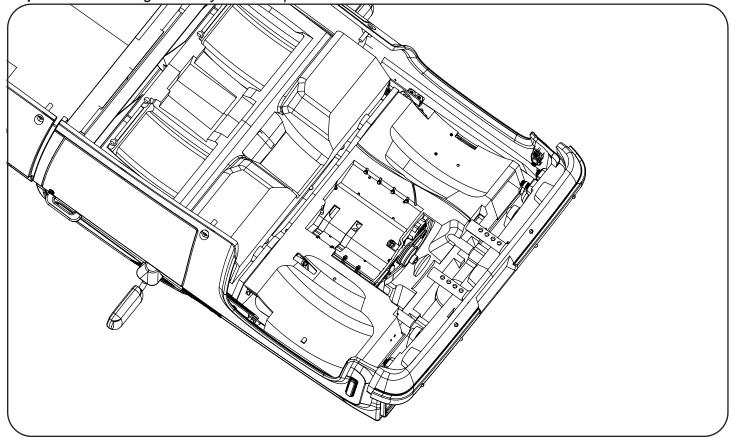

2

100-0149