

RC10
SINCE 1984

PICKUP TRUCK

4x4 Electric Off Road Pickup Truck Kit



TEAM ASSOCIATED

4x4 Electric Off Road Pickup Truck Kit Manual

#40015

:: Introduction

Thank you for purchasing this Team Associated product. This assembly manual contains instructions and tips for building and maintaining your new RTR. Please take a moment to read through this manual to help familiarize yourself with these steps. We are continually changing and improving our designs; therefore, actual parts may appear slightly different than in the illustrations. New parts will be noted on supplementary sheets.

:: Vehicle Features

- Gold chassis rail
- Gold servo mount
- Gold battery plate
- Classic white molded plastics
- New gold scaled shocks
- New clear Pickup truck body
- Reedy Power 400 brushed motor

:: Additional

There are some items you will need to complete your kit (refer to website for suggestions):

- AA-size batteries for transmitter (x4)
- Radio system
- Electronics speed control (ESC)
- Steering servo
- Battery charger

:: Other Helpful Items

- Green Slime shock lube (AE # 1105)
- 7 Piece Hex Driver Set (AE # 1650)
- Cyanoacrylate glue (AE # 1697)
- Body Scissors (AE # 1737)
- FT Nut Drivers (AE #1519)
- Calipers or a Precision Ruler
- Reamer / Hole Punch
- Needle Nose Pliers
- Hobby Knife
- Wire Cutters
- Soldering Iron

Associated Electrics, Inc.
21062 Bake Parkway
Lake Forest, CA 92630



Customer Service
Tel: 949.544.7500
Fax: 949.544.7501

:: Hardware - 1:1 Scale View

Button Head Screws (bhcs)

	2x10mm (41072)
	2.5x6mm (31520)
	2.5x8mm (31521)
	2.5x10mm (31522)
	2.5x12mm (21582)
	2.5x14mm (41073)
	2.5x18mm (81529)
	2.5x20mm (41074)
	2.5x25mm (41075)
	3x4mm (91158)
	3x8mm (31532)
	3x10mm (25211)
	3x20mm (25188)


Flat Head Screws (fhcs)

	2.5x10mm (31350)
	2.5x12mm (41076)
	3x6mm (31541)
	3x8mm (25201)

Socket Head Screws (shcs)

	2x4mm (41070)
	2x5mm (31511)
	2x8mm (7187)
	2.5x6mm (41079)
	2.5x10mm (41087)
	2.5x14mm (71032)
	2.5x16mm (41086)

Bearings

	5x10x4mm (91560)
	10x15x4mm (91563)

Set Screws

	2.5x5mm (41119)
	3x3mm (25225)

Locknuts

	M3 Locknuts (25215)
	Aluminum (31550)

Notes:

:: Table of Contents

1..... Cover	10 - 11BAG 4
2..... Introduction	11 - 13.....BAG 5
3..... 1:1 Hardware	14 - 16.....BAG 6
4..... Table of Contents	15.....BAG 7
5..... BAG 1	17 - 18.....Body & Decal
5 - 7.....BAG 2	20.....Back Cover
8 - 9..... BAG 3	

:: Notes



This symbol indicates a special note or instruction in the manual.



This symbol indicates a Racers Tip.



There is a 1:1 hardware foldout page in the front of the manual. To check the size of a part, line up your hardware with the correct drawing until you find the exact size. Each part in the foldout has a number assigned to it for ordering replacement parts.

Associated Electrics, Inc.
21062 Bake Parkway
Lake Forest, CA 92630




Customer Service
Tel: 949.544.7500
Fax: 949.544.7501

:: Chassis Build Step 1

BAG 1


Build L and R

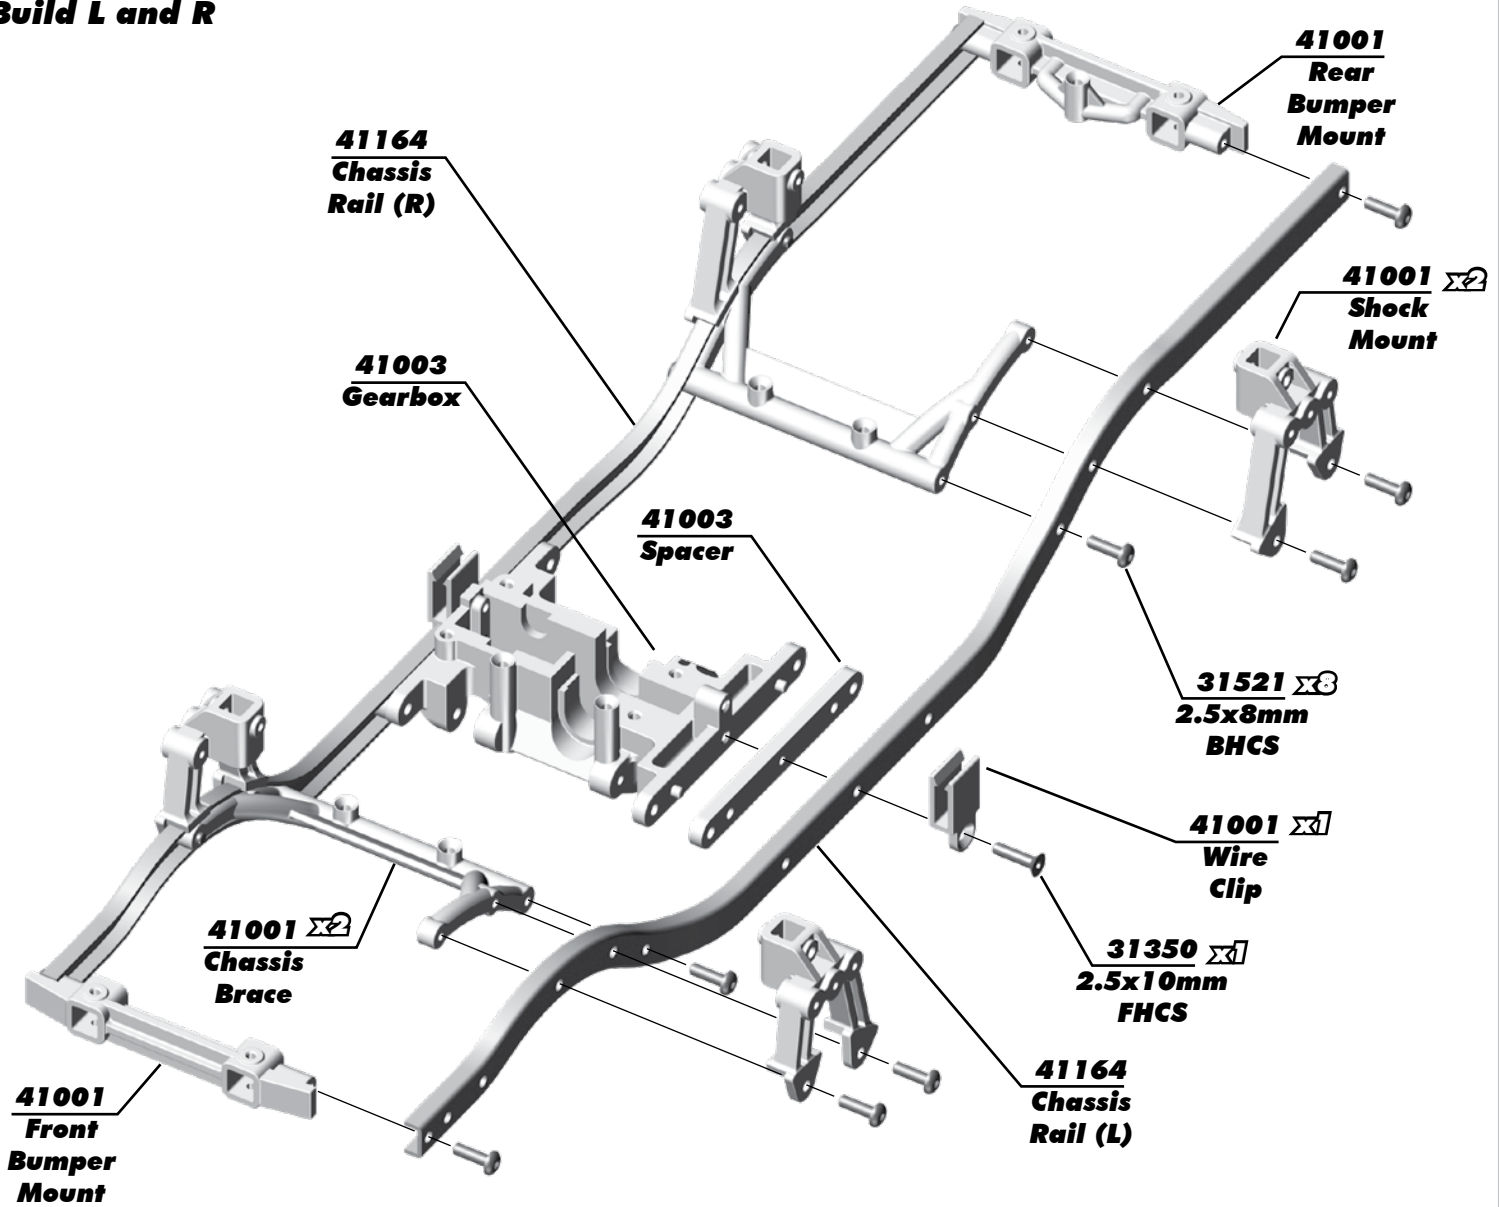

:: Front / Rear Differential Build - Step 1


BAG 2

Build x2

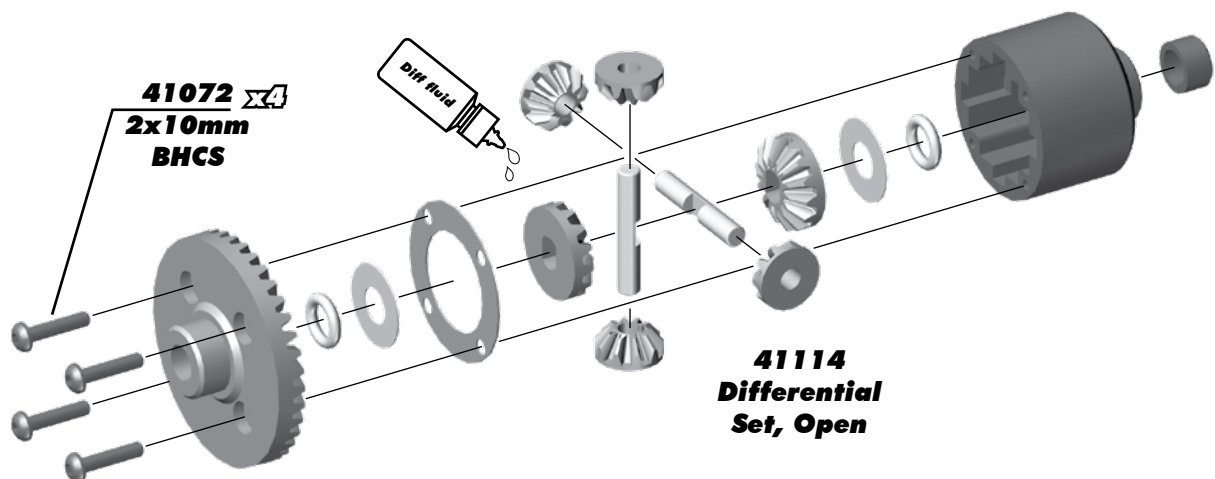

:: Front / Rear Axle Build - Step 2


Build x2

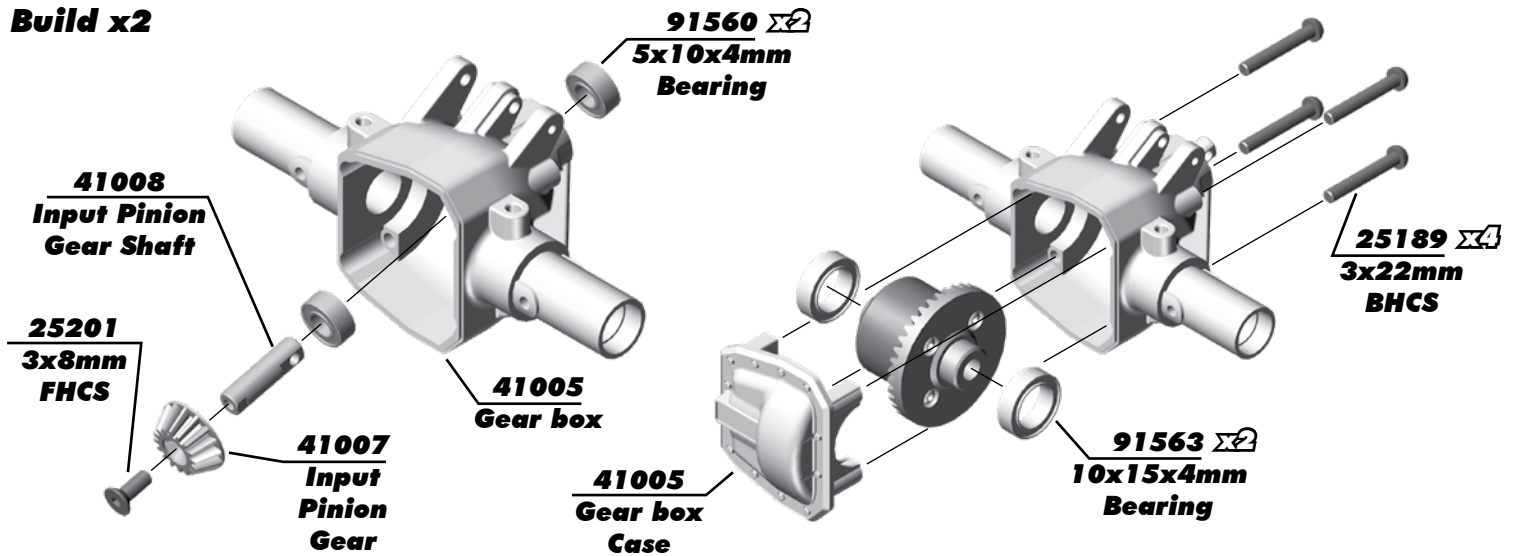


:: Front Axle Build - Step 3

Build L and R

Build x2

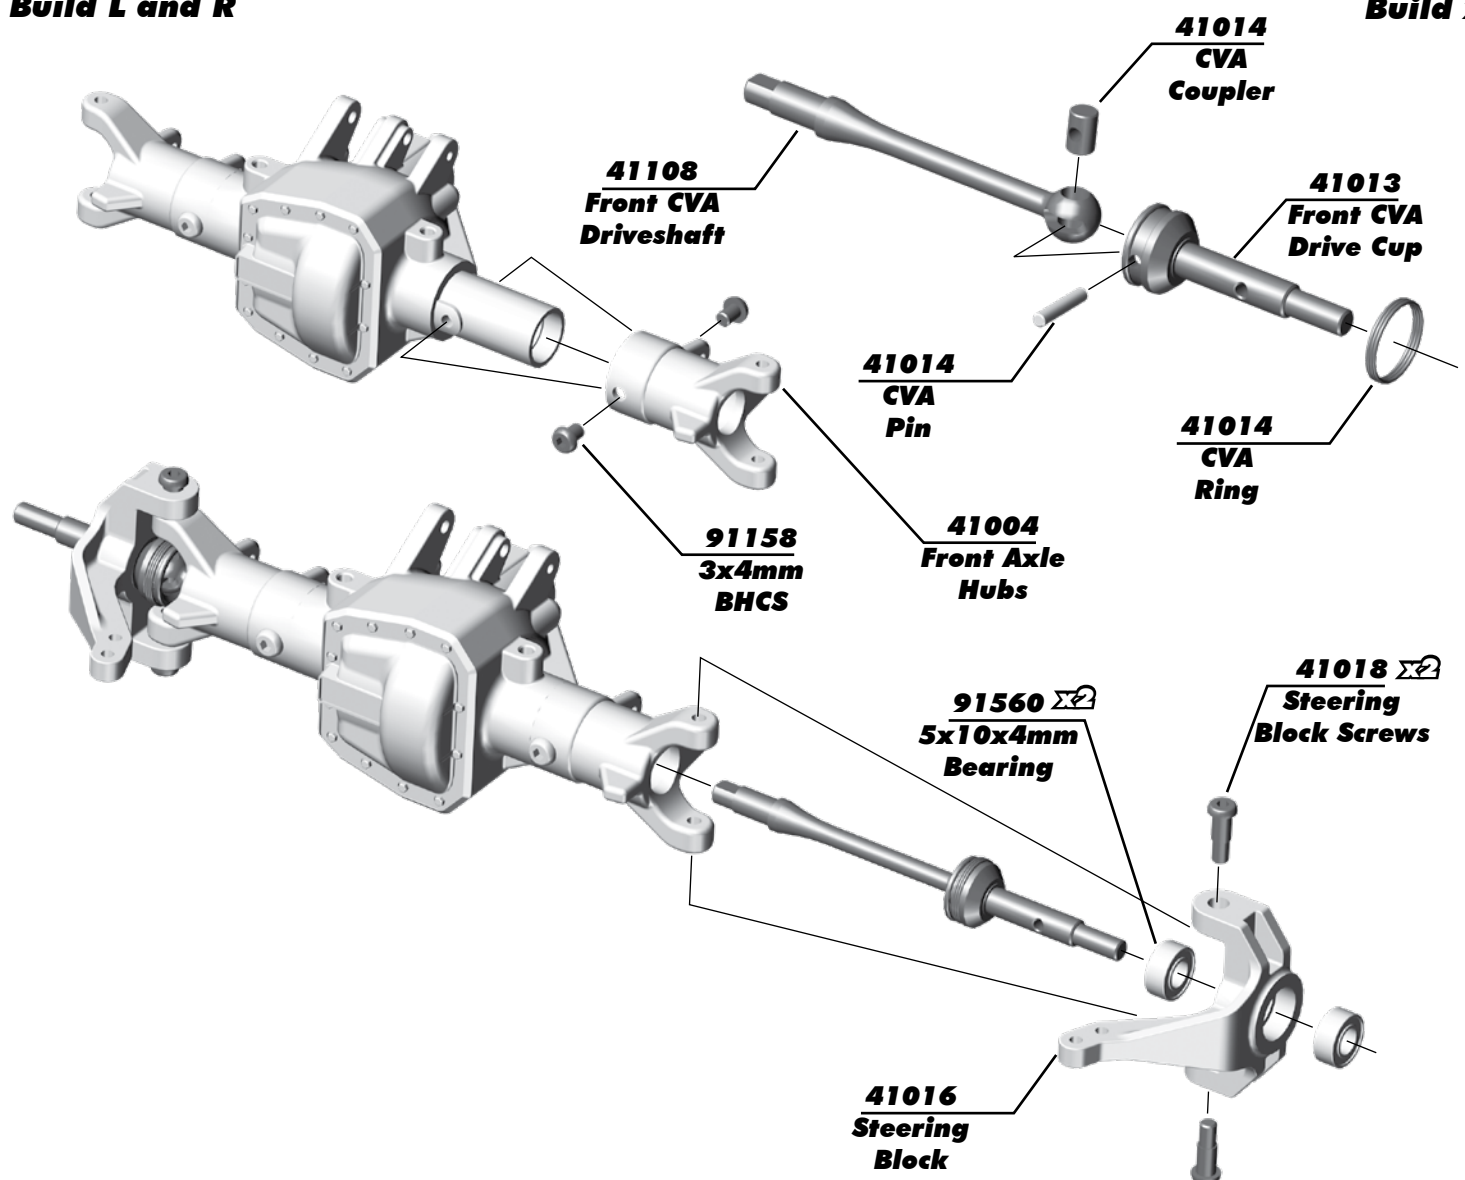

:: Rear Axle Build - Step 4

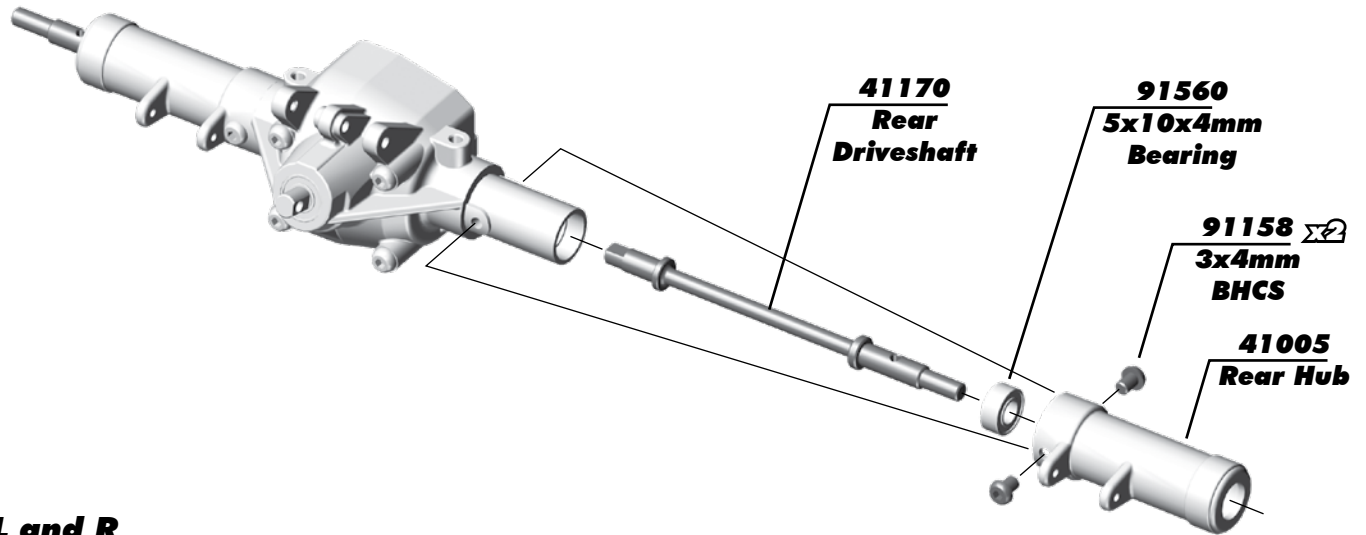


Build L and R

:: Shocks Build - Step 1


Build x4

41165 Scaled Shocks sets

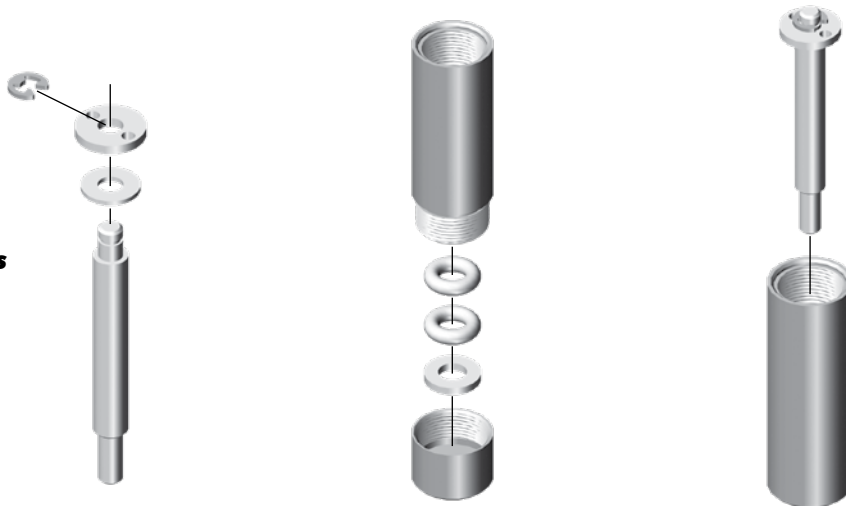

:: Shocks Build - Step 2

Build x4

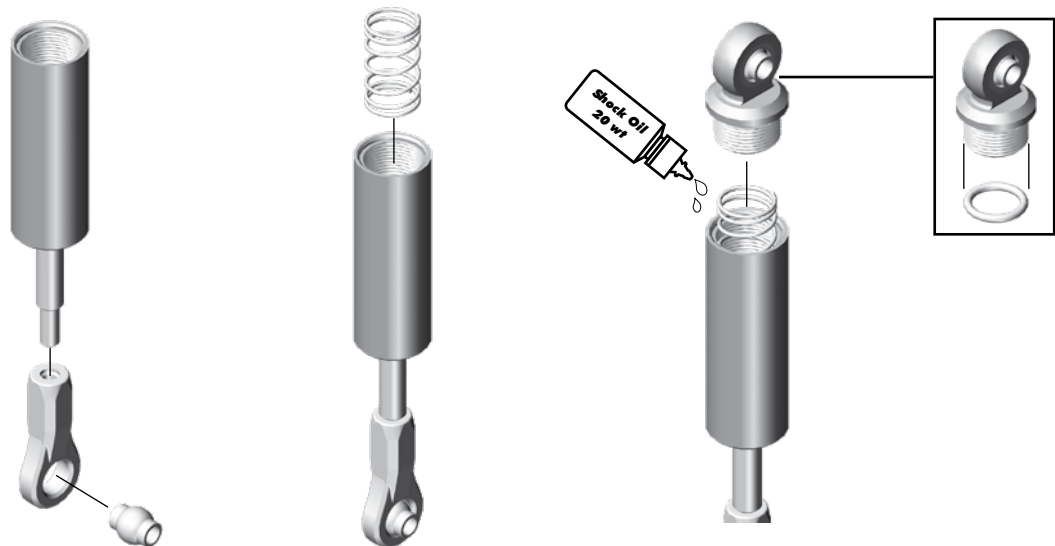

:: Front Suspension Build - Step 1

BAG 3
Build x2

41029
Front Upper
Link, Short
(36mm)

41148 
Rod End

41029
Front Lower
Link, Long
(55mm)

41034
Pivot Ball
Long

41033 
Pivot Ball
Short

89215
M2.5 Locknut

41075
2.5x25mm
BHCS

41074
2.5x20mm
BHCS

Build L and R

:: Front Suspension Build - Step 2

Build L and R

41165
Shock
Bushing

41073
2.5x14mm
BHCS

41073
2.5x14mm
BHCS

31522
2.5x10mm
BHCS

41001
Chassis
Mount

:: Rear Suspension Build - Step 3

Build x2

41031
Rear Upper
Link, Short
(42mm)

41148 
Rod End

41032
Rear Lower
Link, Long
(60mm)

89215
M2.5 Locknut

41075
2.5x25mm
BHCS

41034
Pivot Ball
Long

41033 
Pivot Ball
Short

41074
2.5x20mm
BHCS

Build L and R

:: Rear Suspension Build - Step 4

Build L and R

41165
Shock Cap
Bushing


41073
2.5x14mm
BHCS

41073
2.5x14mm
BHCS

31522
2.5x10mm
BHCS

:: Drivetrain Build - Step 1**BAG 4****Build x2**

41038
Center
Driveshaft

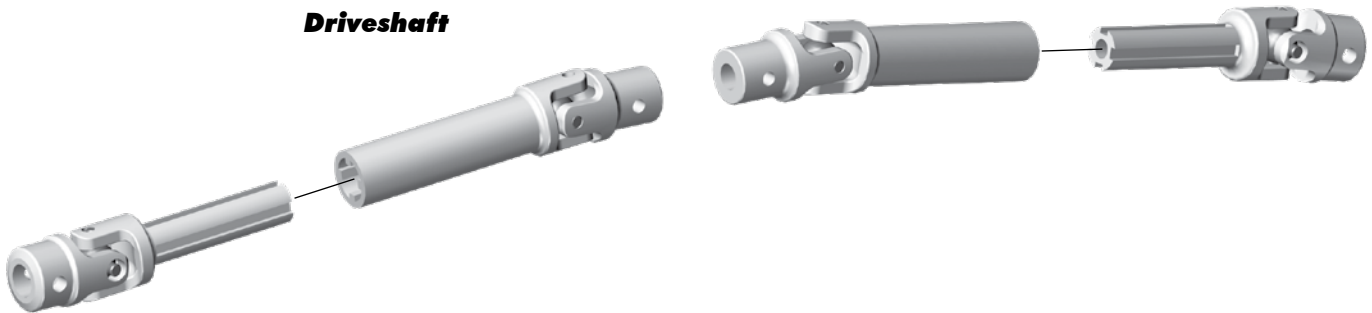**:: Drivetrain Build - Step 2**

41036
Main Drive
Gear Shaft

92137
5x7x0.2mm
Shim


Pin
2x8

41035
Main Drive
Gear


91560 
5x10x4mm
Bearing

41040 
Driveshaft
Set Screw
(Short)

41040 
Driveshaft
Set Screw
(Long)

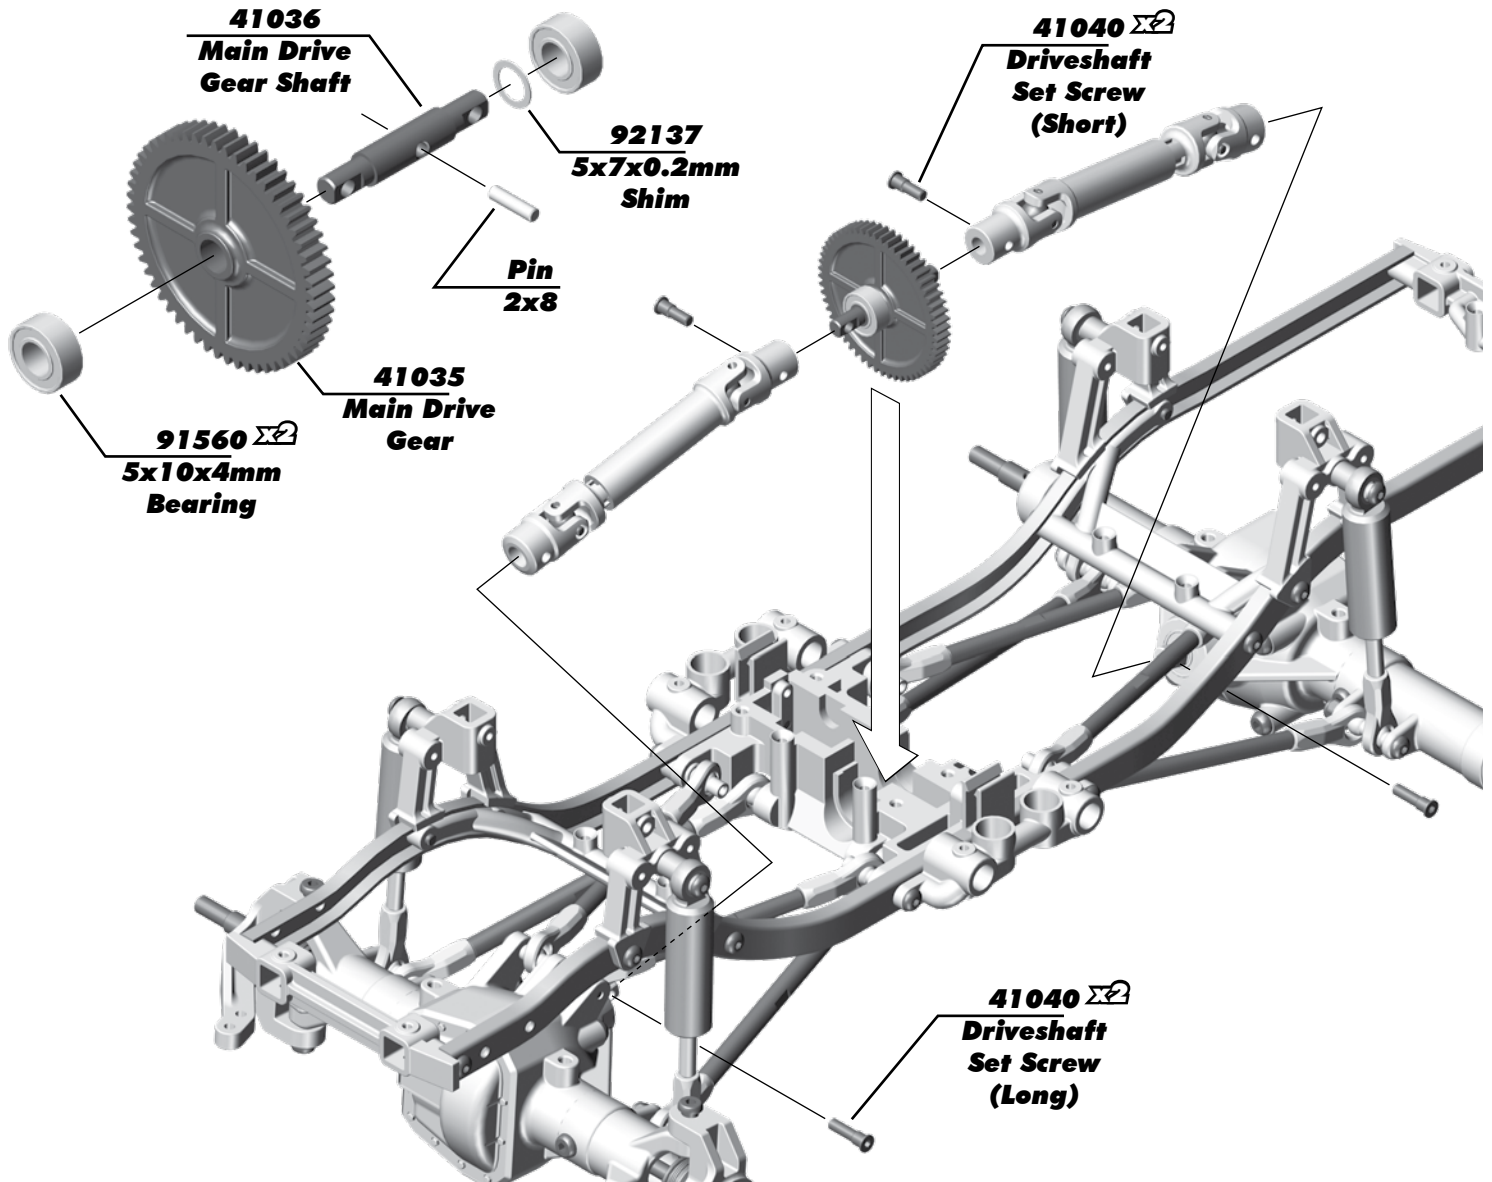


:: Drivetrain Build - Step 3

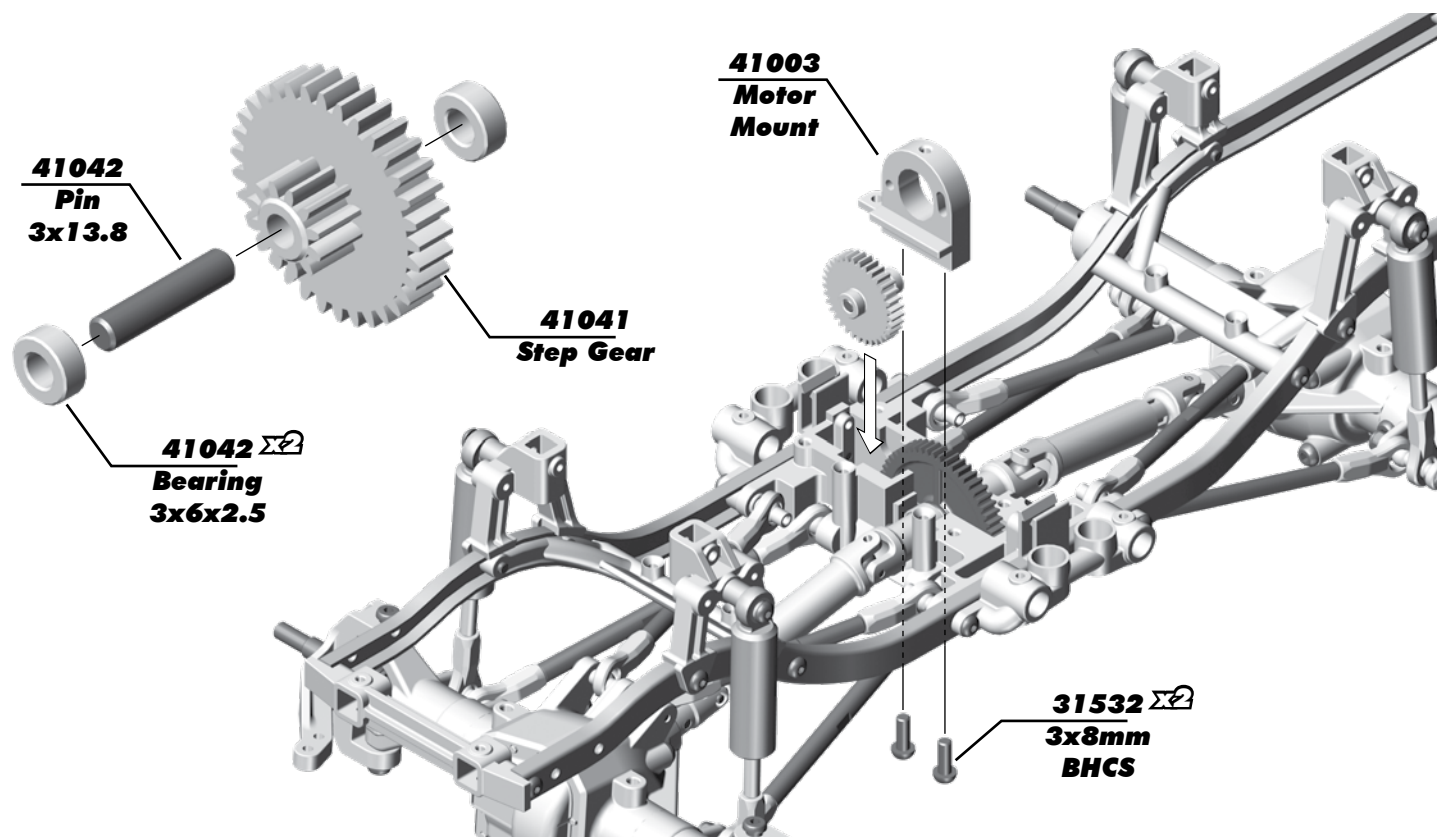


:: Electronics Build - Step 1


BAG 5

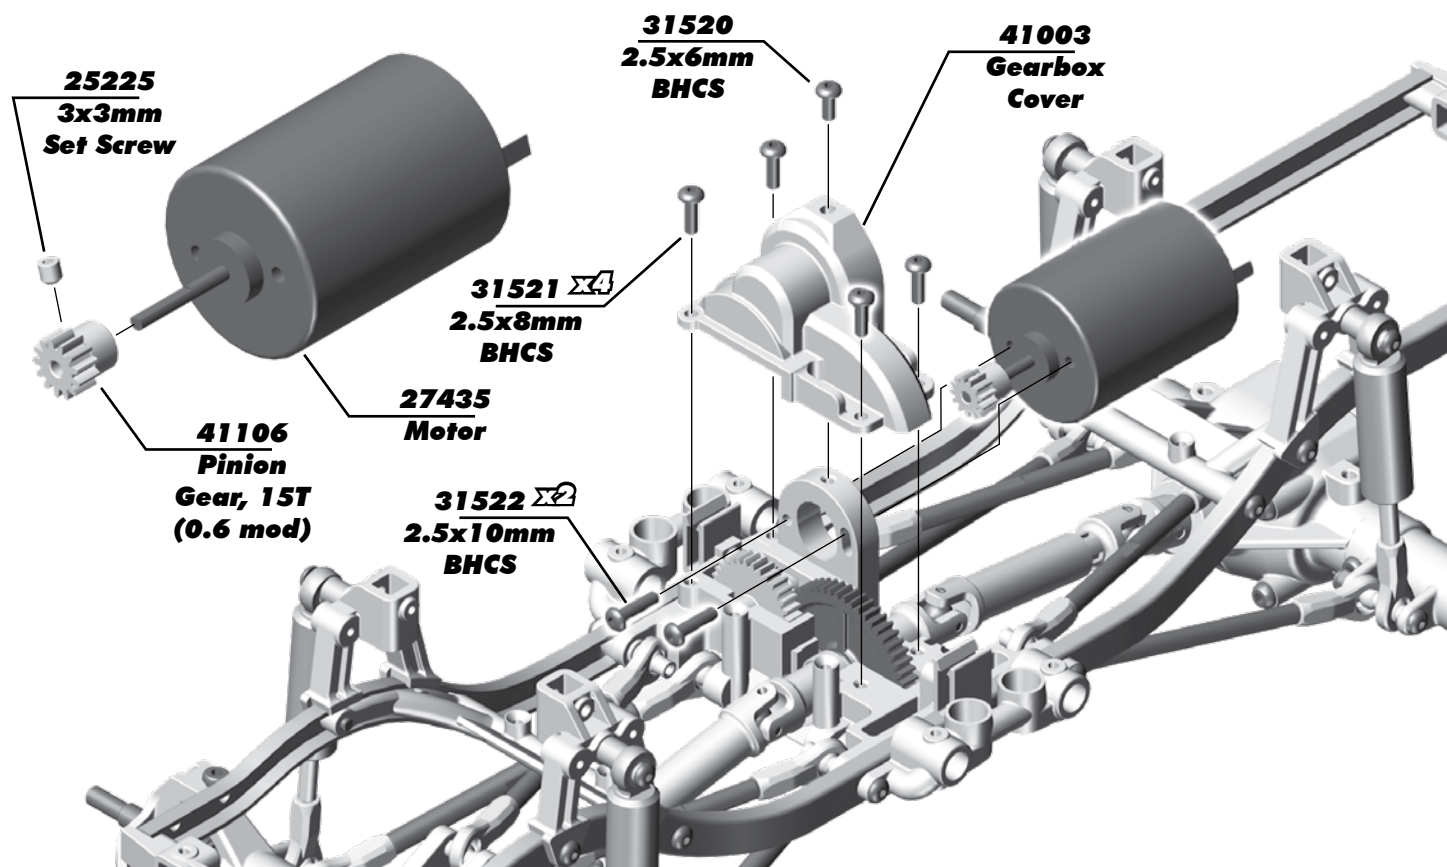


:: Electronics Build - Step 2

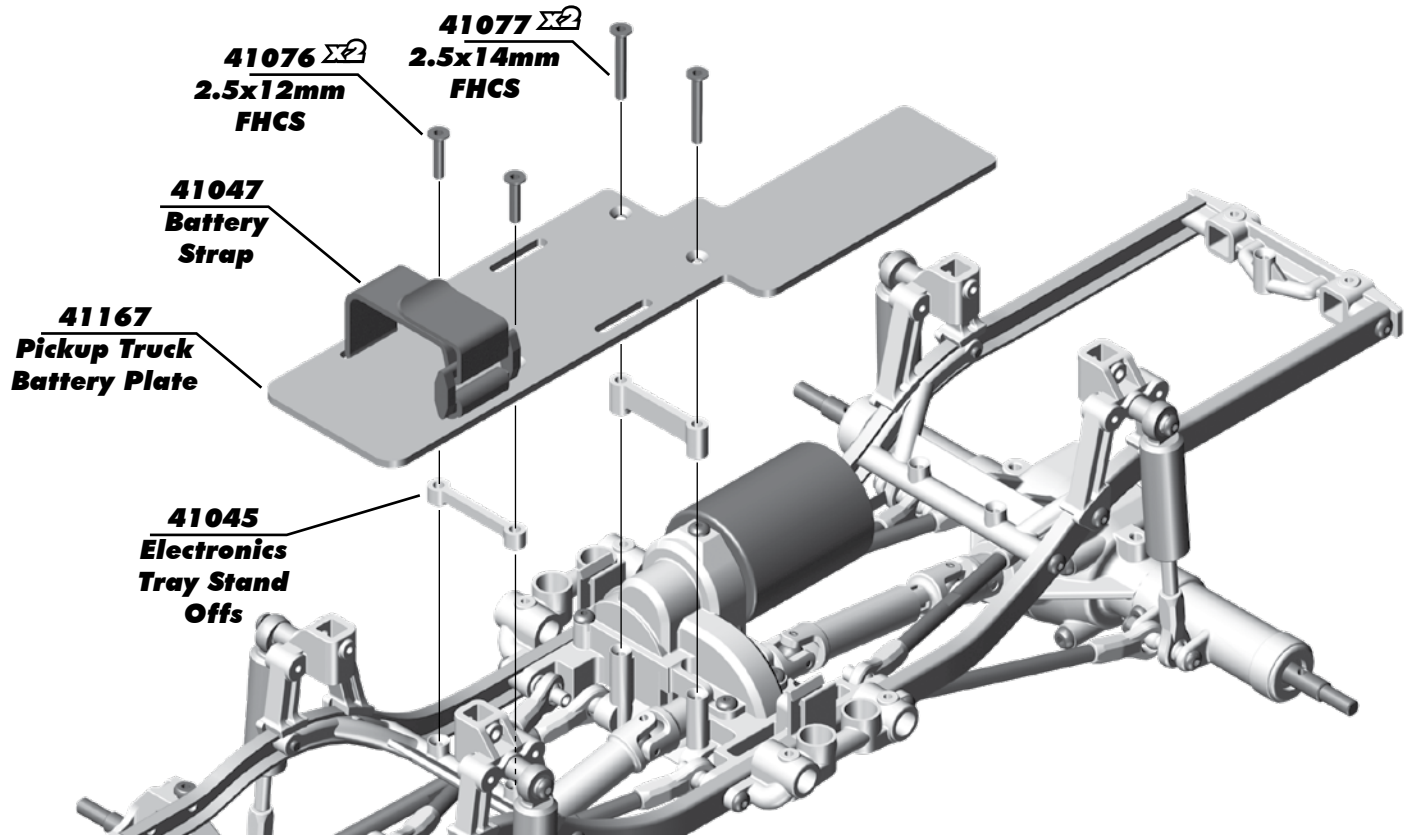


:: Electronics Build - Step 3

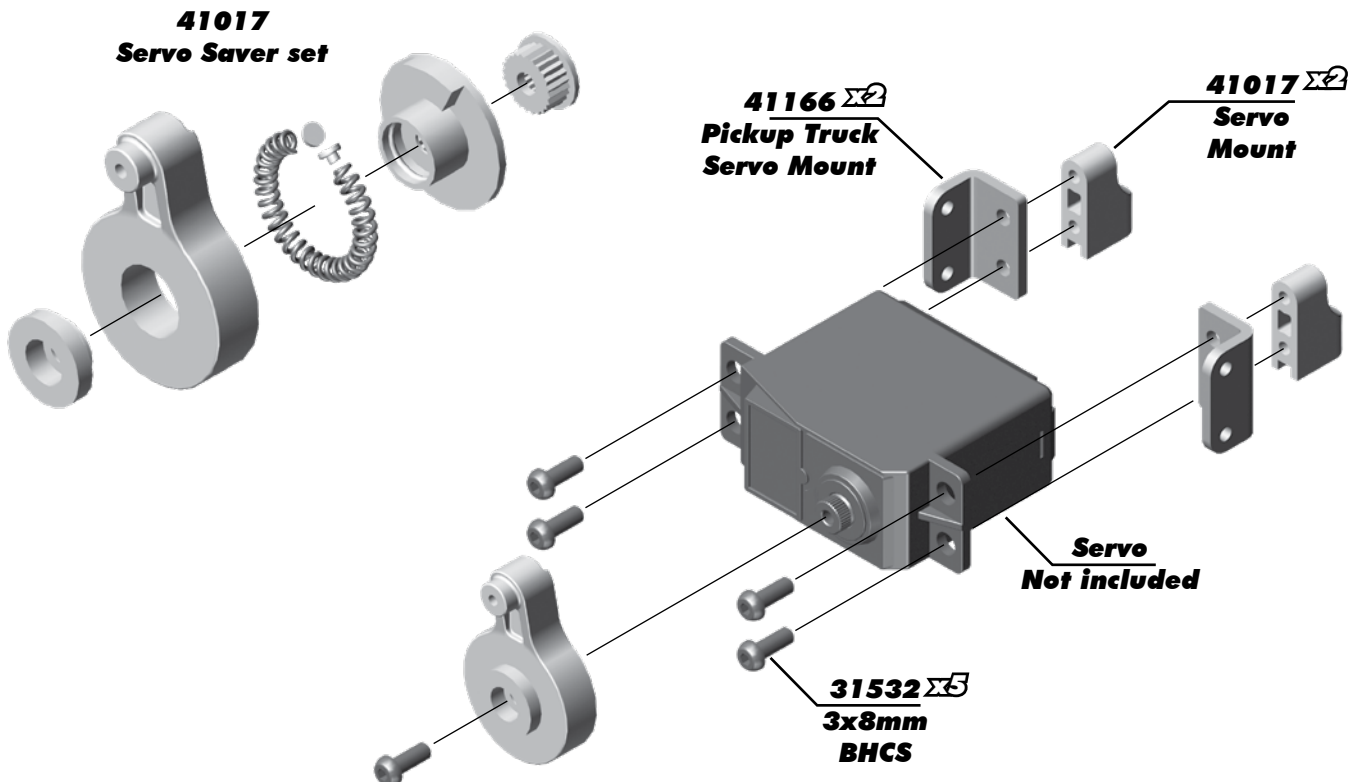

:: Electronics Build - Step 4

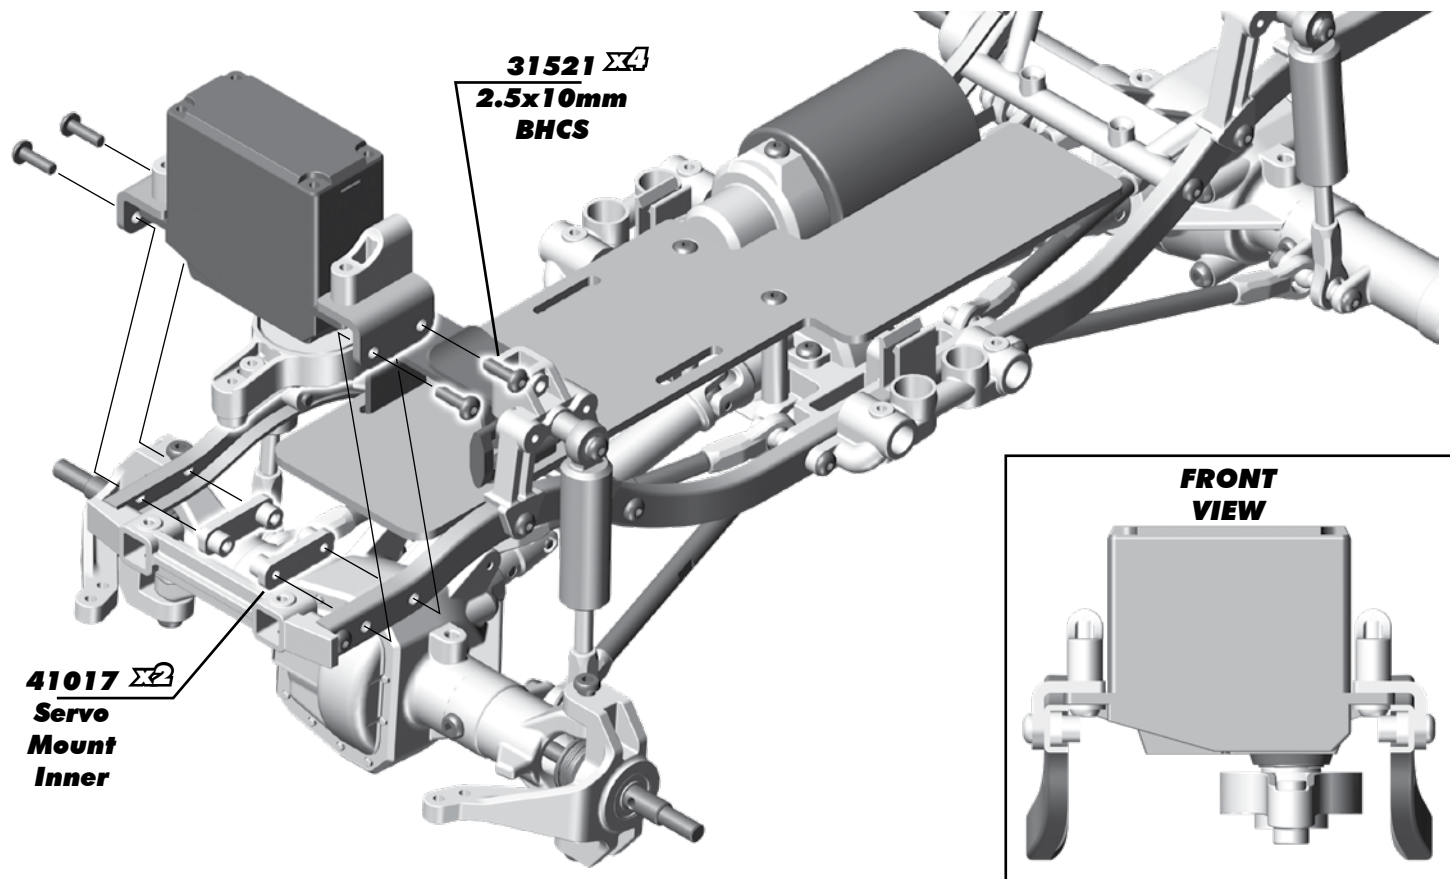


:: Steering Links - Step 5

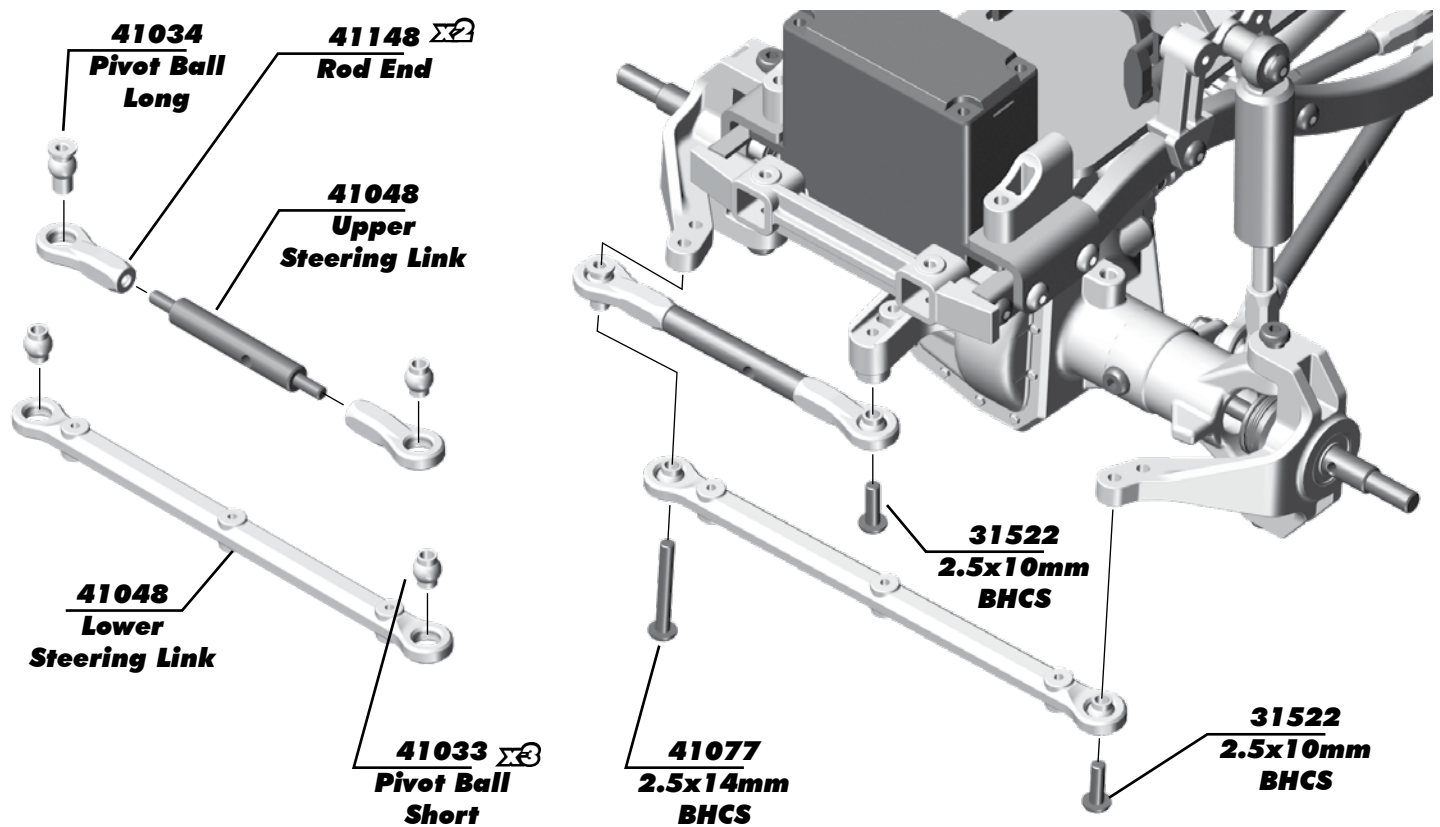


:: Electronics Build - Step 1


BAG 6

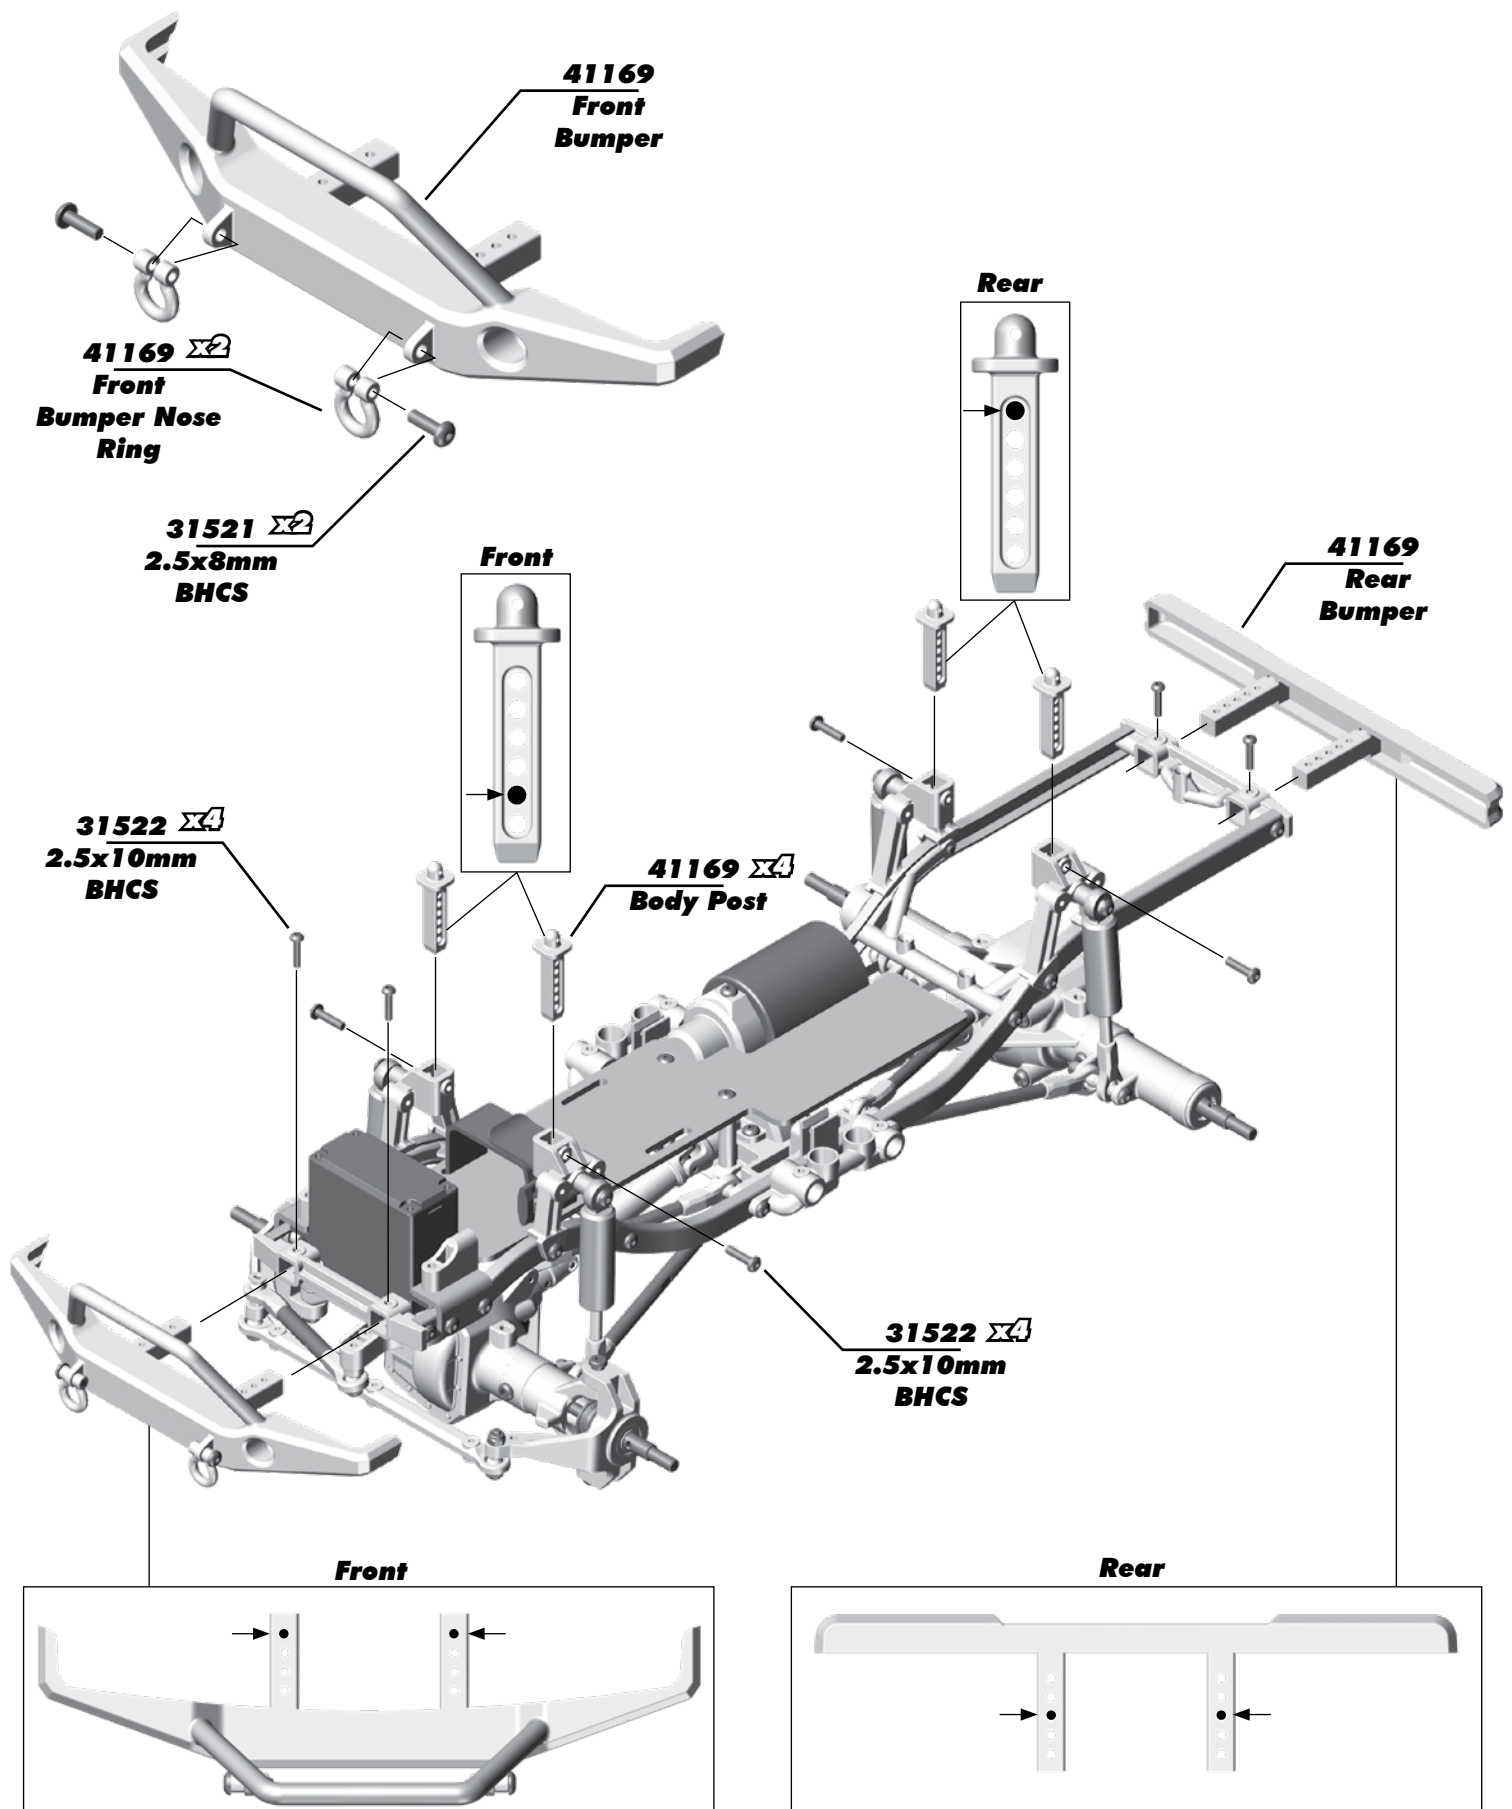


:: Electronics Build - Step 2

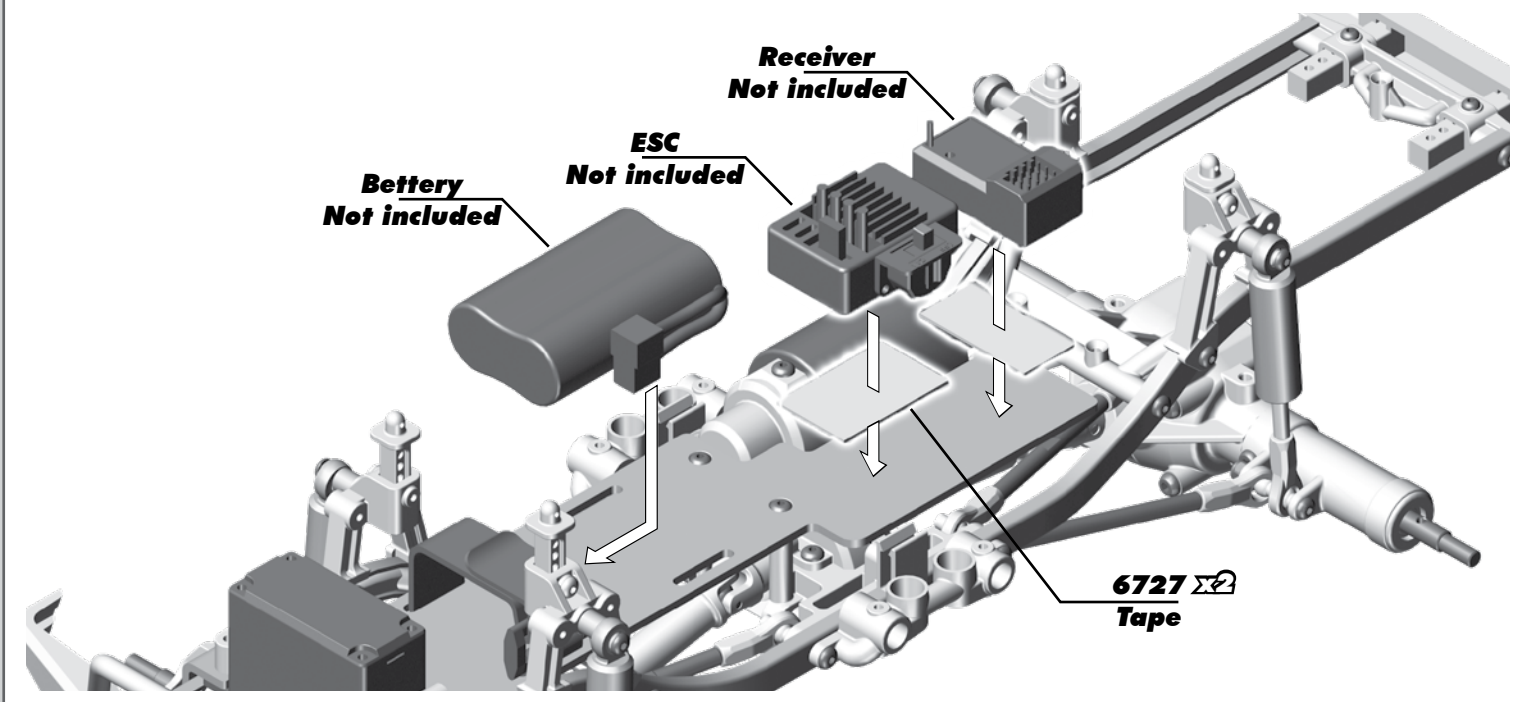


:: Tires and Body Build - Step 1

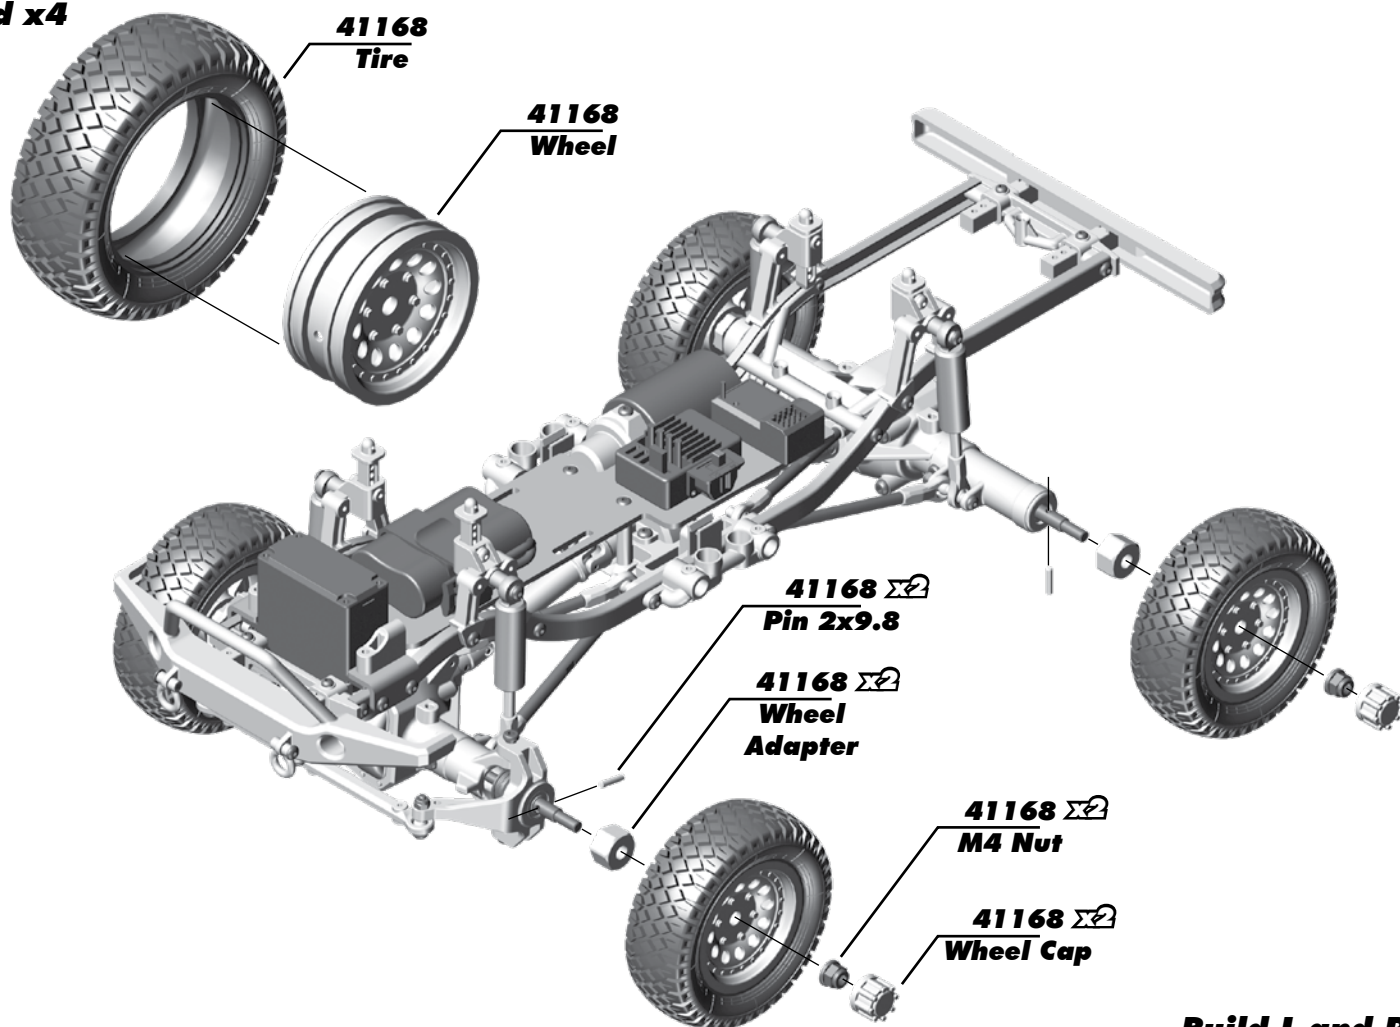BAG 7
Build x4

Build L and R

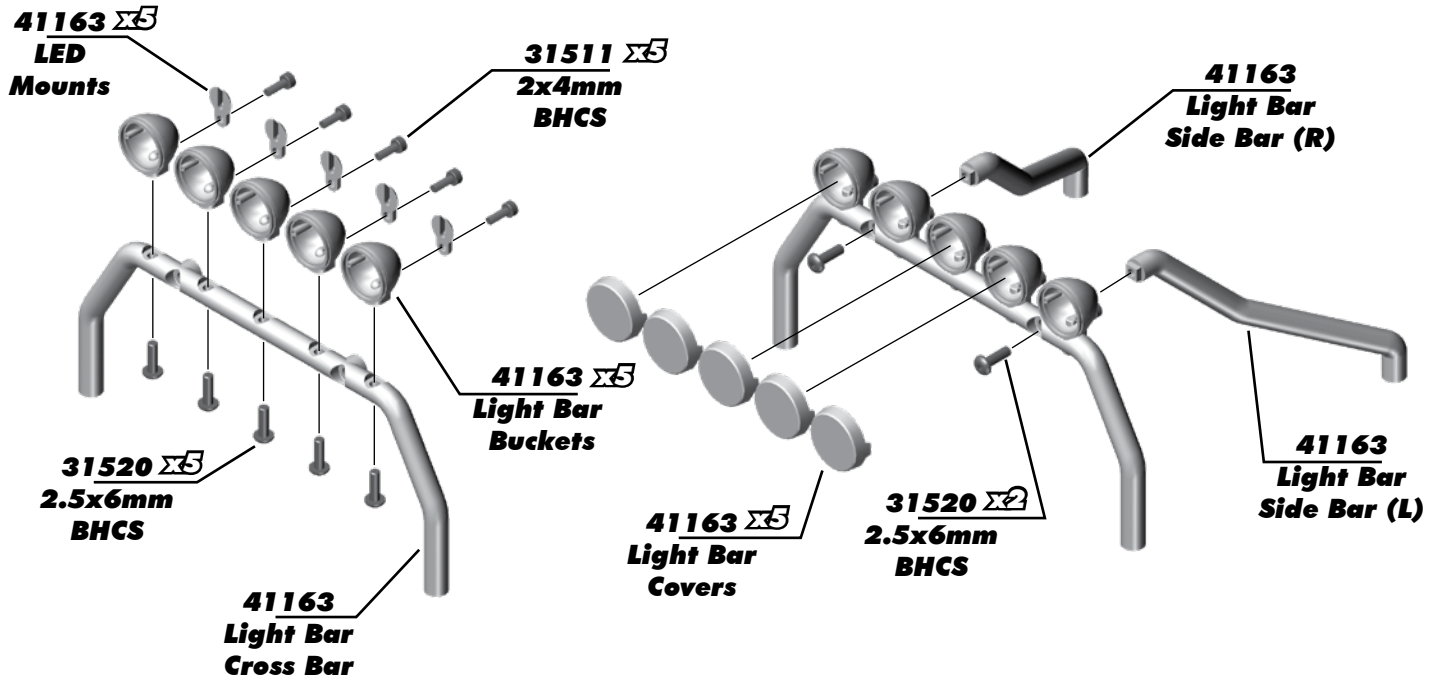:: Tires and Body Build - Step 2

BAG 6

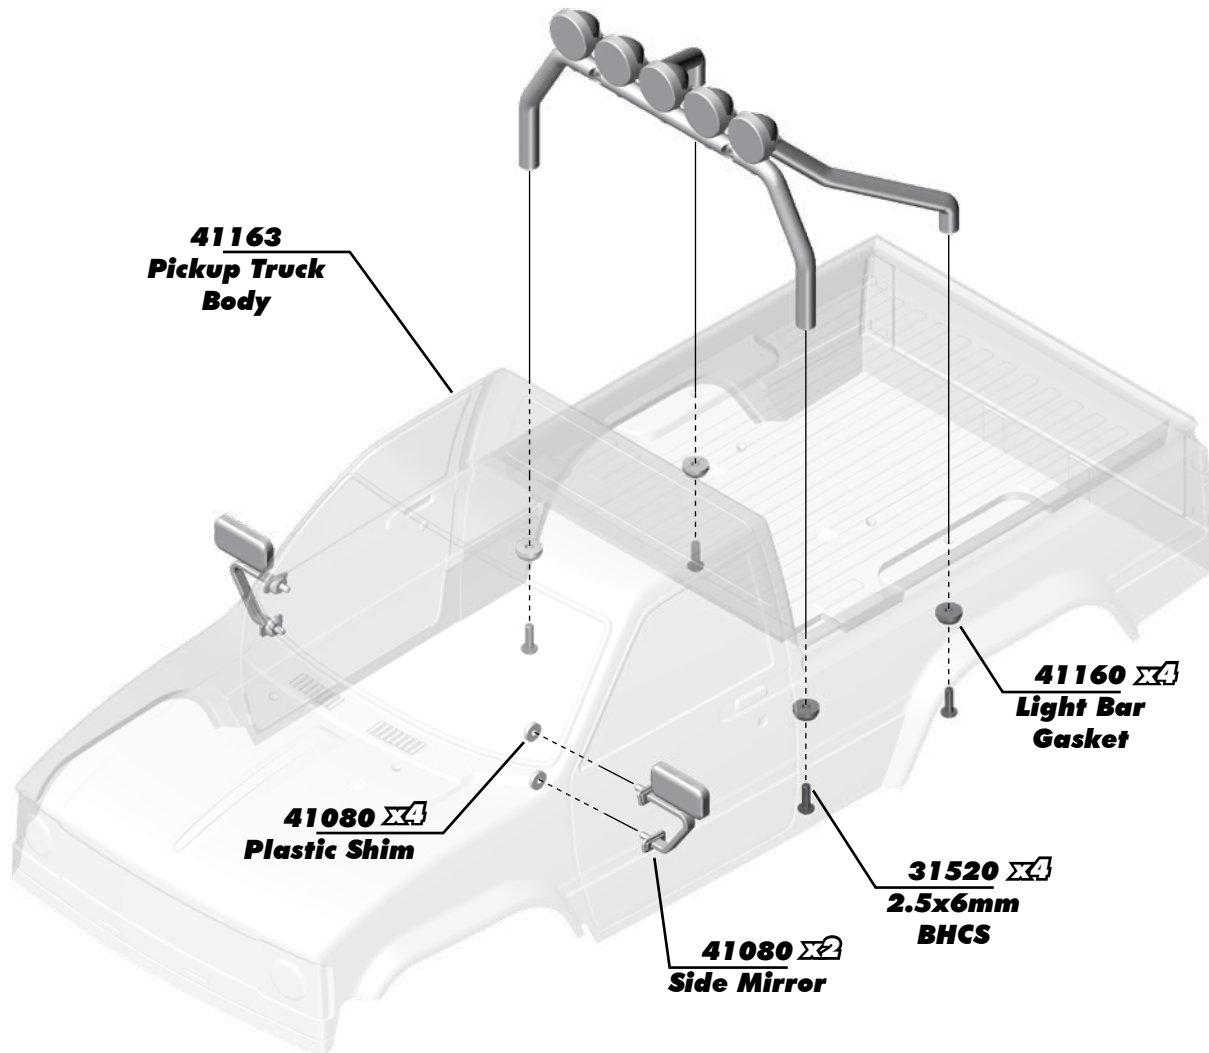
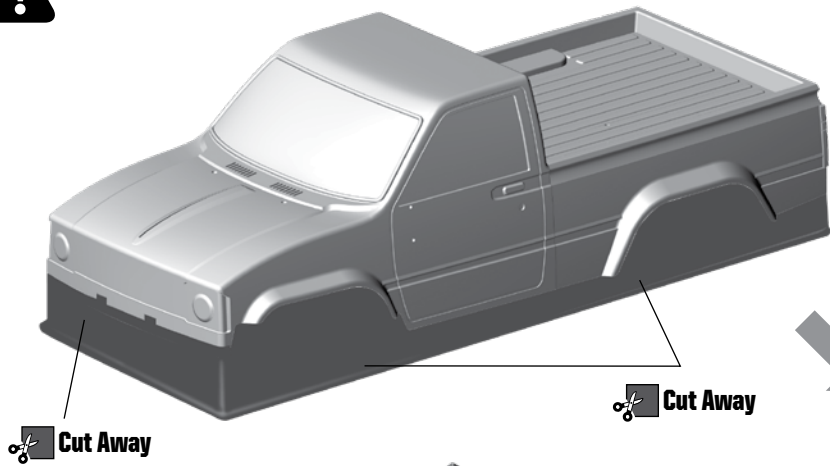
:: Tires and Body Build - Step 3



:: Tires and Body Build - Step 4



NOTE: Trim the deep gray portion




 **Drill hole
5mm x2**



 **Drill hole
3mm x2**




 **Drill hole
3mm x2**

 **Drill hole
5mm x2**

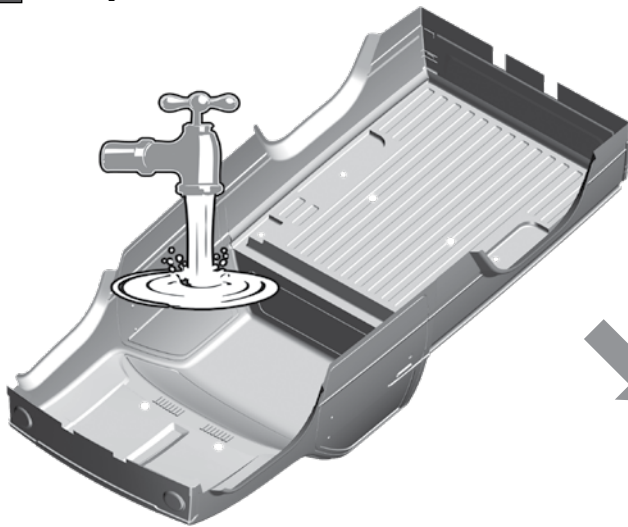

NOTE: Wash the body and dry it

**41163
Window Mask**

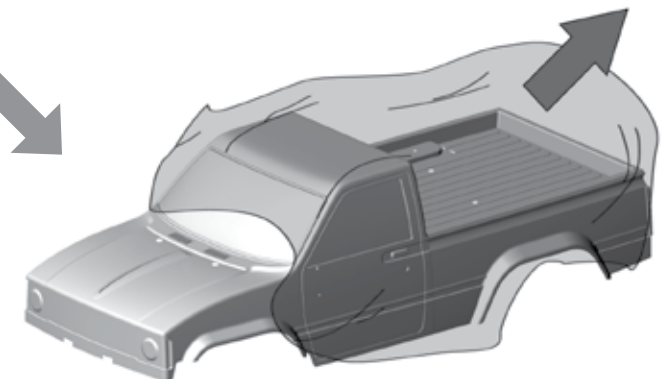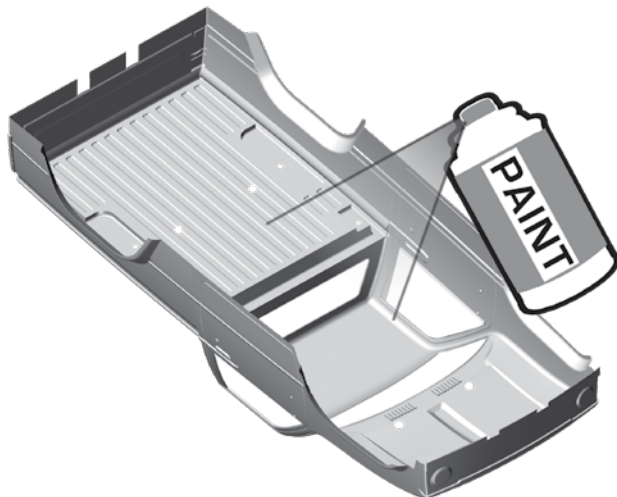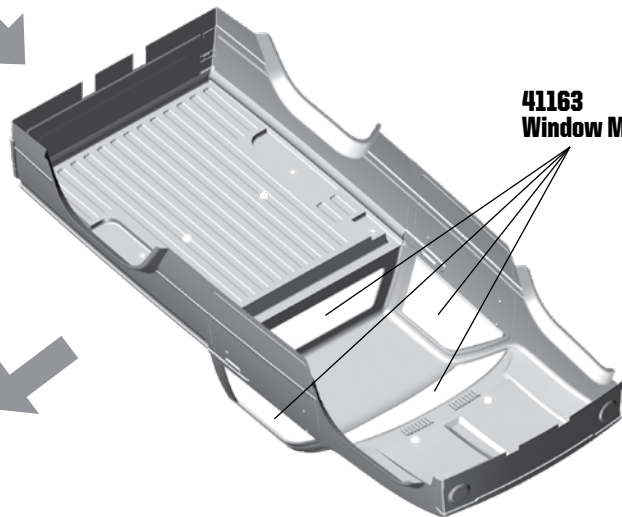


NOTE: Remove protective film before applying decals.


:: Tires and Body Build - Step 5



NOTE: Please follow the correct order when applying the decals

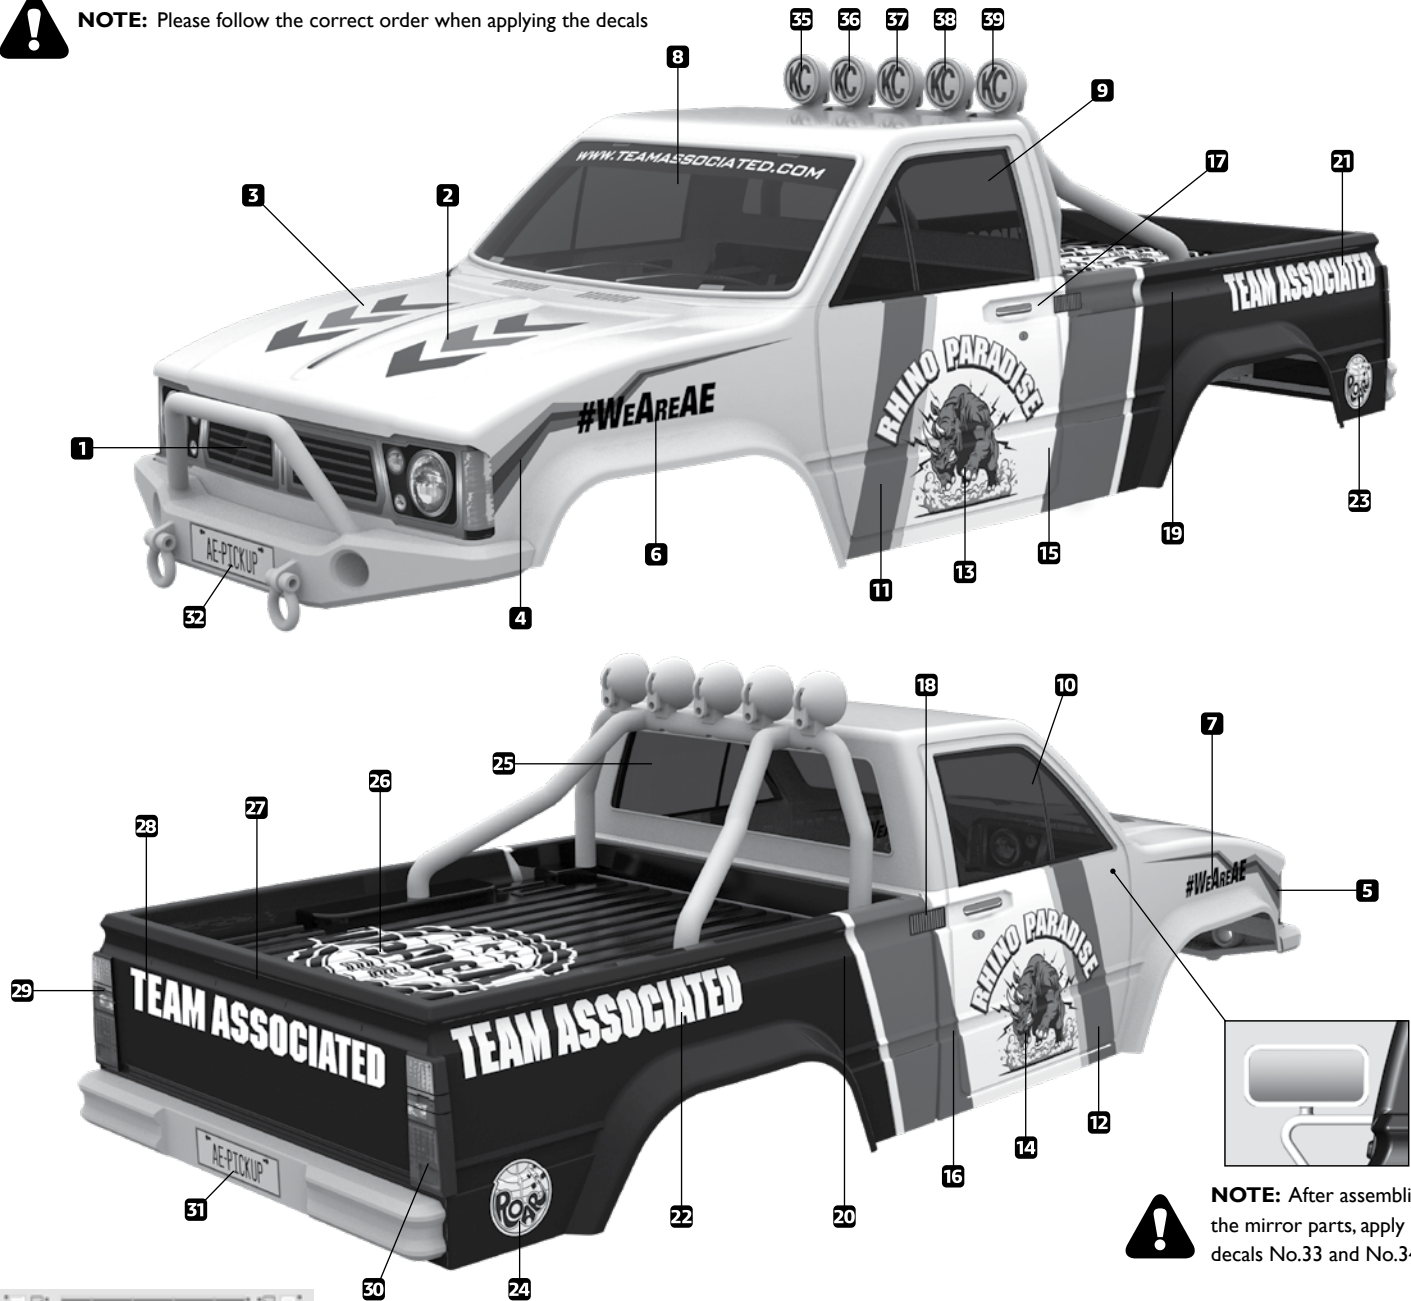



NOTE: After assembling the mirror parts, apply decals No.33 and No.34.

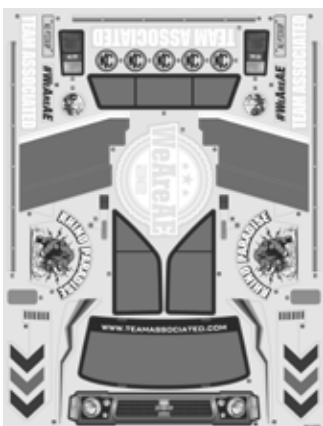

41163

Pickup Truck Body Decal

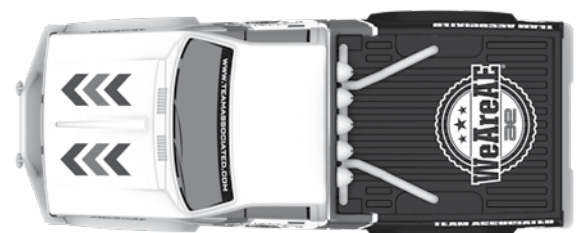

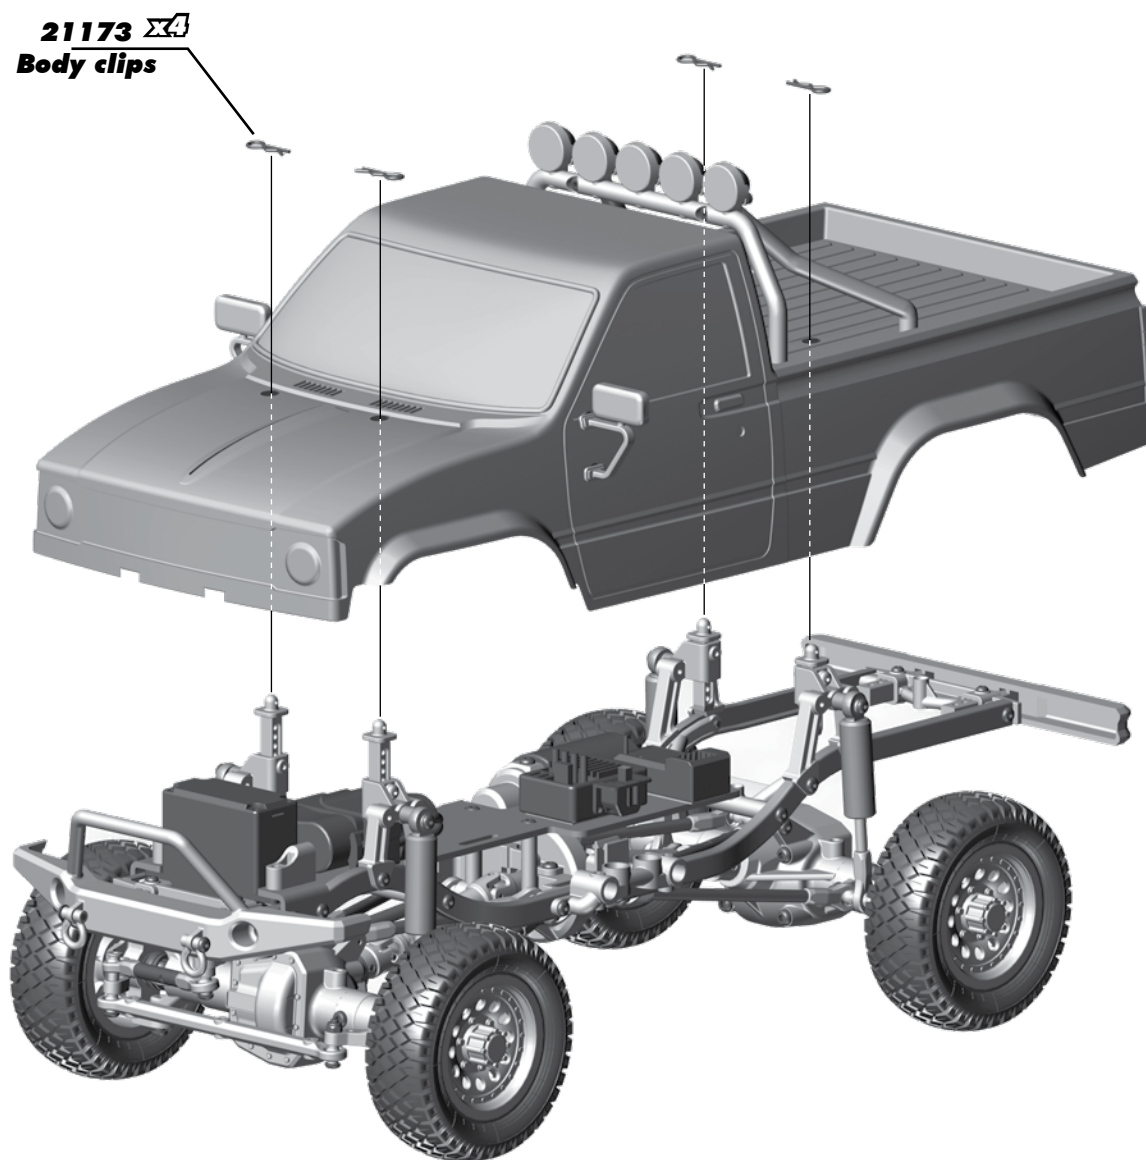:: **Body**

FIND IT ON ASSOCIATEDELECTRICS.COM



Vehicle Spare Parts

GO TO:

AssociatedElectrics.com ➡
Team Associated tab ➡
Cars & Trucks ➡
Scroll to your vehicle ➡
Parts & Accessories link



Setups and Manuals

GO TO:

AssociatedElectrics.com ➡
Team Associated tab ➡
Manuals & Setups ➡
Scroll to your vehicle



Tuning Guides & Tips

GO TO:

AssociatedElectrics.com ➡
Support ➡
A-Team Apps



Associated Electrics, Inc.

21062 Bake Parkway Lake Forest, CA 92630 USA

call: (949) 544-7500 - fax: (949) 544-7501


**Check out the following web sites for all of our kits, current products,
new releases, setup help, tips, and racing info!**

www.AssociatedElectrics.com

FOLLOW US ON SOCIAL MEDIA



TeamAssociated
ReedyPower
ElementRC
Factory Team

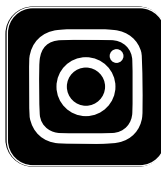

@TeamAssociatedRC
@ReedyPower
@Element_RC
@FactoryTeam_RC



@Team_Associated
@ReedyPower



@Associated_Electrics