

RC10

BLUE EDITION

FACTORY TEAM

1:10 Scale 2WD Electric Off Road
Competition Buggy Kit



TEAM ASSOCIATED



1:10 Scale 2WD Electric Off Road Competition Buggy Kit Manual

#6058 RC10 Factory Team Blue Edition Buggy Kit



CHAMPIONS *by* DESIGN

AssociatedElectrics.com

TEAM ASSOCIATED

⚙ Introduction

Thank you for purchasing this Team Associated product. This assembly manual contains instructions and tips for building and maintaining your new vehicle. Please take a moment to read through the manual and familiarize yourself with the steps. We are continually changing and improving our designs; therefore, actual parts may appear slightly different than the illustrations. New parts will be noted on supplementary sheets located in the appropriate parts bags.

Check each bag for these sheets before you start to build.

Check www.AssociatedElectrics.com for the latest versions of our instruction manuals.

⚙ RC10 FT Kit Features

- New Factory Team vintage body
- Factory Team carbon fiber front shock tower (big bore compliant)
- All new Factory Team carbon fiber lower CG rear shock tower (big bore compliant)
- New rear shock tower integrates B6 rear wing mount
- B6 rear wing mount included
- Factory Team 12mm hex front steering block
- Factory Team 12mm hex front axle
- Factory Team 12mm Hex rear CVA's included
- 12mm Hex B7 wheels included
- B7 Servo mount included
- Heavy Duty Metric Ball Studs
- Carbon fiber transmission brace
- Heavy Duty Ball Cups and 3.5mm adjustable turnbuckles
- New Factory Team captured hinge pins
- Kashima coated 13mm big bore factory team shocks included
- All Black plastics
- Full ball bearings included
- New Blue anodized chassis, noseplate, and motorplate
- Clear RC10 B7 wing included
- New Factory Team vintage logo decal sheet
- V2 slipper system included
- Independent suspension with durable long front arms and refined geometry
- World's Car bellcrank steering
- Body hook and loop tape to side of chassis

⚙ Additional

Your new kit comes unassembled and requires the following items for completion (refer to www.AssociatedElectrics.com and www.Reedypower.com for suggestions):

- | | |
|--|--|
| • R/C two channel surface frequency radio system | • 2 cell LiPo battery pack |
| • AA-size batteries for transmitter | • Polycarbonate specific spray paint |
| • Electronic Speed Control ("ESC") | • Cyanoacrylate glue ("CA") (#1697) |
| • Steering servo | • Thread locking compound (#1596) |
| • R/C electric motor (540 size) | • Tires and Inserts, Fronts and Rears |
| • Pinion gear (48P), size determined by type/turn or kV of motor | • Wheels w/12mm Hex |
| • Battery charger (a peak detection charger, or LiPo compatible charger) | Front Wheels #9690 (white), #9691 (yellow) |
| | Rear Wheels #9695 (white), #9696 (yellow) |
| | • Slim Front Wheels w/12mm Hex (carpet/astro turf) |
| | #91757 (white) #91758 (yellow) |

⚙ Other Helpful Items

- | | |
|--|----------------------------------|
| • Silicone Shock Fluid (Refer to AssociatedElectrics.com for complete listings) | • Green Slime shock lube (#1105) |
| • FT Turnbuckle Wrench, 4mm (#1112) | • Shock Pliers (#1681) |
| • FT Body Reamer (#1499) | • Wire Cutters |
| • FT Hex/Nut Wrenches 11/32" (#1519) | • Hobby Knife |
| • FT Ballcup Wrench (#1579) | • Needle Nose Pliers |
| • FT Universal Tire Balancer (#1498) | • FT Body Scissors (#1737) |
| • Calipers or a Precision Ruler | • Soldering Iron |


Associated Electrics, Inc.
21062 Bake Parkway.
Lake Forest, CA 92630



Customer Service
Tel: 949.544.7500
Fax: 949.544.7501

:: Hardware - 1:1 Scale View


Cap Head (shcs)

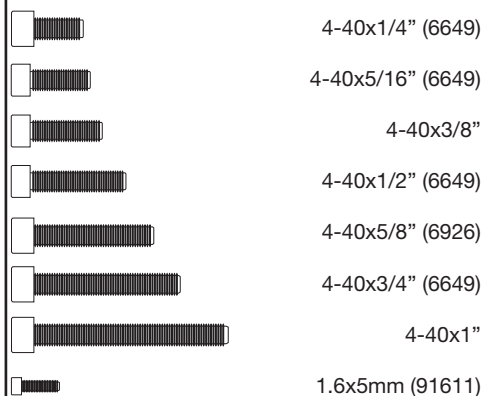


Flat Head (fhcs)




Button Head (bhcs)

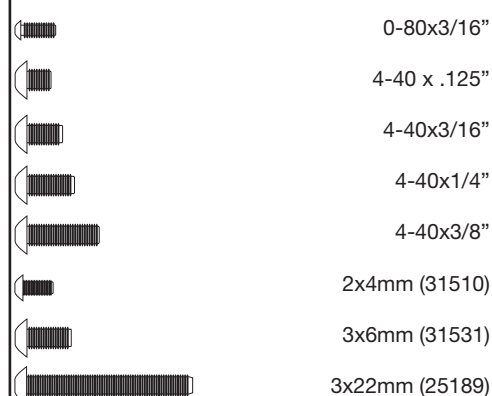


Shims and Washers

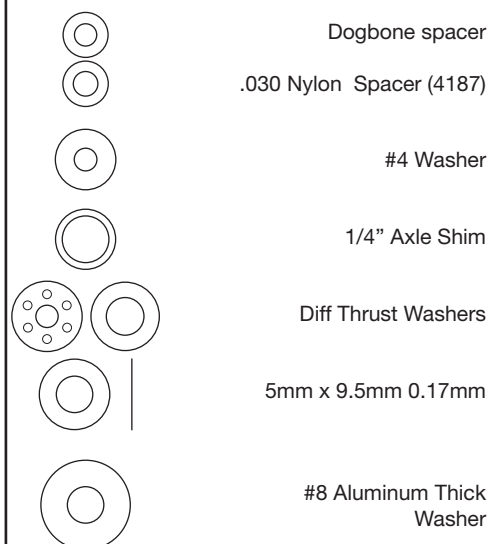

Nuts (lock/plain)

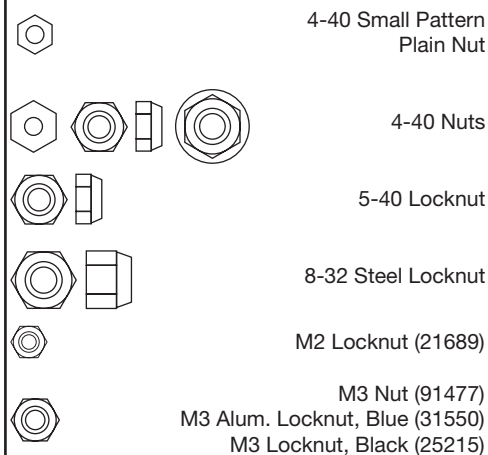

Ball Bearings

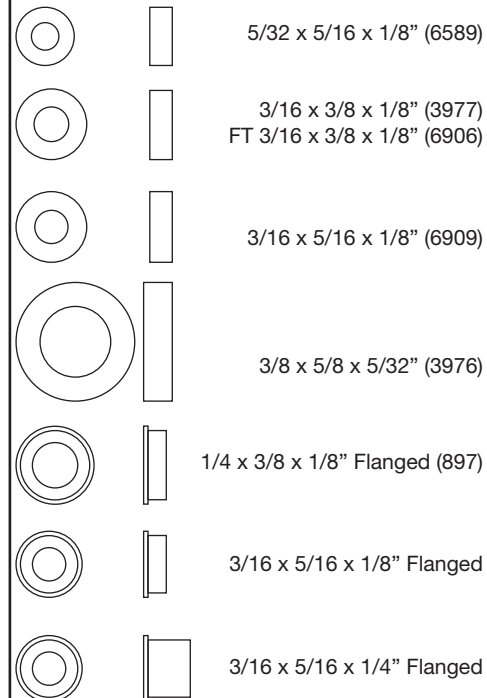

Set Screws



Diff Balls



Notes:

Ballstuds

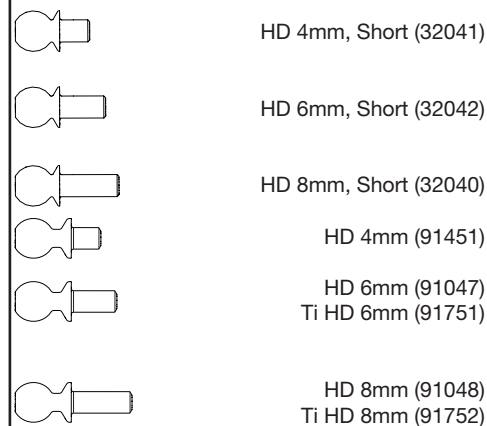


Table of Contents

1.....	Cover	11.....	Turnbuckles Build (Bag F)
2.....	Introduction	13.....	Shocks Build (Bag G)
3.....	1:1 Hardware “Fold Out”	15.....	Chassis Build (Bag H)
4.....	Table of Contents	16.....	Steering Servo Build (Bag I)
5.....	Nose Plate / Steering Build (Bag A)	17.....	Wing Mount / Wheels / Body / Accessories Install (Bag J)
6.....	Front Suspension Build (Bag B)	19.....	Painting Tips and Notes
7.....	Transmission Build (Bag C)	20.....	Kit Setup Sheet
9.....	Rear Bulkhead Build (Bag D)	21.....	Blank Setup Sheet
10.....	Rear Suspension Build (Bag E)	22.....	Back Cover

Notes



This symbol indicates a special note or instruction in the manual.

x2

This symbol indicates the number of the same part that is required.

2

This symbol indicates the order within a step to assemble parts.




This symbol indicates there are optional FT parts available




This symbol indicates a Racers Tip.



This symbol indicates where Thread Lock Adhesive should be applied. *not included

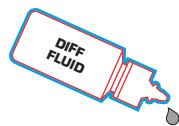

This symbol indicates where Diff Fluid should be applied.

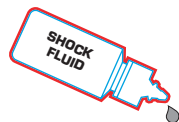

This symbol indicates where Shock Fluid should be applied.



This symbol indicates where FT Silicone Grease should be applied. *not included



This symbol indicates where FT Diff Lube should be applied. *not included



This symbol indicates where Black Grease should be applied.




This symbol indicates where Green Slime can be applied. *not included




There is a 1:1 hardware foldout page in the front of the manual. To check the size of a part, line up your hardware with the correct drawing until you find the exact size. Each part in the foldout has a number assigned to it for ordering replacement parts.


:: Nose Plate / Steering Build - Bag A - Step 1

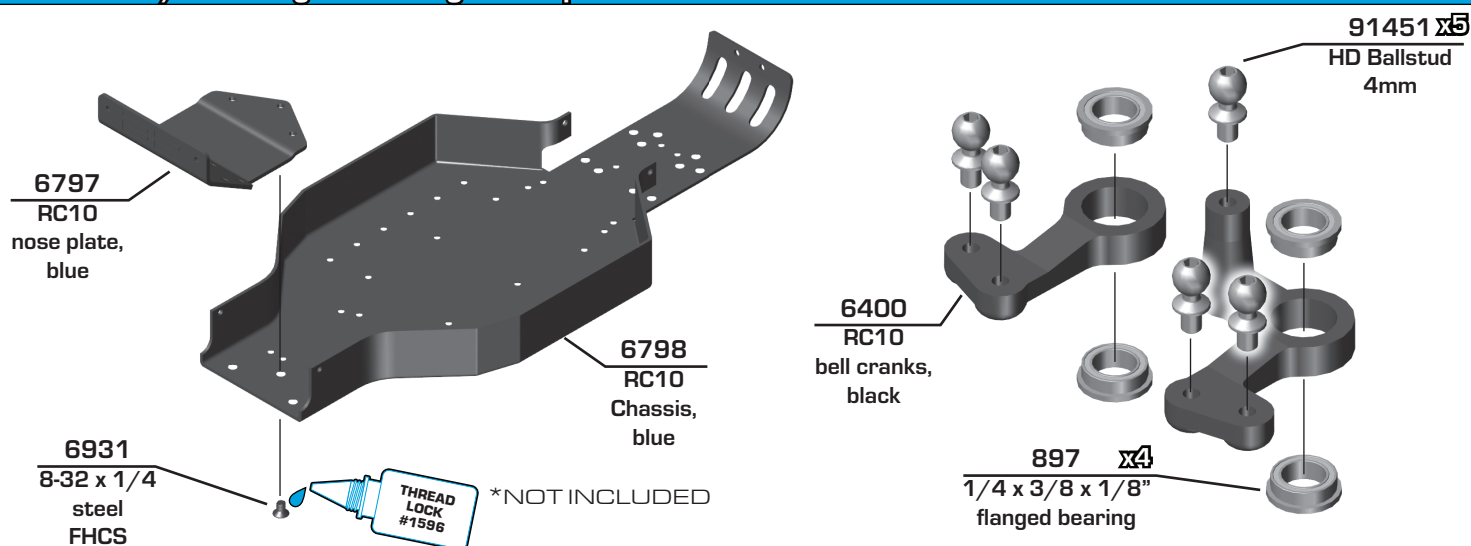

:: Nose Plate / Steering Build - Bag A - Step 2

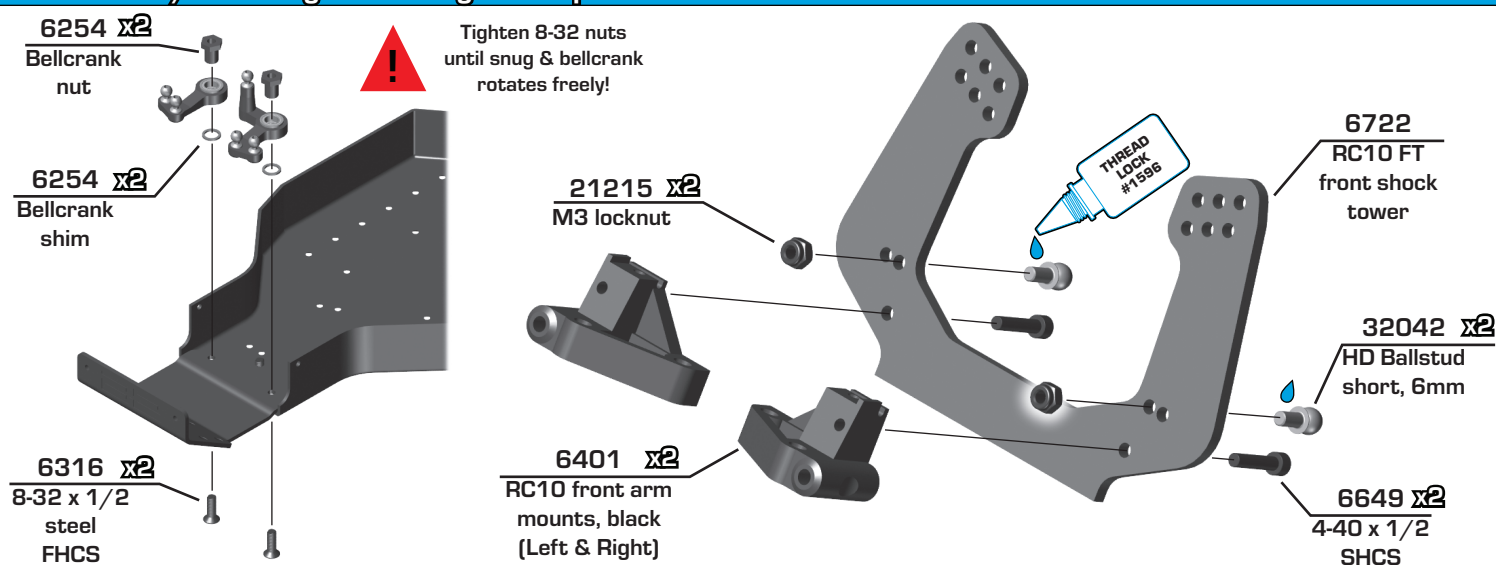


:: Nose Plate / Steering Build - Bag A - Step 3

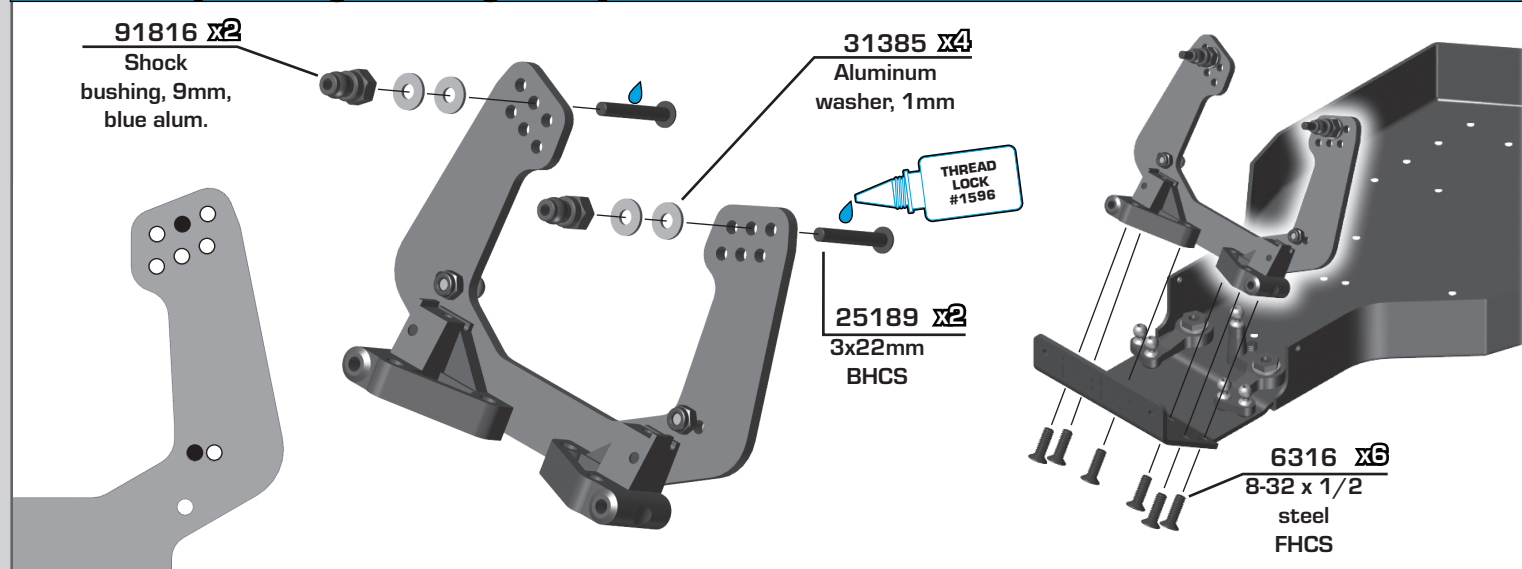


Front Suspension Build - Bag B - Step 1


Left side shown

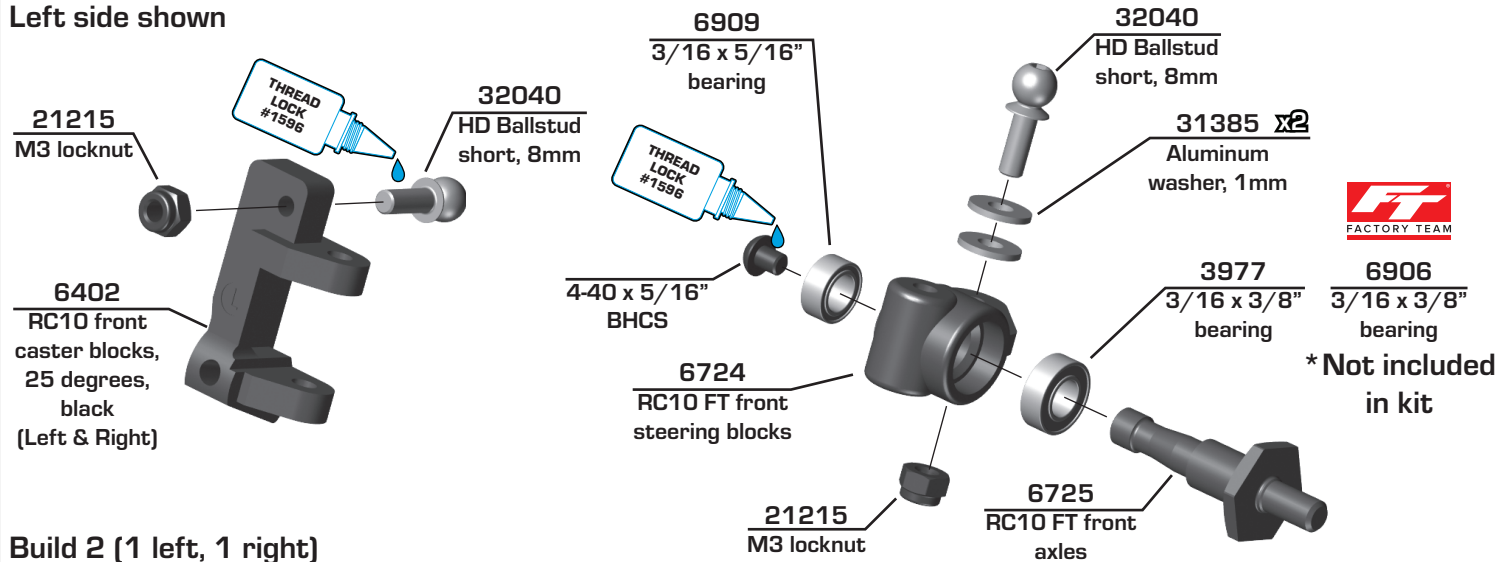


Front Suspension Build - Bag B - Step 2

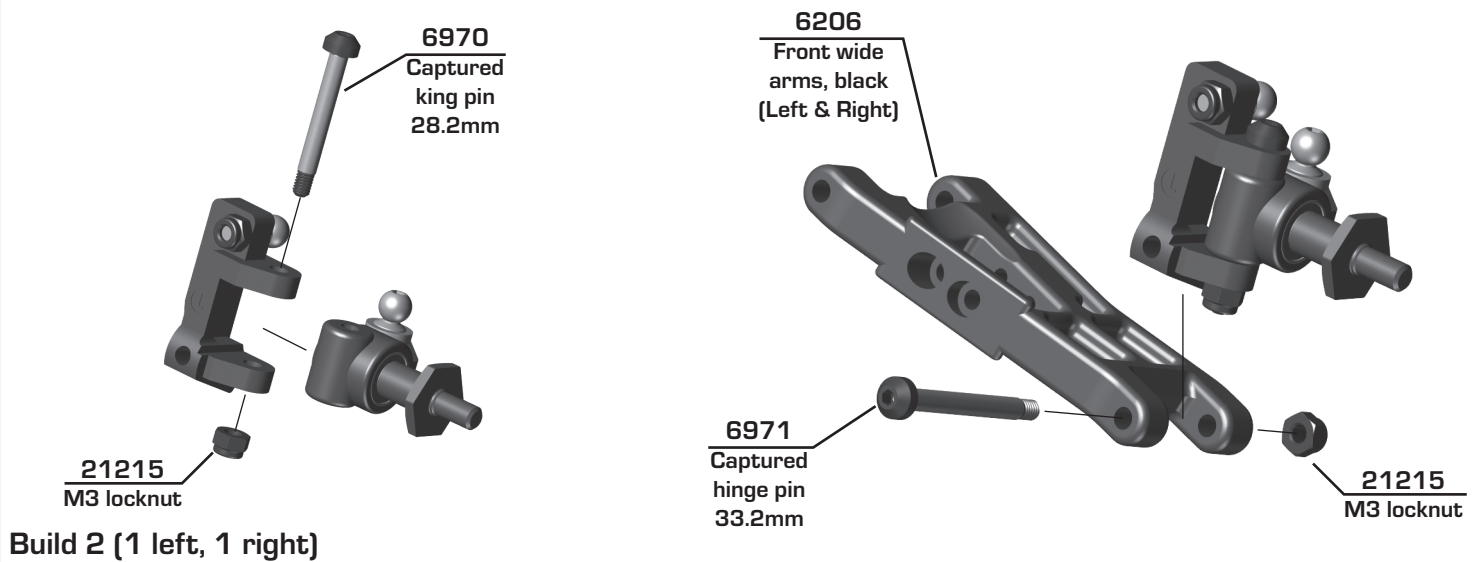


Front Suspension Build - Bag B - Step 3

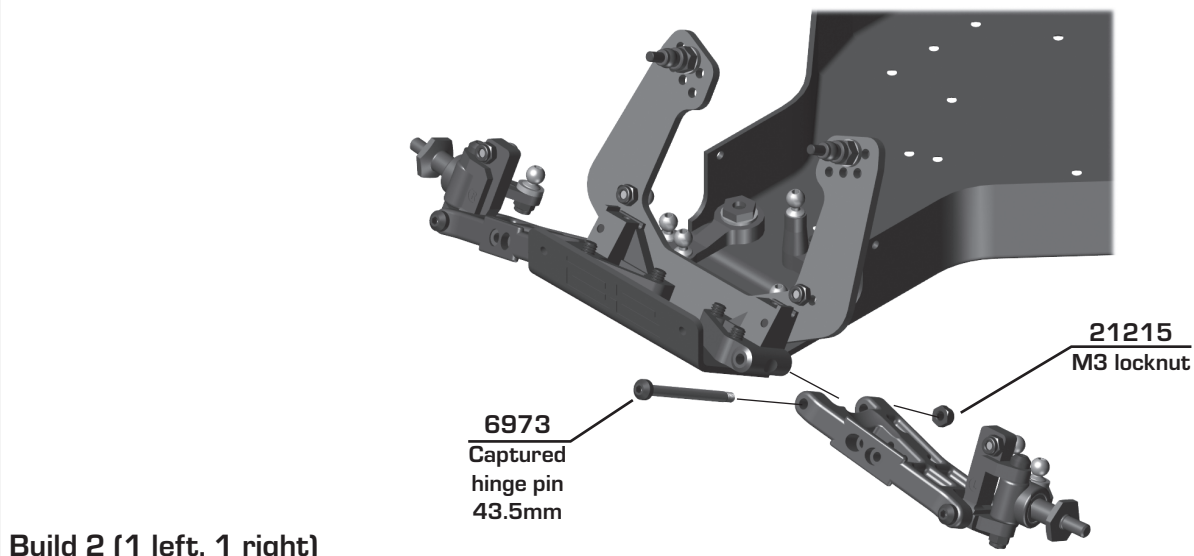


:: Transmission Build - Bag C - Step 1

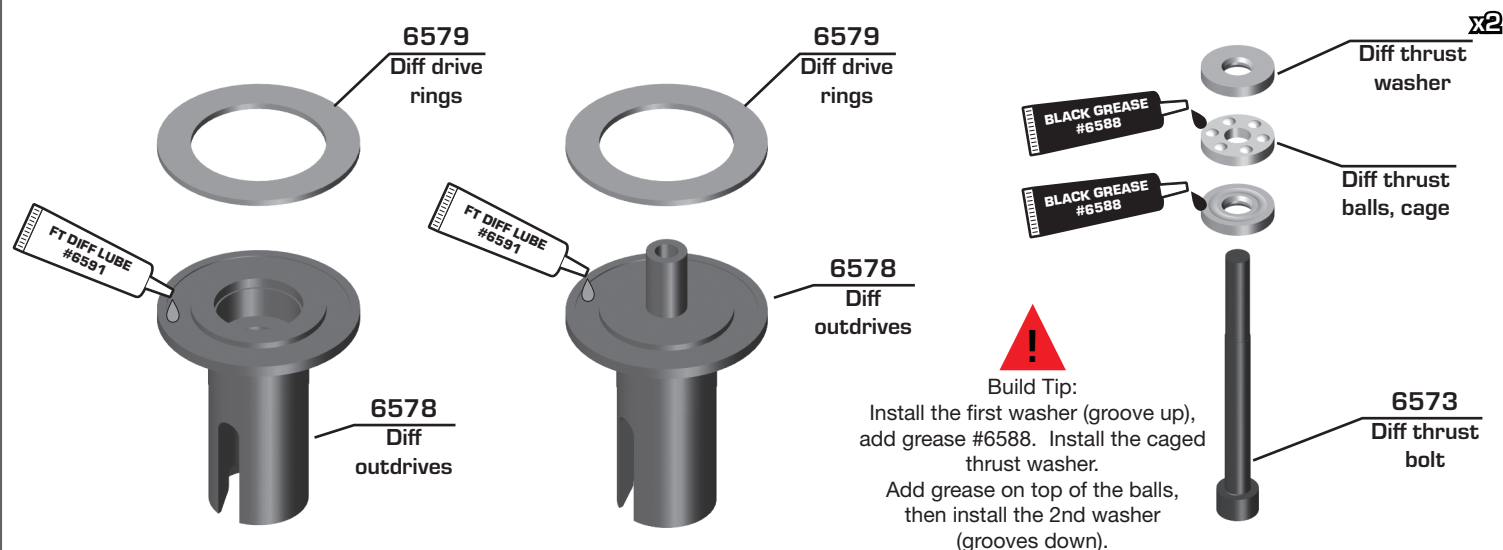

:: Transmission Build - Bag C - Step 2

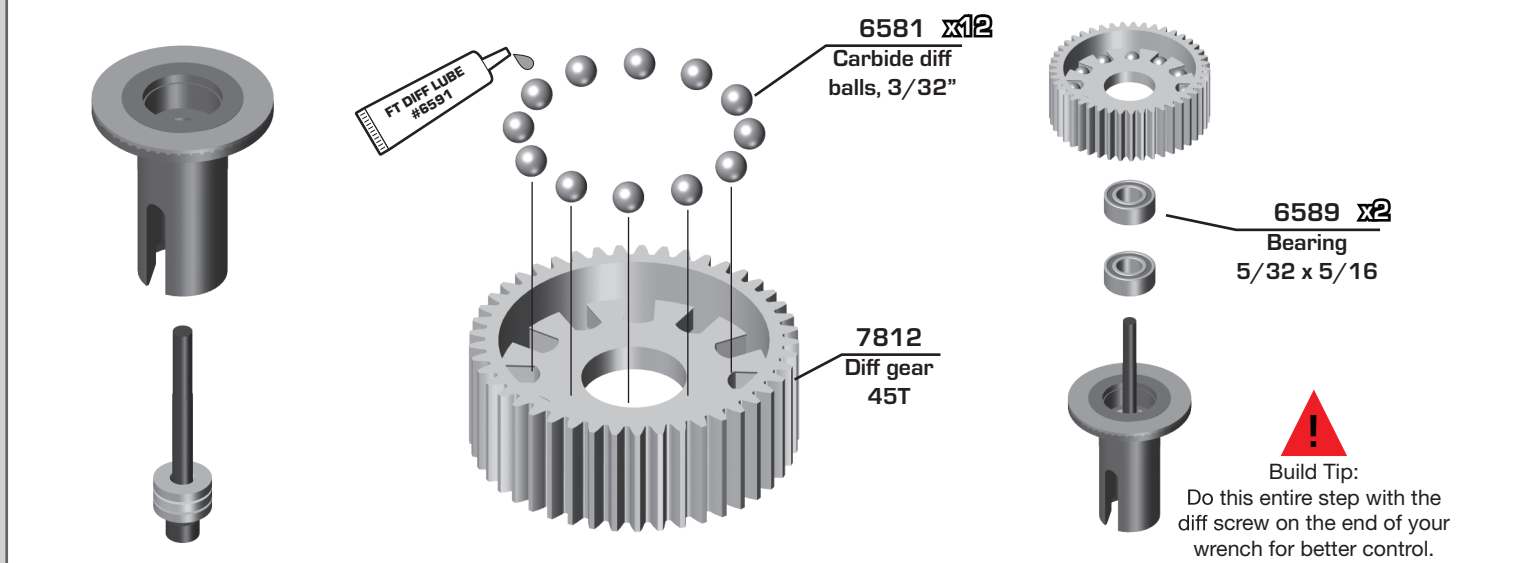


:: Transmission Build - Bag C - Step 3

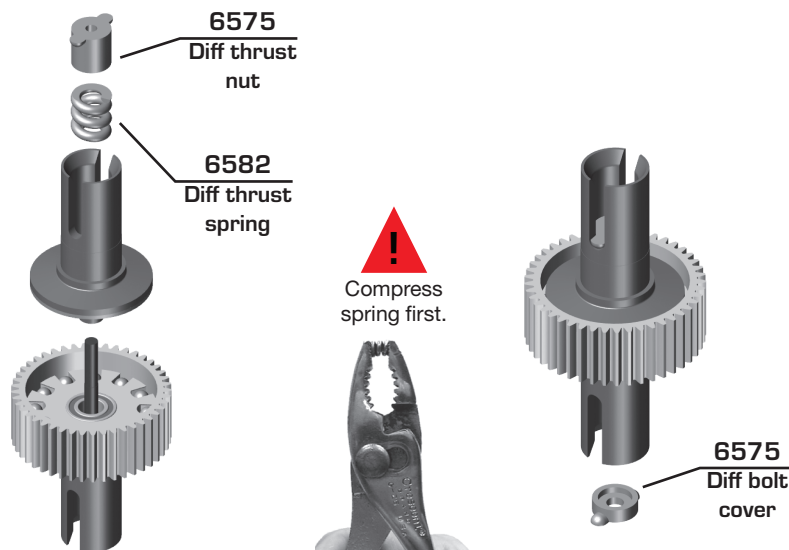

As you tighten the diff bolt, you will notice the T-nut ears moving closer to the bottom of the outdrive slot. This compresses the spring behind the T-nut. The spring should be completely compressed at the time the T-nut reaches the end of the slot.

Caution! Pay close attention to the feeling when the spring is completely compressed. Do not overtighten the bolt. When you feel the spring completely compressed, loosen the diff bolt 1/8 of a turn. Your diff should now operate smoothly but with resistance as the outdrives move in opposite directions.

After you have driven the car once, re-check the diff setting.

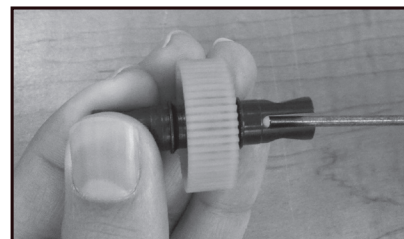

:: Transmission Build - Bag C - Step 4

6560
Complete
Stealth
transmission

6564
RC10WC Stealth
transmission case
black, right

6569
Idler gear

9601
Top shaft



3977 x4
Bearing
3/16 x 3/8"

6906
3/16 x 3/8"
bearing

*Not included
in kit

3976 x2
Bearing
3/8 x 5/8"

FT DIFF LUBE
#6591



6569
Idler gear
shaft

6564
RC10WC Stealth
transmission case
black, left





Install the diff with the diff bolt
head facing the spur gear side
of the transmission!

:: Transmission Build - Bag C - Step 5

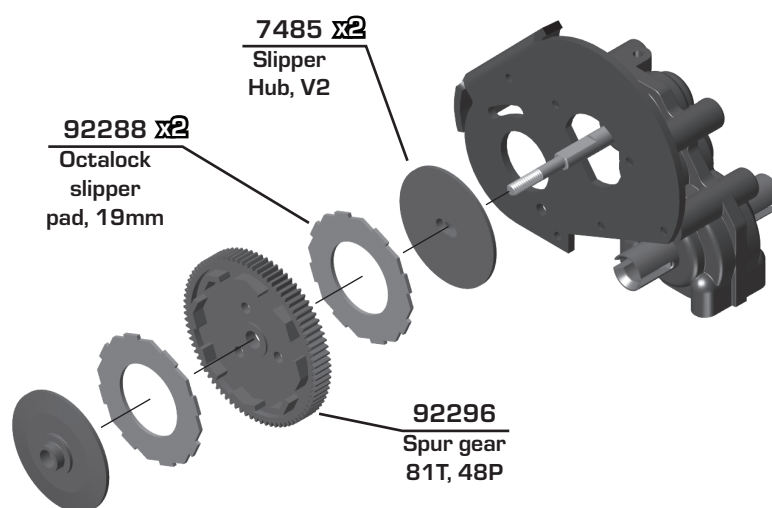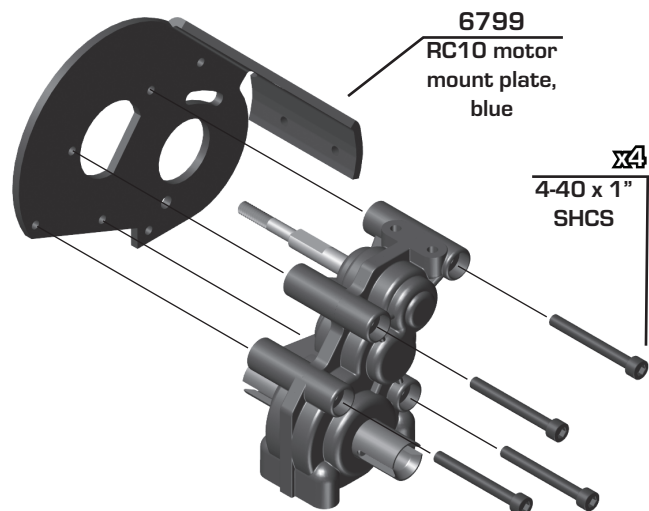


:: Transmission Build - Bag C - Step 6

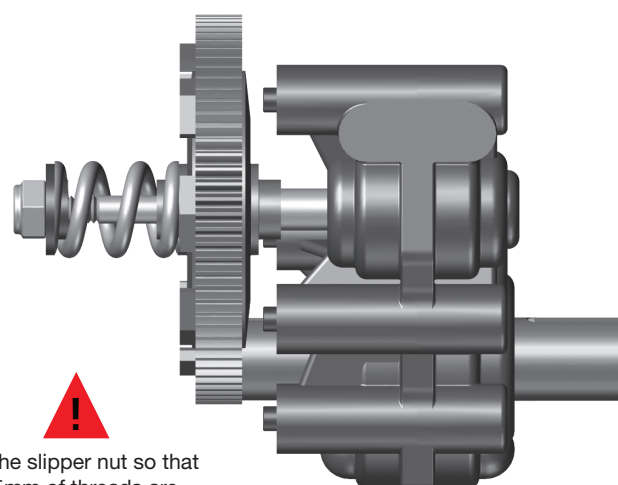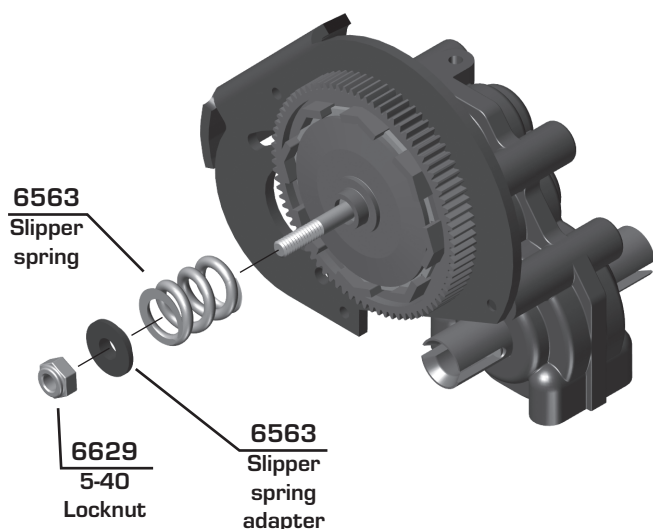


Set the slipper nut so that
2.5mm of threads are
showing on the top shaft.


:: Rear Bulkhead Build - Bag D - Step 1

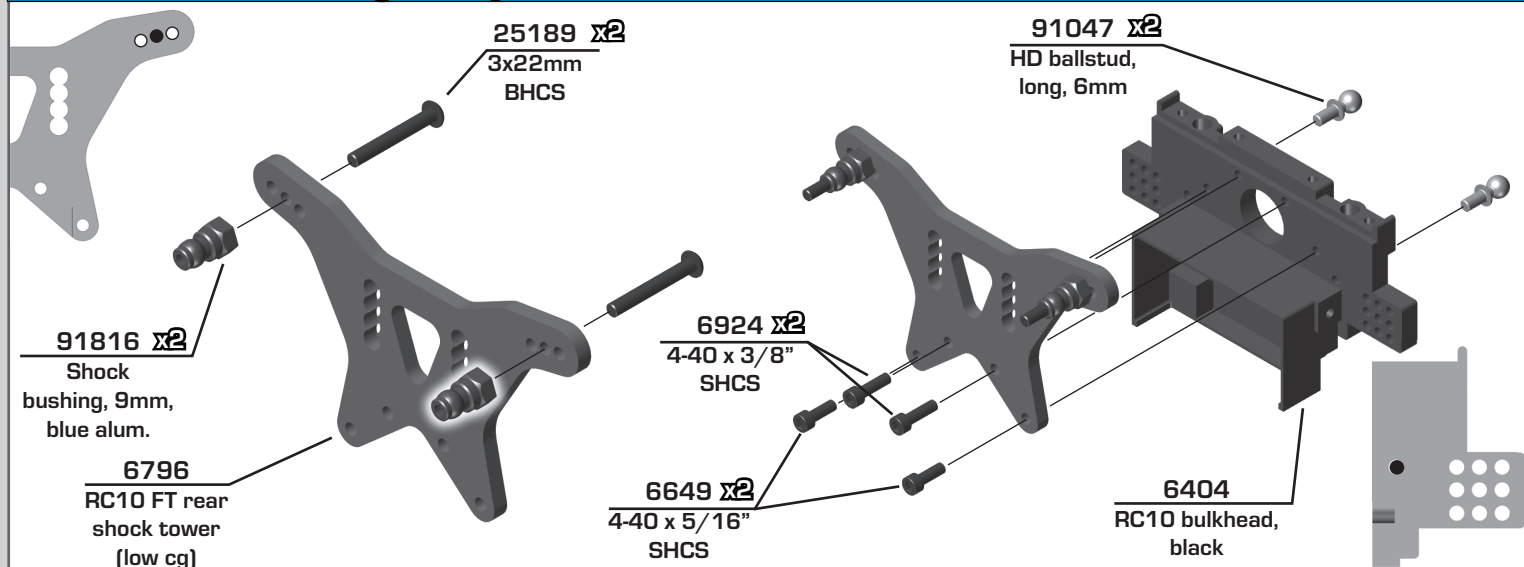


:: Rear Bulkhead Build - Bag D - Step 2

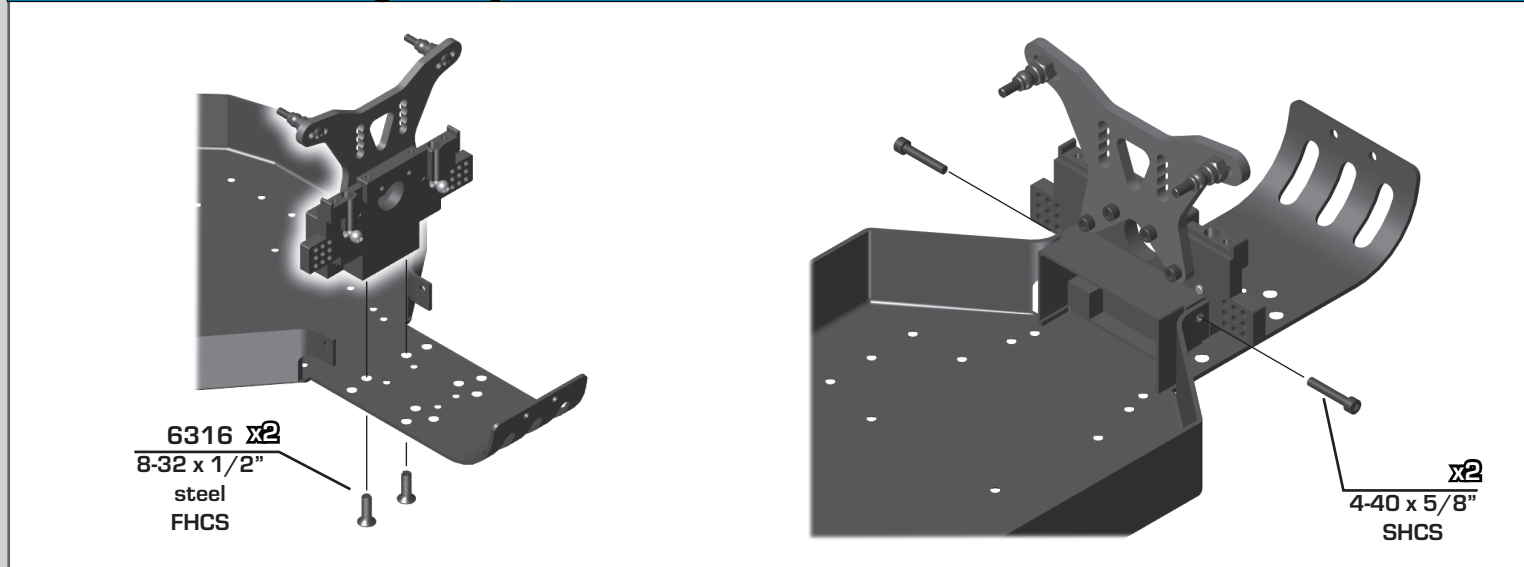


:: Rear Bulkhead Build - Bag D - Step 3

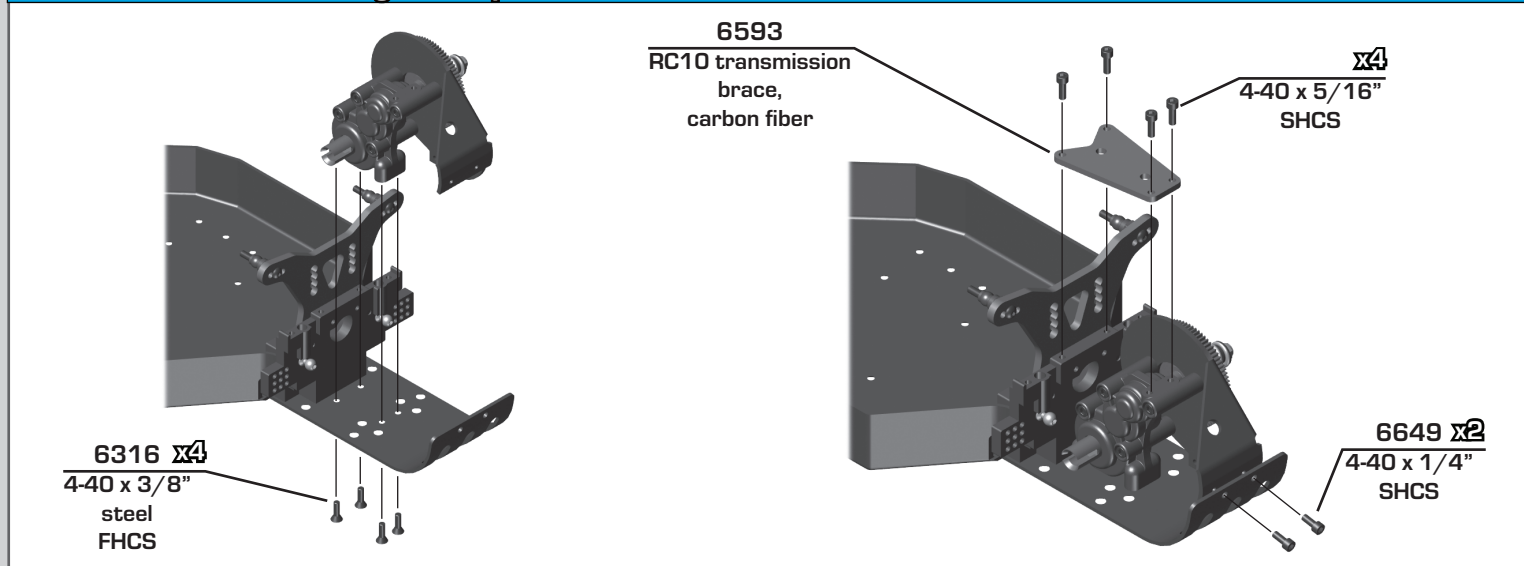


:: Rear Suspension Build - Bag E - Step 1

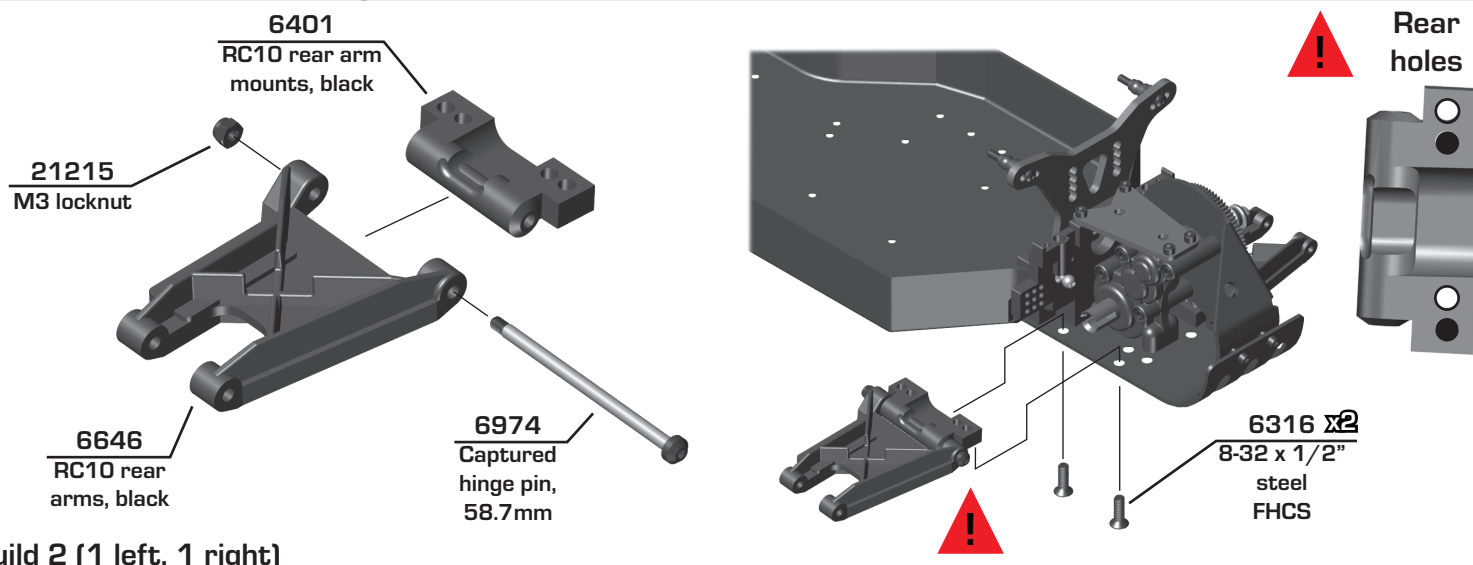


:: Rear Suspension Build - Bag E - Step 2

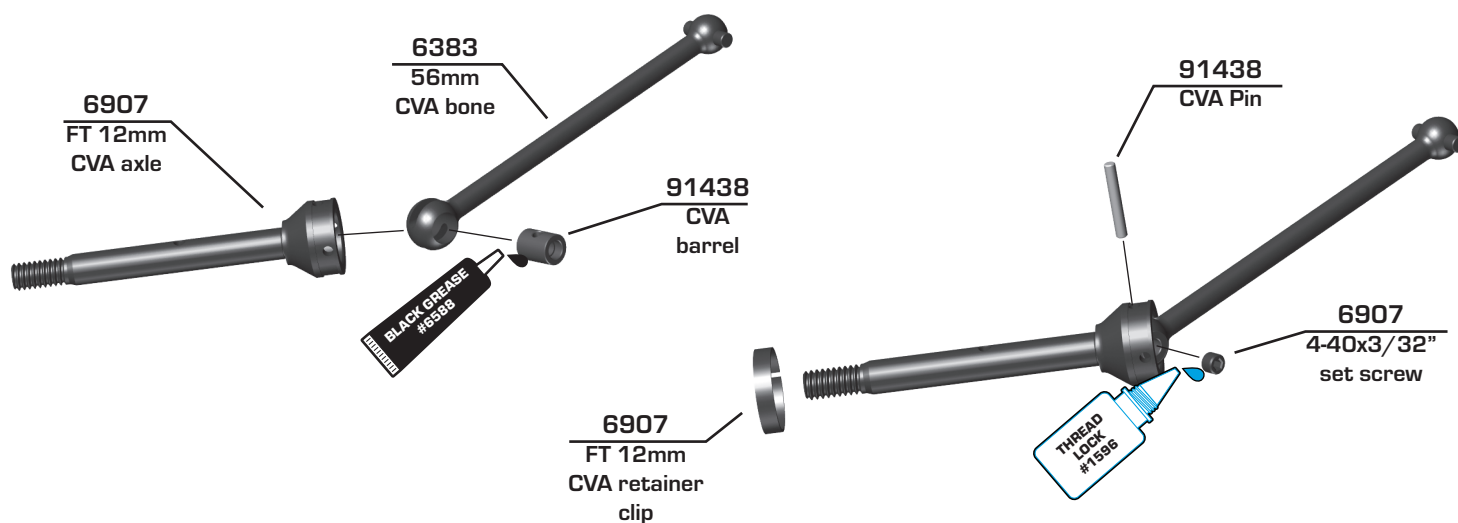

:: Rear Suspension Build - Bag E - Step 3

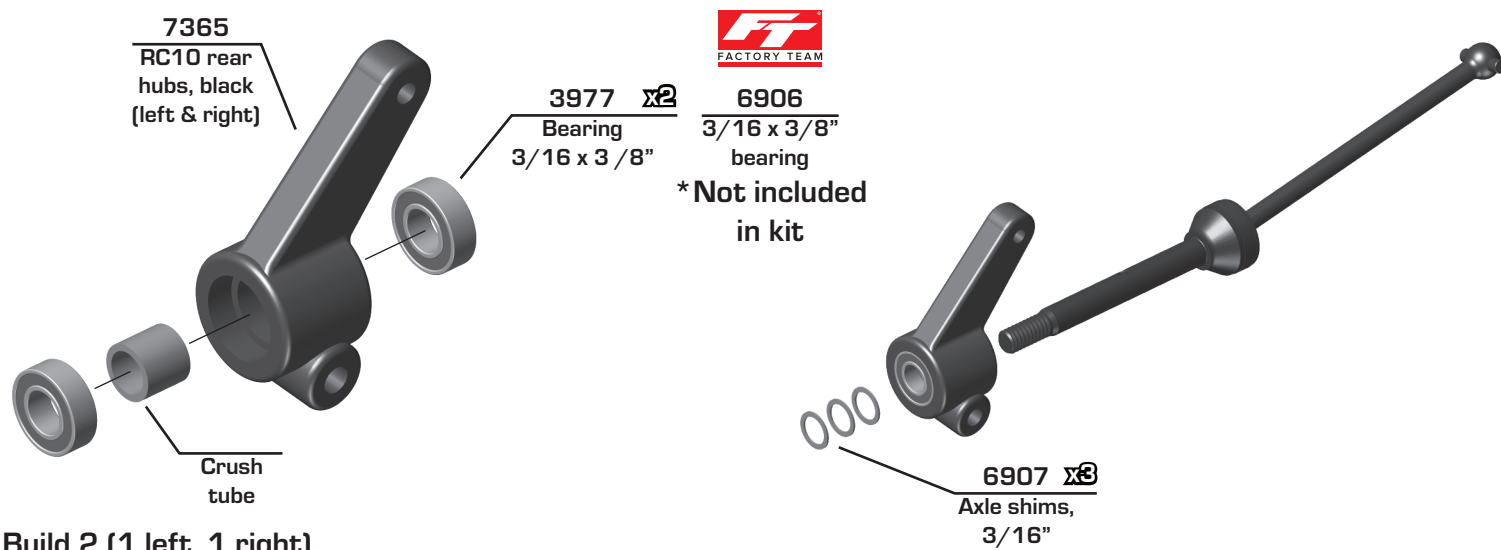


:: Rear Suspension Build - Bag E - Step 4

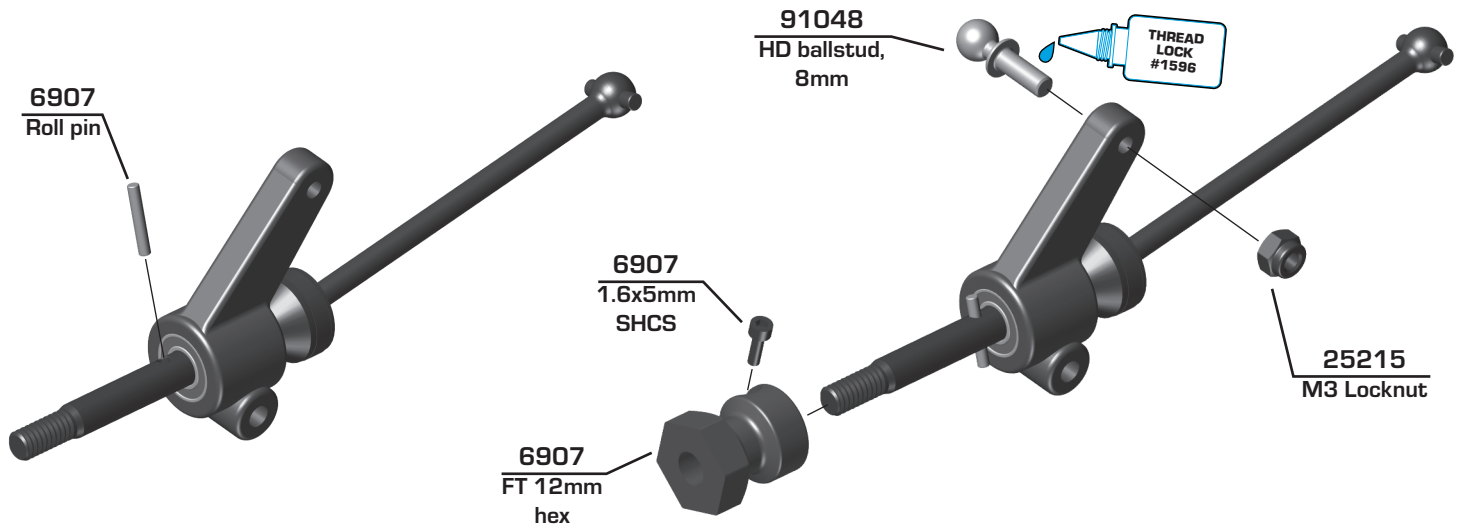


Build 2 (1 left, 1 right)

:: Rear Suspension Build - Bag E - Step 4

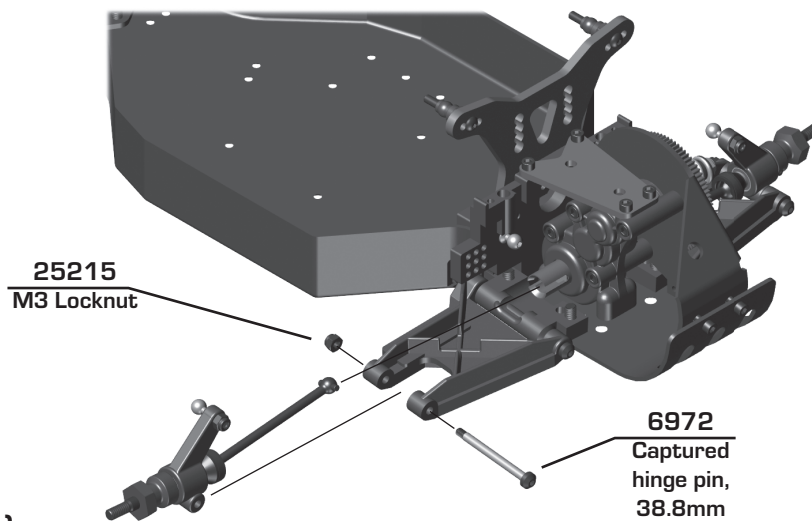


Build 2 (1 left, 1 right)

:: Turnbuckles Build - Bag F - Step 1

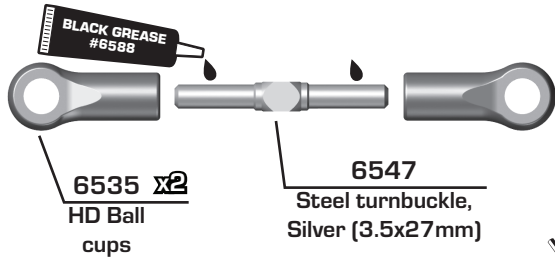

Steering Rack Turnbuckle
0.31" (8mm)

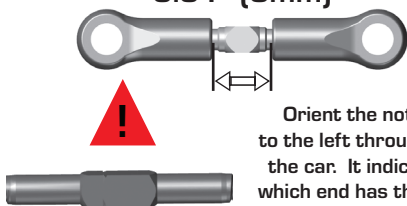


Measurements given are approximation. Camber should be set with a gauge at ride height.





Racers Tip:

Use black grease (#6588) on the threads of the turnbuckles for easier ball cup installation!

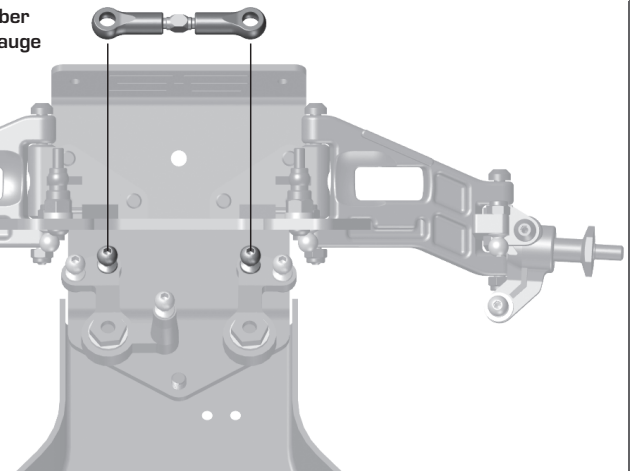

:: Turnbuckles Build - Bag F - Step 2

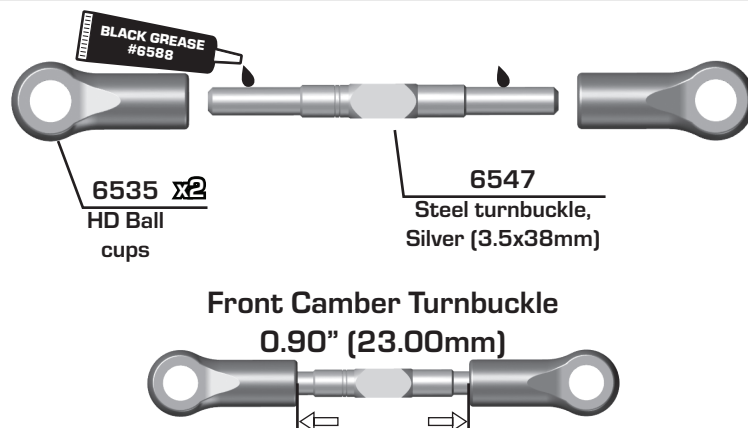
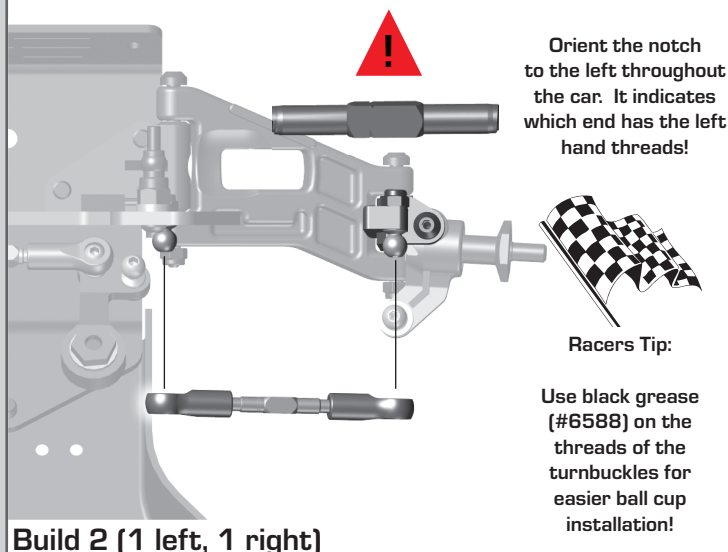


Recommended turnbuckle lengths are approximate.

Final recommended settings:

- 0 degree Front Toe in
- 2 Degree Front Camber
- 3 Degree Rear Camber.

:: Turnbuckles Build - Bag F - Step 3

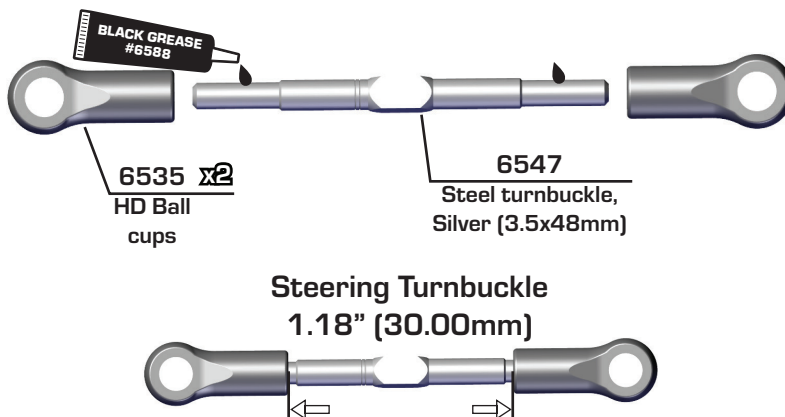
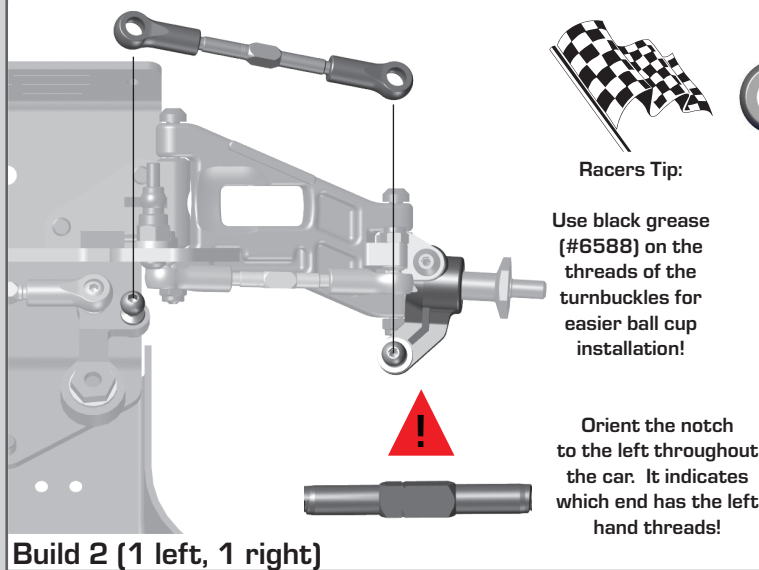


Recommended turnbuckle lengths are approximate.

Final recommended settings:

- 0 degree Front Toe in
- 2 Degree Front Camber
- 3 Degree Rear Camber.

:: Turnbuckles Build - Bag F - Step 4

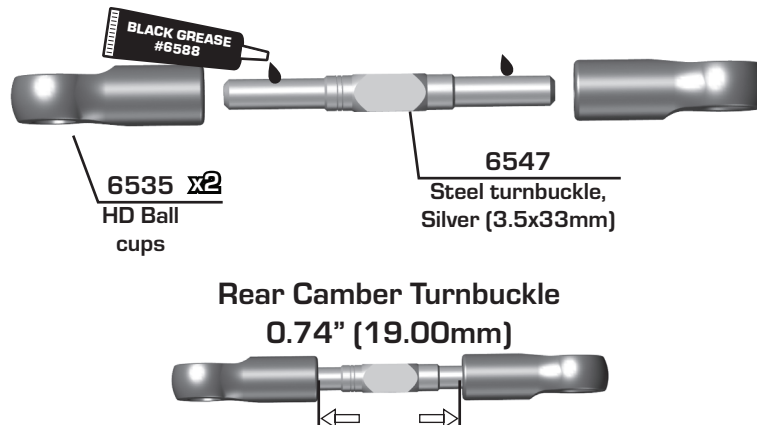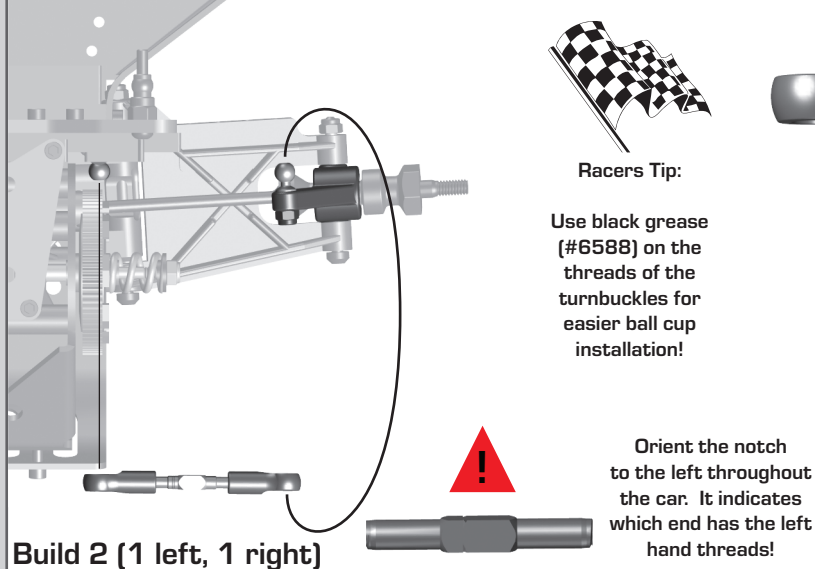


Recommended turnbuckle lengths are approximate.

Final recommended settings:

- 0 degree Front Toe in
- 2 Degree Front Camber
- 3 Degree Rear Camber.

:: Shocks Build - Bag G - Step 1

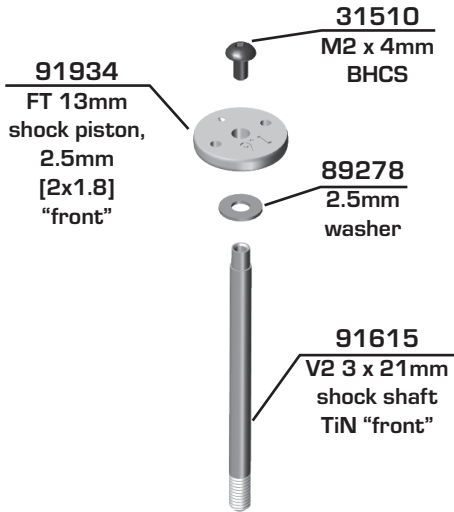


Build x2 front shocks


Mount the shock pistons
with the number facing
up!




Racers Tip:

Use marker to mark over the
numbers on the pistons to make
them easily visible!

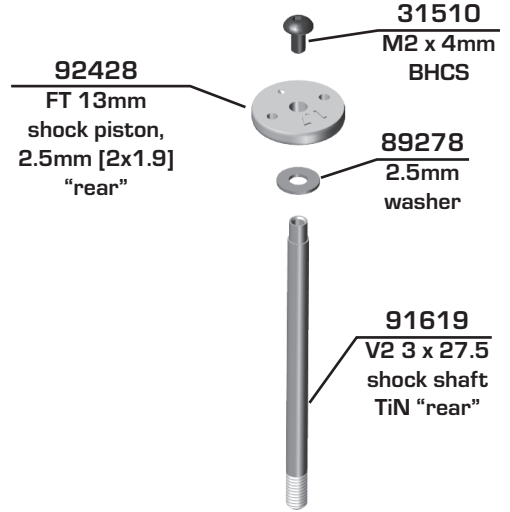

Build 2 rear shocks

:: Shocks Build - Bag G - Step 2

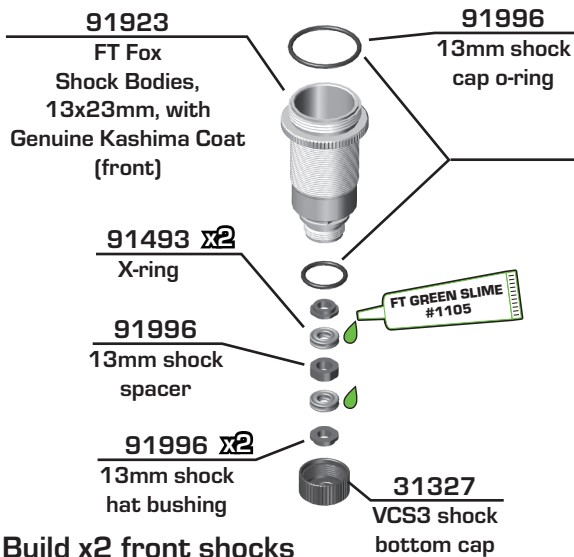


Build x2 front shocks


Lightly rub shock oil on the
O-ring before installation!




Racers Tip:

Coating the O-rings with
green slime (#1105) helps
seal & reduce O-ring swell!
Green slime not included
in kit!


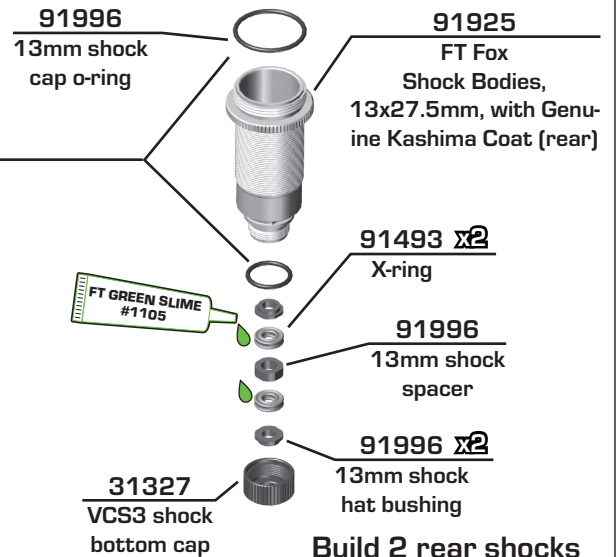


Build 2 rear shocks


:: Shocks Build - Bag G - Step 3

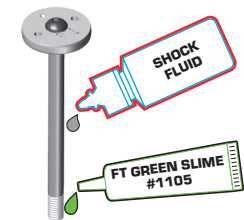

Lightly rub shock fluid or
green slime on threads.

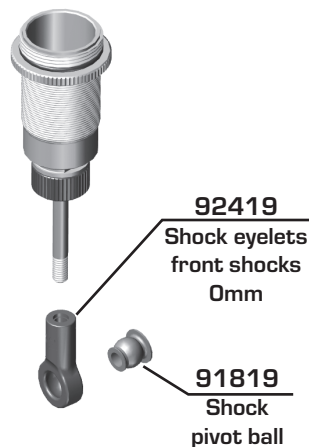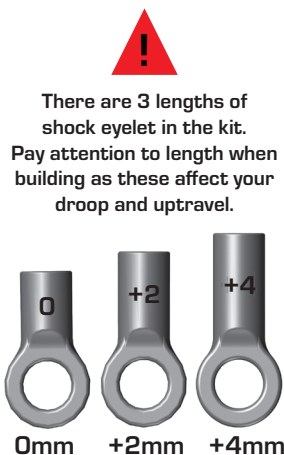

Build x2 front shocks

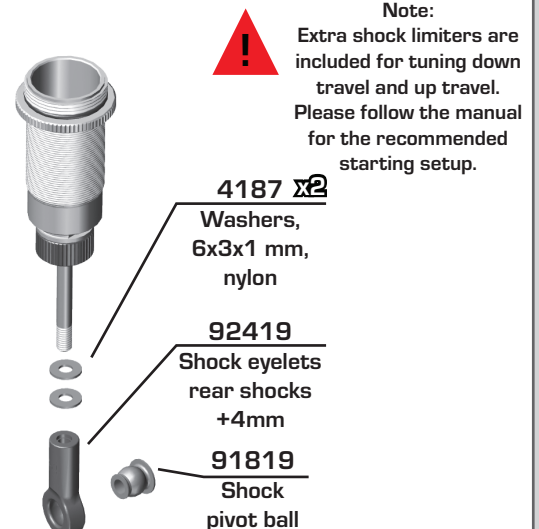

Build 2 rear shocks

:: Shocks Build - Bag G - Step 4

SHOCK FLUID

Front Shock: 30wt #5422

Rear Shock: 25wt #5428

Steps 2-3 Steps 4-5 Steps 6-7

91926
13mm Shock Cap

Step 8

31510
M2 x 4mm BHCS

Steps 9-10

Stroke

Stroke
Front: 21mm
Rear: 28.5mm

Shock Bleeding Steps:

1. Before assembly, get each bleed screw and thread it 1-2 turns into the shock cap, then remove the screw. This will make it easier when you are bleeding your shocks.
2. Pull shock shaft down.
3. Fill shock body 3/4 full with silicone shock fluid.
4. Slowly move the shock shaft up and down to remove air from under the piston.
5. Wait for bubbles to come to surface.
6. Fill shock body to top with silicone shock fluid.
7. Place a drop of oil in the cap and on cap threads.
8. Install cap (without bleed screw) and tighten completely.
9. Slowly compress shaft all the way to bleed excess silicone shock fluid out the hole in the cap (use rag around shock to catch excess fluid).
10. Install M2x4mm button head screw until snug while shaft is fully compressed.

:: Shocks Build - Bag G - Step 5

91996 x4
13mm Threaded Collar O-ring

91928 x4
13mm Threaded Collar

Build x4

91942
13mm front spring, blue (3.60lb)

91948
13mm rear spring, white (1.90lb)

Racers Tip:
Use your finger to rub shock fluid on the O-ring for smoother adjustment!

:: Shocks Build - Bag G - Step 6

91966
13mm Shock Spring Cup (Front - 5mm)

Build x2 front shocks



91966
13mm Shock Spring Cup (Rear - 0mm)

Build x2 rear shocks

#91966 13mm Shock Spring Cups


0mm	5mm	9mm
-----	-----	-----

Shocks Build - Bag G - Step 7

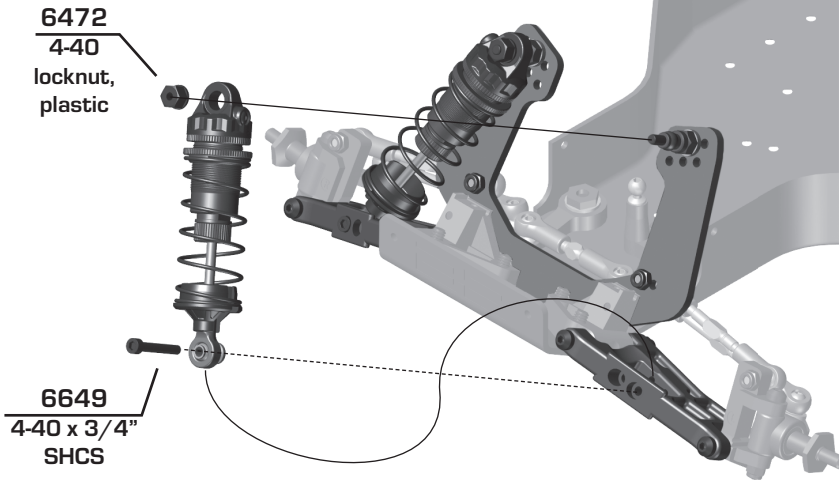

Build 2 (1 left, 1 right)


Shocks Build - Bag G - Step 8

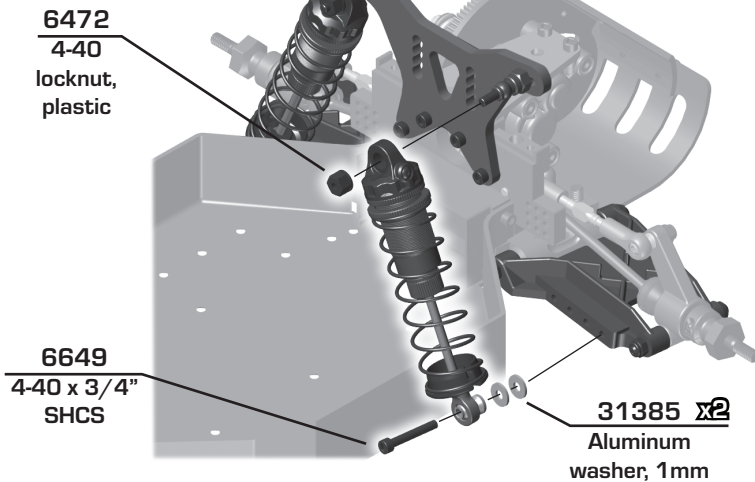


Build 2 (1 left, 1 right)

Build left and right sides!

⚙️ Chassis Build - Bag H - Step 1

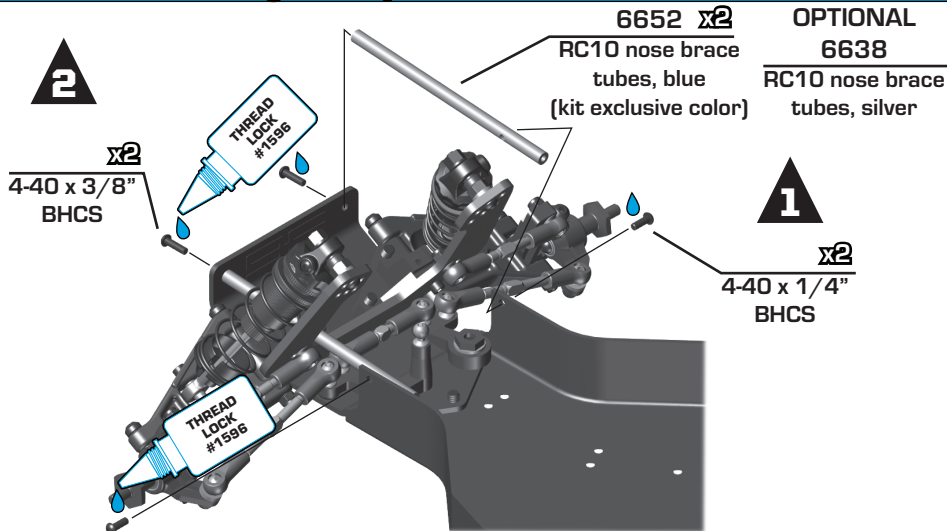


Build 2 (1 left, 1 right)


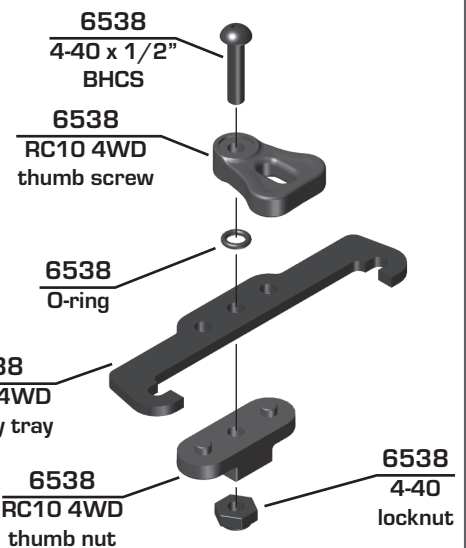


Build x2



:: Chassis Build - Bag H - Step 2

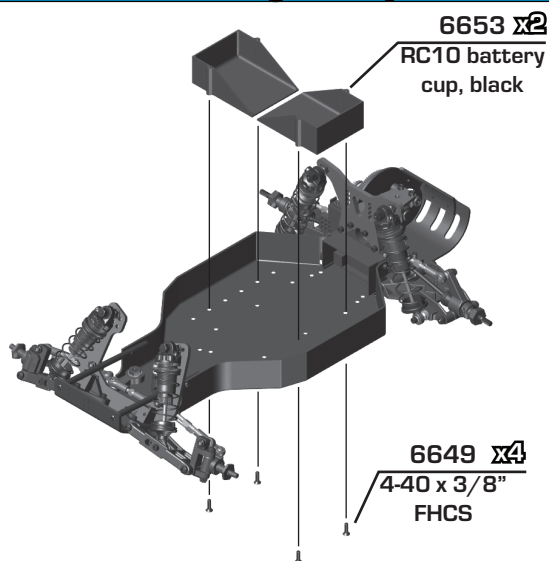



Note:
There are 3 options for battery mounting. Long pack inline, shorty pack inline and shorty pack sideways. Use only one battery cup in corresponding chassis hole for inline battery configuration. You can use the updated battery hold down in Bag H - Step 1 (page 15) or use the original style battery strap with SHCS's w/ hole and body clip to secure the battery if desired.

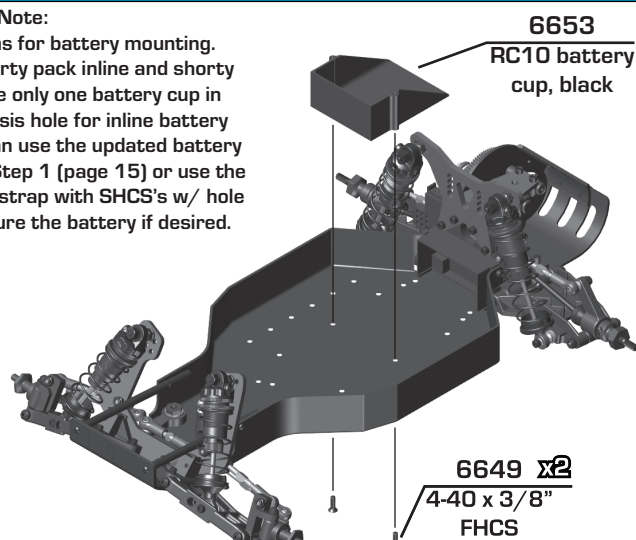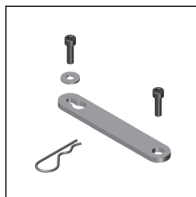

:: Chassis Build - Bag H - Step 3

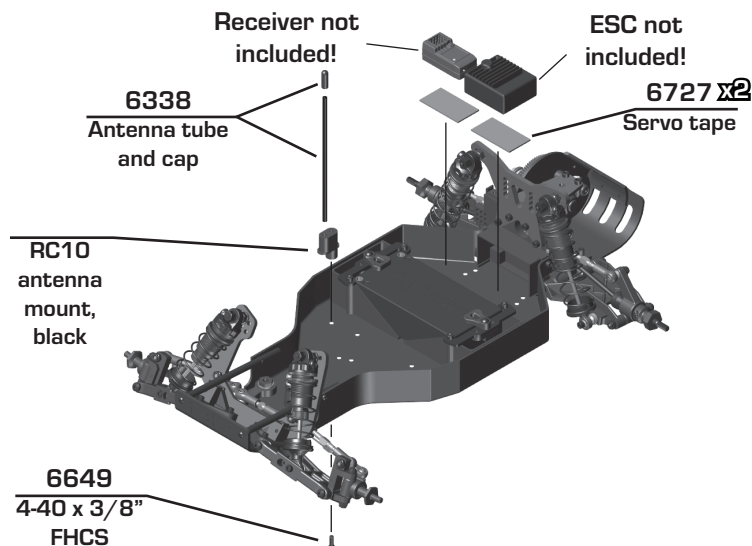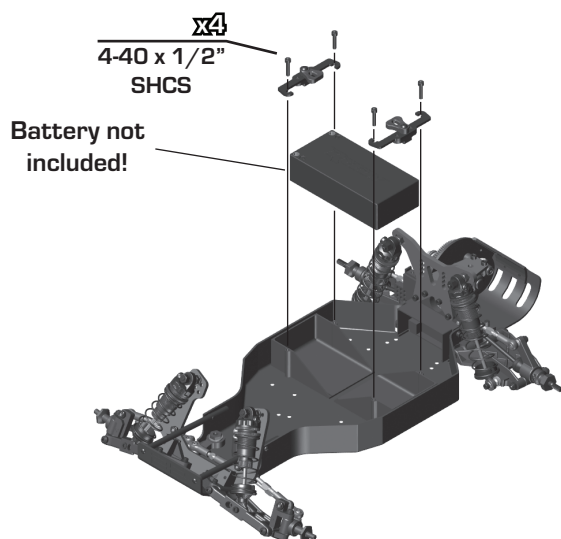


:: Steering Servo Build - Bag I - Step 1

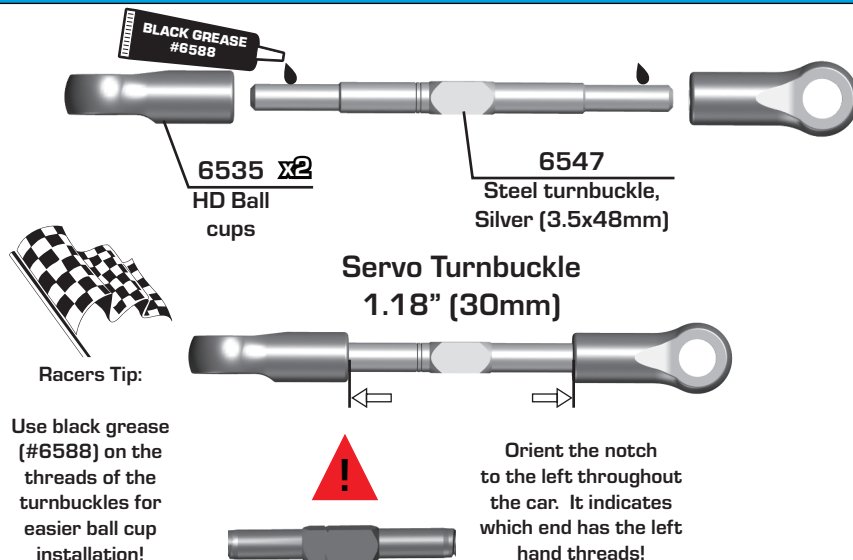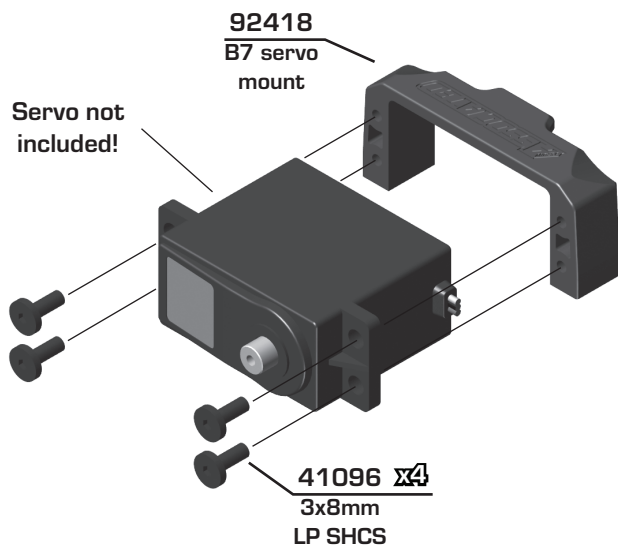

:: Steering Servo Build - Bag I - Step 2

32041
HD ball stud,
short, 4mm

Servo
horn and
screw not
included!

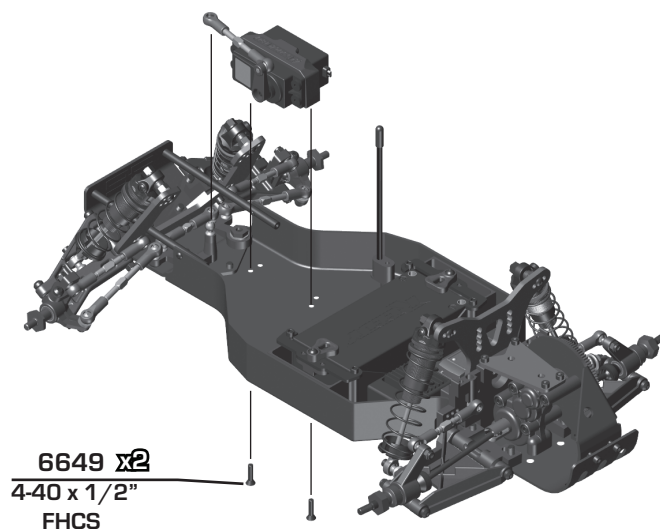

6649 **x2**
4-40 x 1/2"
FHCS

:: Wing Mount / Wheels / Accessories Build - Bag J - Step 1

Motor not
included!

Pinion not
included!

31531 **x2**
3 x 6mm
BHCS



6566
Gear cover
and plug

x2
4-40 x 1/4"
SHCS


:: Wing Mount / Wheels / Accessories Build - Bag J - Step 2

x4
4-40 x 1/2"
BHCS

91718 **x2**
B6 Wing
Mount

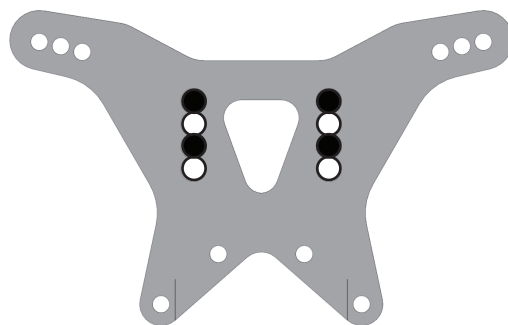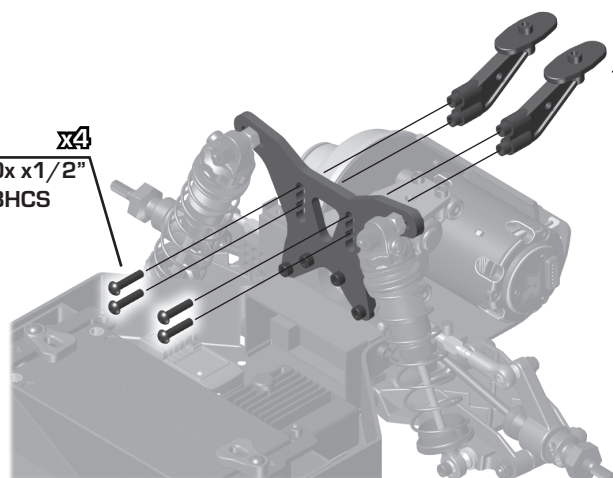


Wing Mount / Wheels / Accessories Build - Bag J - Step 3

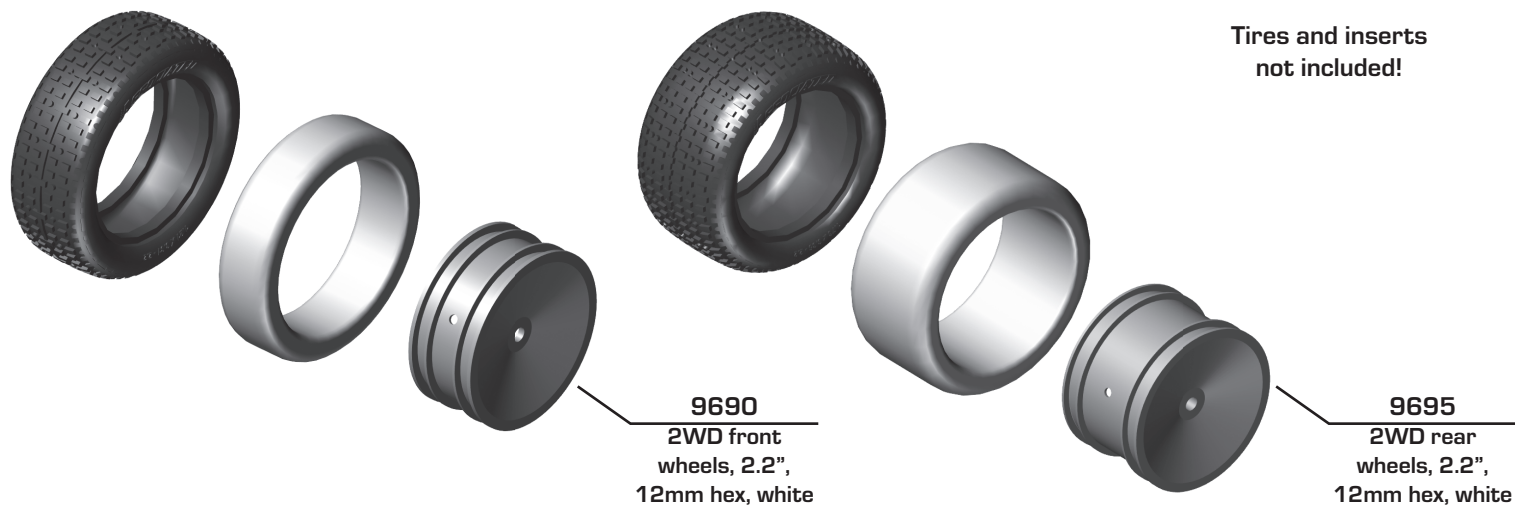


Build x2

Wing Mount / Wheels / Accessories Build - Bag J - Step 4

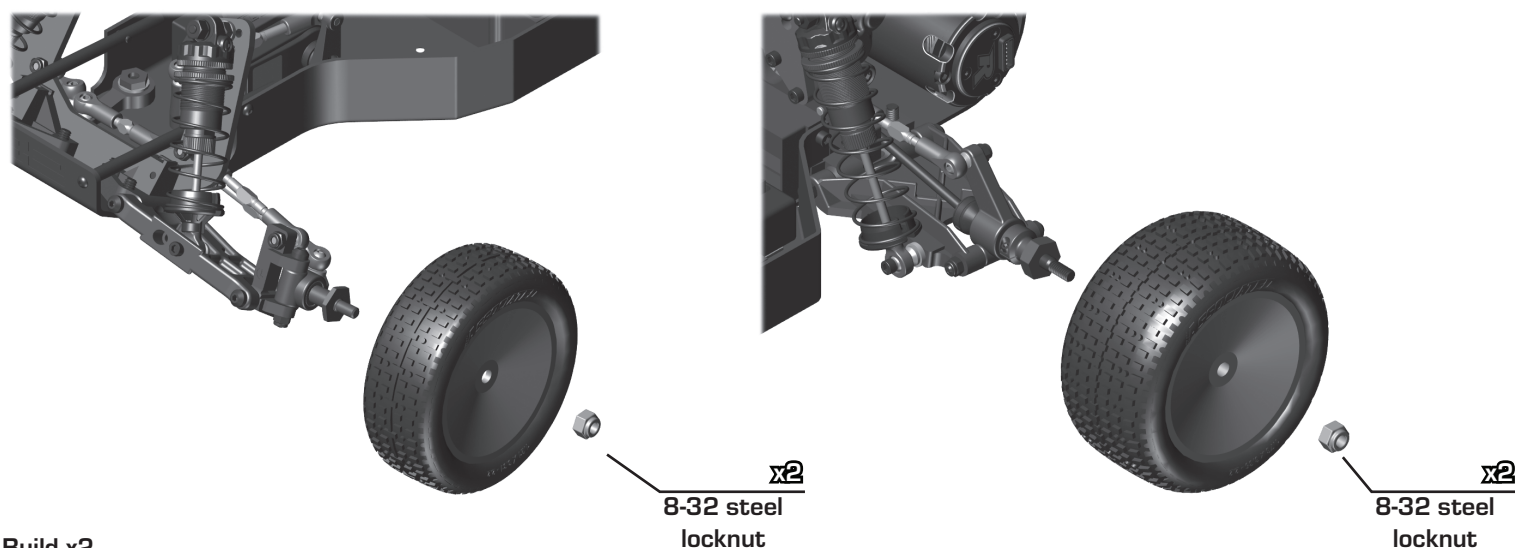

Build x2

Wing Mount / Wheels / Accessories Build - Bag J - Step 5

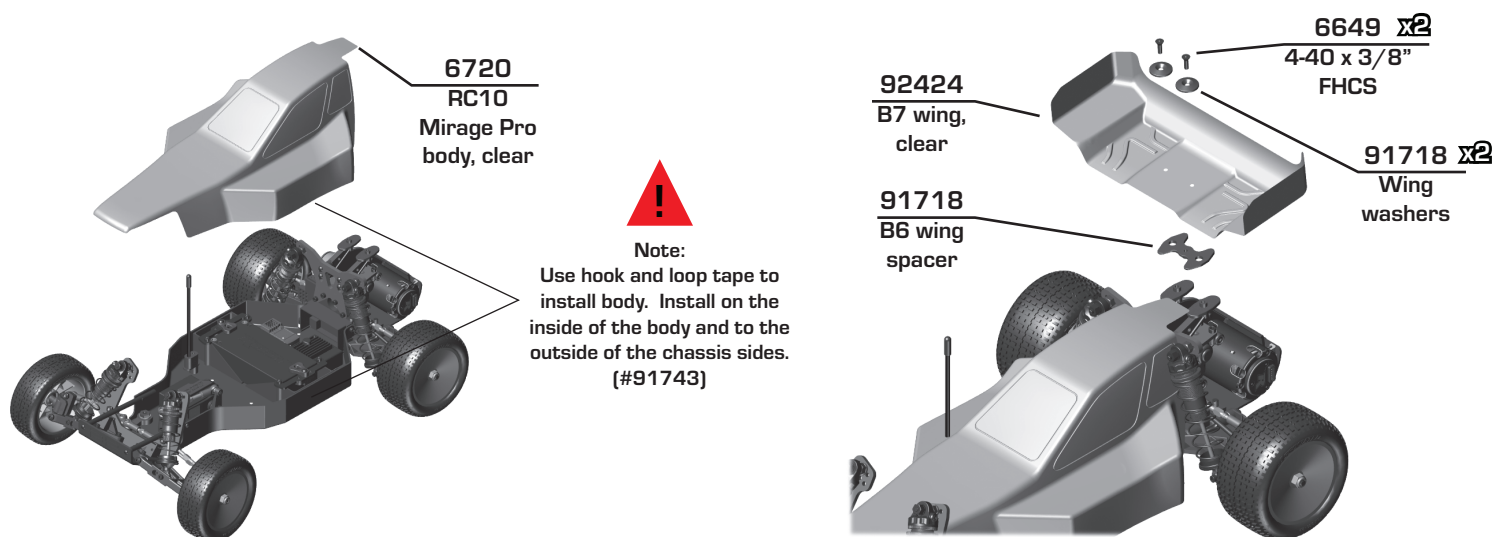

:: Painting Tips**Painting:**

Your Kit requires a clear polycarbonate body. You will need to prep the body before you can paint it. Wash the INSIDE thoroughly with warm water and liquid detergent (do not use any detergents with scents or added hand lotion ingredients!). Dry the body using a clean, soft, lint-free cloth.

Use the supplied window masks to cover the windows from the INSIDE of the body (RC bodies get painted on the inside). Using high quality masking tape, apply tape to the inside of the body to create a design. Spray (use either rattle can or airbrush) the paint on the inside of the body (preferably dark colors first, lighter colors last). NOTE: ONLY use paint that is recommended for (polycarbonate) plastics. If you do not, you can destroy the body! After the paint has completely dried (usually after 24 hours), cut the body along the trim lines. Make sure to drill or use a body reamer to make the holes for the antenna if needed! Use hook and loop tape to secure the body to the side rails of the vehicle.

:: Notes

20 TEAM ASSOCIATED RC10 SETUP SHEET

Driver: Spencer Rivkin - 1st place (1989-1993) ClassDate: October 19, 2025Track: New Orleans Hotel/Casino Arena, Las Vegas, NVEvent: 2025 Team Associated Vintage ChampsConditions: Indoor ☐Outdoor ☐Temp: Rev: 1

Ride Height / Wheelbase

Front Ride
Height:
24mmRear Ride
Height:
25mmWheelbase:
Short
Long

Rear Suspension

Camber: -1.5degRear Hub
Carriers:
0° ☐
1.5° ☐

Front Suspension

Camber: -1.5degToe: 0.5deg outSteering Block:
Inline ☐
Trailing ☐Caster:
25° ☐
30° ☐

Front Shocks

Shock Body: Kit Shock Shaft: Kit
Spring: AE Blue 13mm Piston: 2x1.5 1x1.6 2mm
Shock Fluid: 35wt Eyelet: 0
Limiters: Int: Ext: Stroke:
Notes:

Rear Shocks

Shock Body: Kit Shock Shaft: Kit
Spring: AE Green 13mm Piston: 3x1.7 2mm
Shock Fluid: 27.5wt Eyelet: 0
Limiters: Int: Ext: Stroke:
Notes:

Motor / Battery

Motor & Wind:
Pinion: 25T Spur Gear: 75T
Battery:

Drivetrain

Slipper: V2 slipper
2 Pads ☐ 3 Pads ☐ 4 Pads ☐
Notes:

Weight

Battery Placement: Sideways with ESC & Rx mounted behind it
Ballast Weight:
Notes:

Front Tires

Tire:
Compound:
Insert: Wheel:

Race and Vehicle Comments

Qualify: Main: Finish: TQ:
Comments:

Radio / ESC Settings

Radio:
Throttle / Brake: e.p.a: Expo:
Servo: Steering Expo:
ESC:
ESC Settings:

Other

Body Type:
Wing Type:

Rear Tires

Tire:
Compound:
Insert: Wheel:

Track Info

Surface:	Traction:	Conditions:	Moisture:
Dirt ☐	Low ☐	Grooved ☐	Wet ☐
Carpet ☐	Med ☐	Dusty ☐	Damp ☐
Astro ☐	High ☐	Smooth ☐	Dry ☐
Multi ☐		Bumpy ☐	
		Hard Pack ☐	
		Loamy ☐	


TEAM ASSOCIATED RC10 SETUP SHEET

Driver: _____ Date: _____
Track: _____ Event: _____
Conditions: _____ Indoor ☐ Outdoor ☐ Temp. _____ Rev:1

Ride Height / Wheelbase

Front Ride
Height:



Rear Ride
Height:

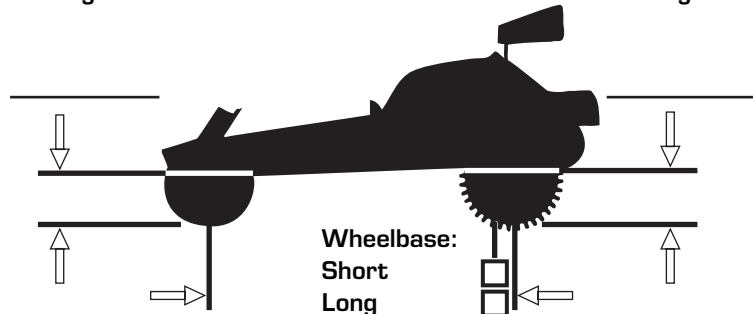

Rear Suspension

Camber: _____

Rear Hub
Carriers:
0° ☐
1.5° ☐

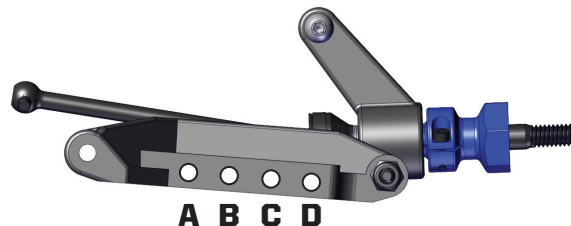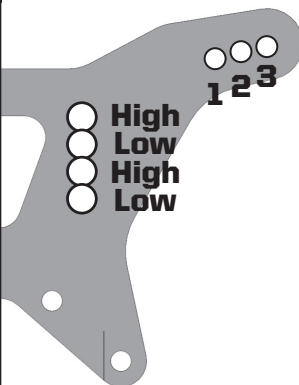

Rear Drive Shafts:
CVA ☐
Dogbone ☐

Front Suspension

Camber: _____


Toe: _____

Steering Block:

Inline ☐
Trailing ☐

Caster:

25° ☐
30° ☐

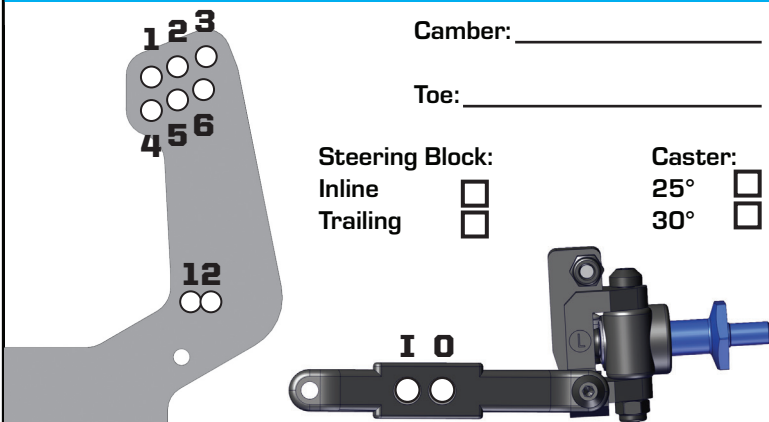

Front Shocks

Shock Body: _____ Shock Shaft: _____
Spring: _____ Piston: _____
Shock Fluid: _____ Eyelet: _____
Limiters: Int: _____ Ext: _____ Stroke: _____
Notes: _____

Rear Shocks

Shock Body: _____ Shock Shaft: _____
Spring: _____ Piston: _____
Shock Fluid: _____ Eyelet: _____
Limiters: Int: _____ Ext: _____ Stroke: _____
Notes: _____

Motor / Battery

Motor & Wind: _____
Pinion: _____ Spur Gear: _____
Battery: _____

Drivetrain

Slipper: _____
2 Pads ☐ 3 Pads ☐ 4 Pads ☐
Notes: _____

Weight

Battery Placement: _____
Ballast Weight: _____
Notes: _____

Front Tires

Tire: _____
Compound: _____
Insert: _____ Wheel: _____

Race and Vehicle Comments

Qualify: _____ Main: _____ Finish: _____ TQ: _____
Comments: _____

Radio / ESC Settings

Radio: _____
Throttle / Brake: e.p.a: _____ Expo: _____
Servo: _____ Steering Expo: _____
ESC: _____
ESC Settings: _____

Other

Body Type: _____
Wing Type: _____

Rear Tires

Tire: _____
Compound: _____
Insert: _____ Wheel: _____

Track Info

Surface:	Traction:	Conditions:	Moisture:
Dirt ☐	Low ☐	Grooved ☐	Wet ☐
Carpet ☐	Med ☐	Dusty ☐	Damp ☐
Astro ☐	High ☐	Smooth ☐	Dry ☐
Multi ☐		Bumpy ☐	
		Hard Pack ☐	
		Loamy ☐	



Associated Electrics, Inc.
21062 Bake Parkway Lake Forest, CA 92630 USA

call: (949) 544-7500 - fax: (949) 544-7501
Check out the following web sites for all of our kits, current products,
new releases, setup help, tips, and racing info!
www.AssociatedElectrics.com

FOLLOW US ON SOCIAL MEDIA



TeamAssociated
ReedyPower
ElementRC
FactoryTeam51



@TeamAssociatedRC
@ReedyPower
@Element_RC
@FactoryTeam_RC



@Team_Associated
@ReedyPower



@Associated_Electrics



TeamAssociatedRC
ElementRC



TeamAssociated
Reedy
Element-rc