

MONSTER

BODY SHELL

NO.48033

killerbody™

1/10 RC PLANNING INSTRUCTION SHEET

This body can be used with 1/10 Short Course Truck (Long Wheelbase: 327mm Width: 300mm)
Fit for Traxxas/HPI/AE 1:10 short course truck chassis

Before beginning assembly, please read these instructions thoroughly!

Symbols used throughout the instruction manual, comprise:



Cut off shaded portion.



5mm
Drill holes with
the specified diameter.



Pay close attention here!



Must be purchased
separately.



Assemble left and right sides
the same way.



● Before Assembly

Decoration Body

- In the case of a decoration body, please assemble it according to the contents showed.

When making the window transparent:

- If you want to make the window transparent with a non decoration body, please assemble it according to the contents showed.

Non Decoration Body

- In the case of non decoration body, please assemble it according to the contents showed.

When loading LED lights

- If you want to load LED lights with a non decoration body, please assemble it according to the contents showed.


KID 1

1 Body Shell

When making the window transparent:

Non Decoration Body

When loading LED lights

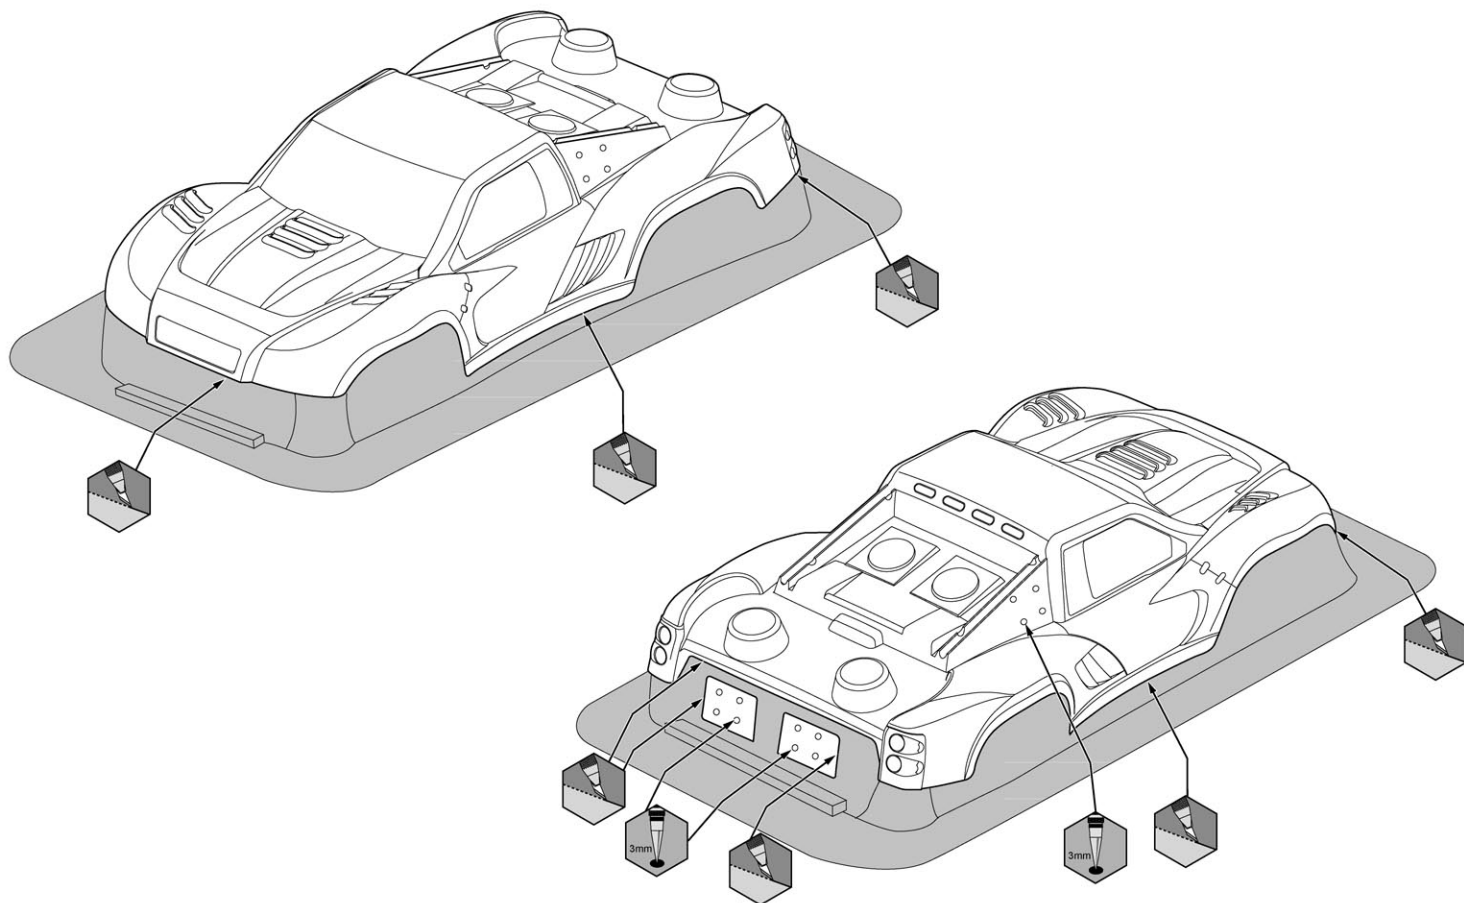

2 Painting

Non Decoration Body

When loading LED lights

- Before painting, use a neutral detergent to remove any oil residues and dirt.

When making the window transparent:







When making the window transparent:

When loading LED lights


2 Mask the windows from the inside.

2 Mask the lights from the inside.

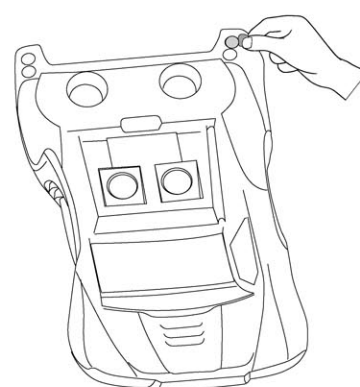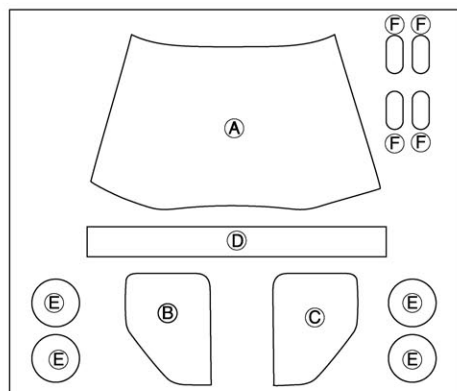


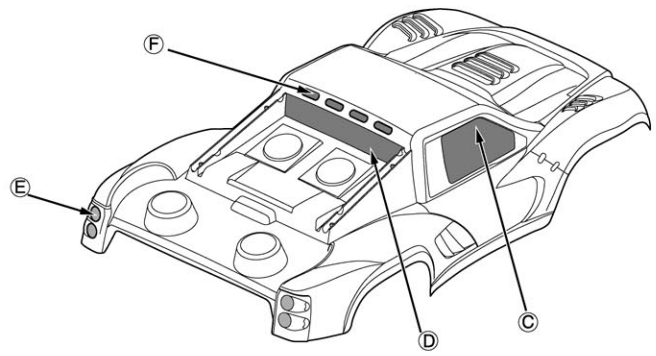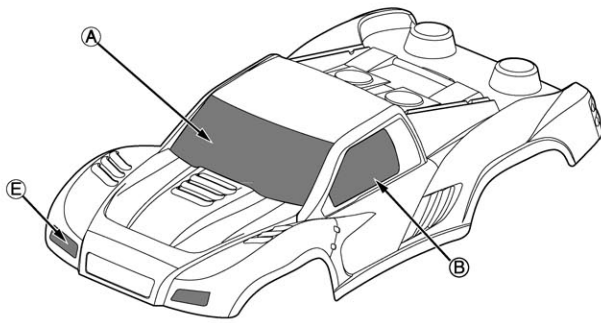

3 Paint the body shell from the inside.

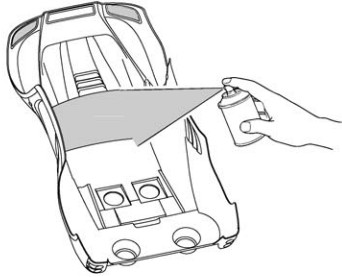

4 After painting, remove the protective film from the body shell.

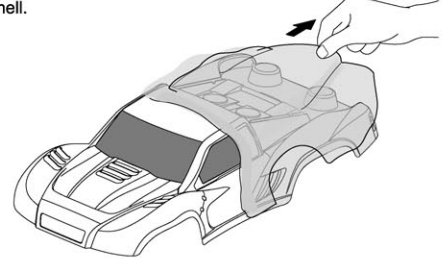


3 Decal

When making the window transparent

Non Decoration Body

When loading LED lights

► The decal numbers between brackets are only for the opposite side.



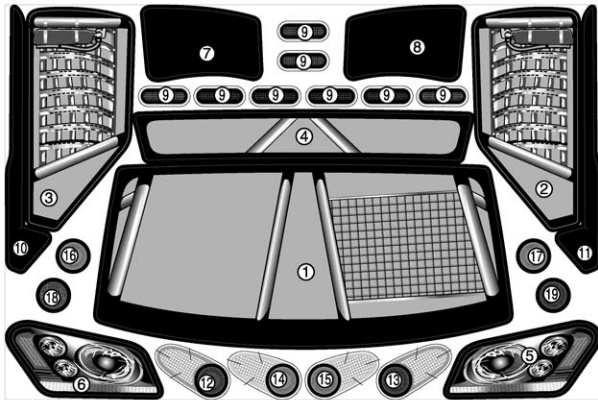



When making the window transparent



► ① ② ③ ④


Cut the translucent (smoked color) part.

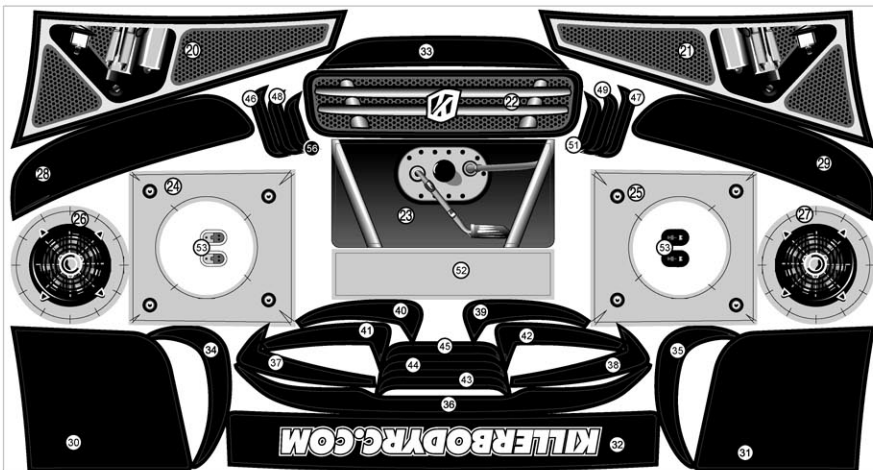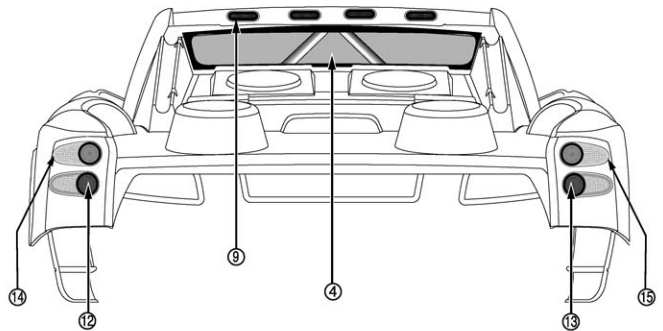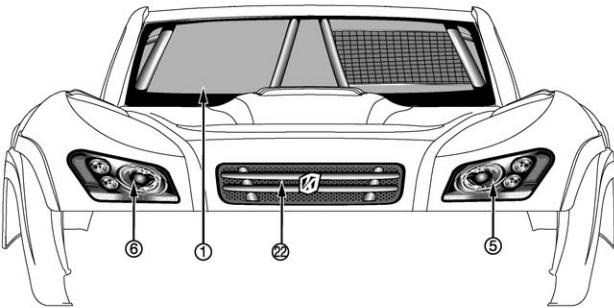

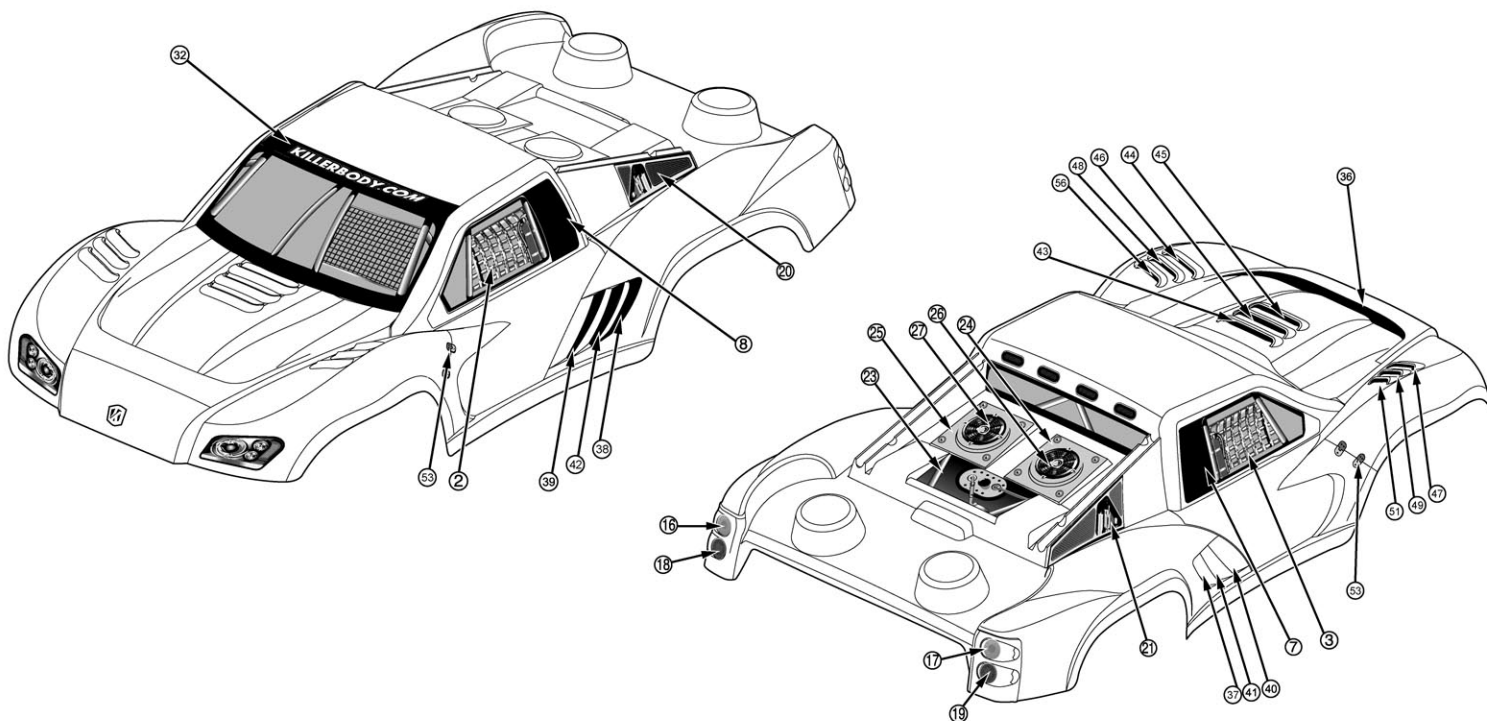

4 Plastic Parts

2 x 7mm F/H TP Screw




Decoration Body

When making the window transparent:

Non Decoration Body

When loading LED lights

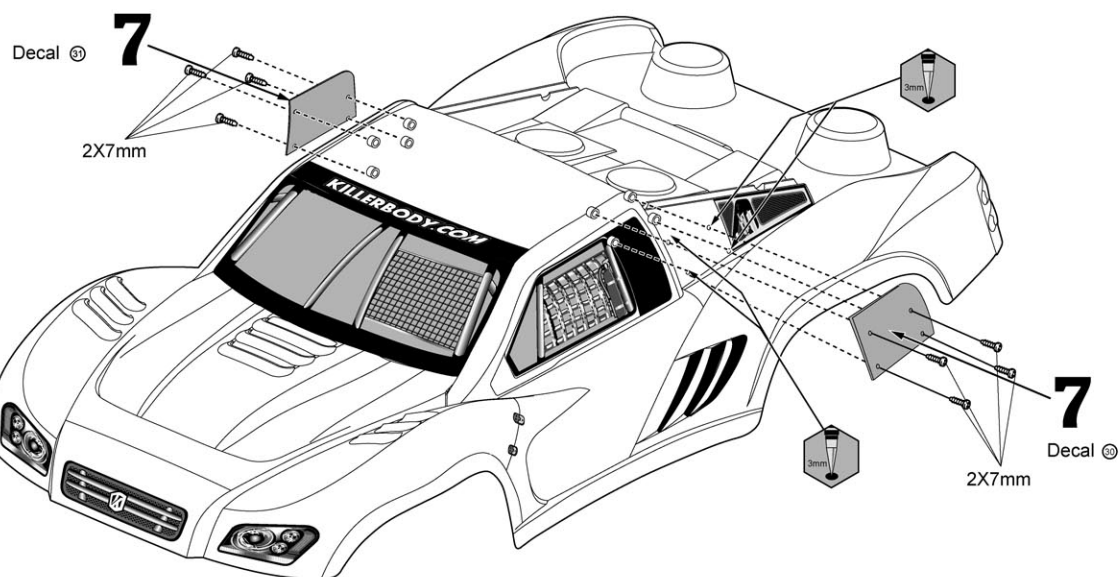

5 Body

Decoration Body

When making the window transparent:

Non Decoration Body



When loading LED lights



For safety reasons, always fit the body shell when running your car.







Use the extension body mount (sold separately) if the body mount height is not enough.

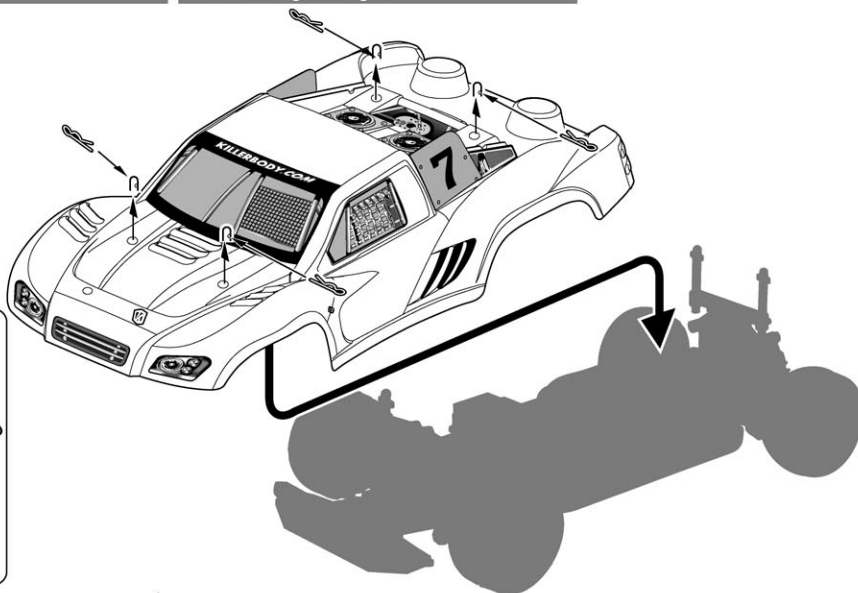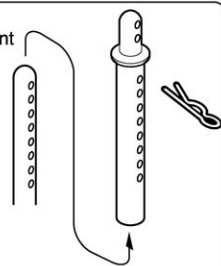





Spare Tire

NO.48038

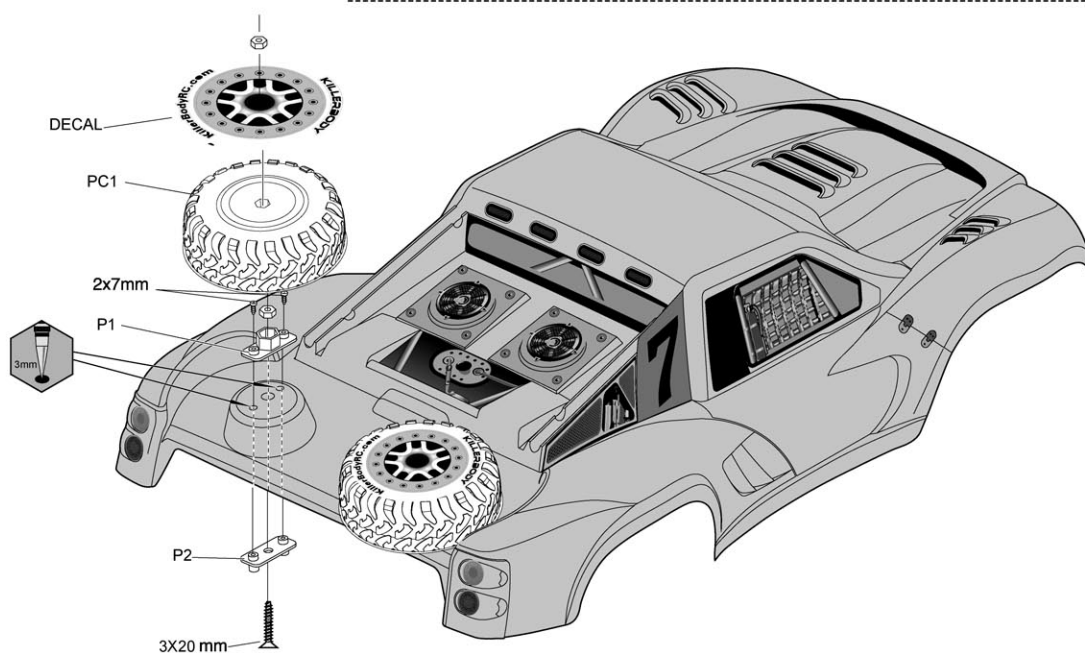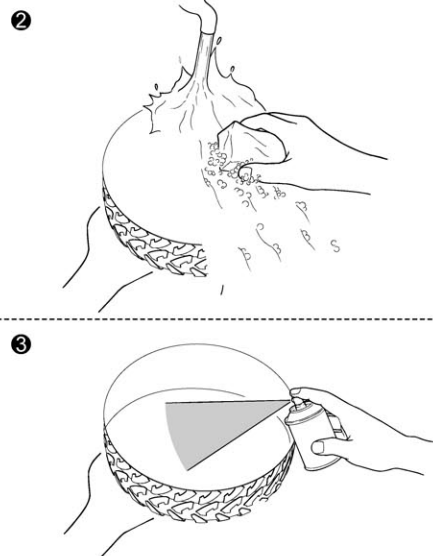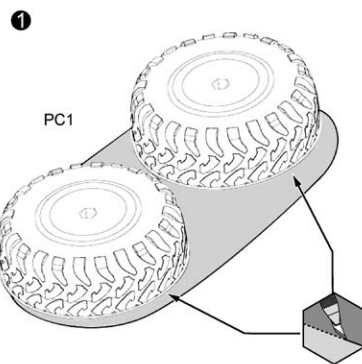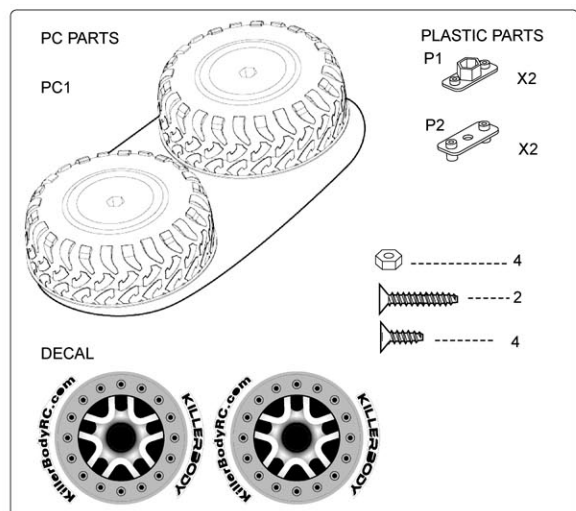

Metal Euphroe

NO.48054

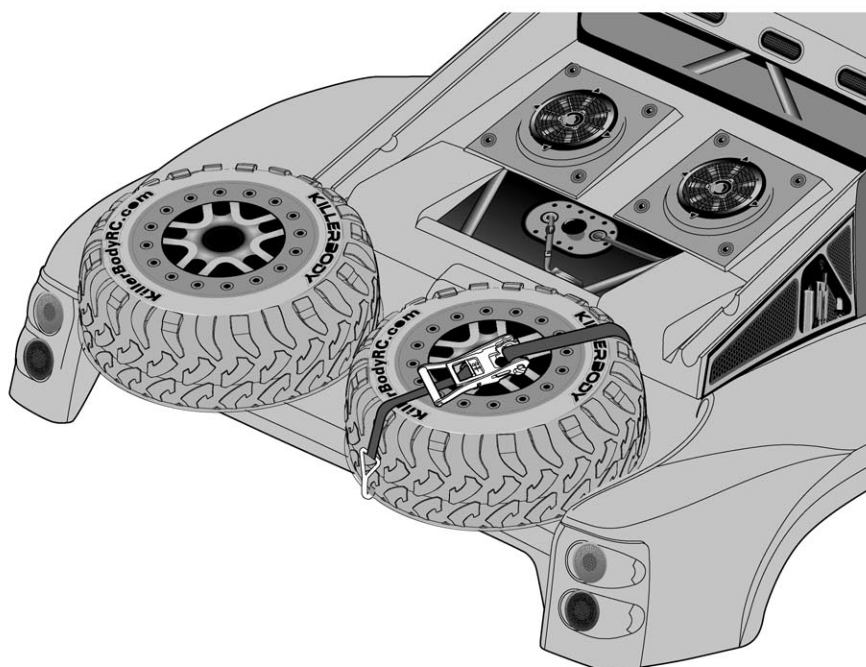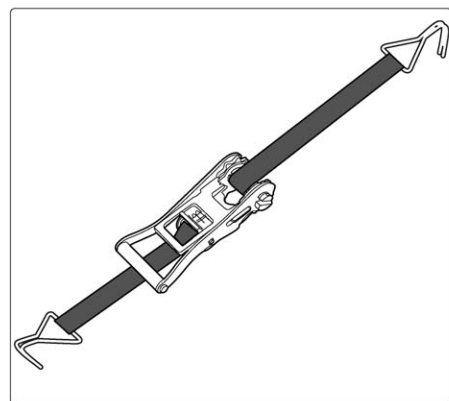

Decoration Body

When making the window transparent:

Non Decoration Body

When loading LED lights

Anti-role Bar



NO.48040

Decoration Body

When making the window transparent:

Non Decoration Body

When loading LED lights

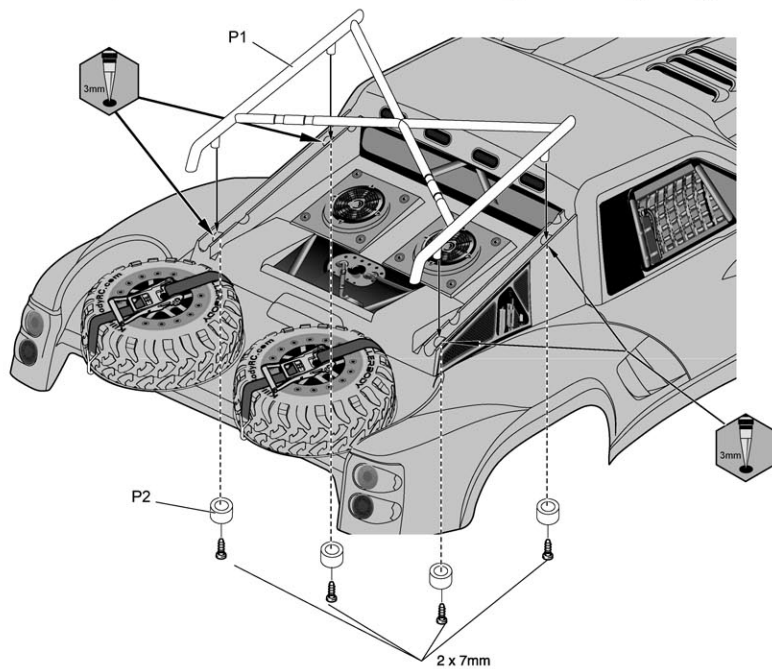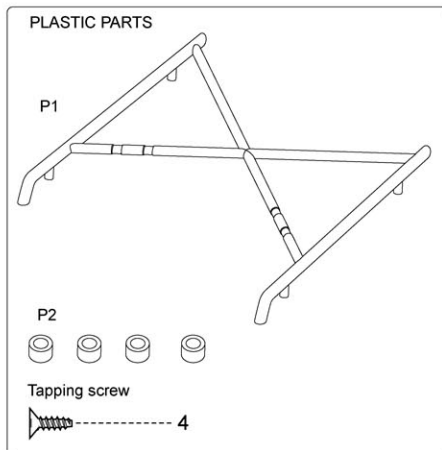

Fire-extinguisher



NO.48052

Decoration Body

When making the window transparent:

Non Decoration Body

When loading LED lights

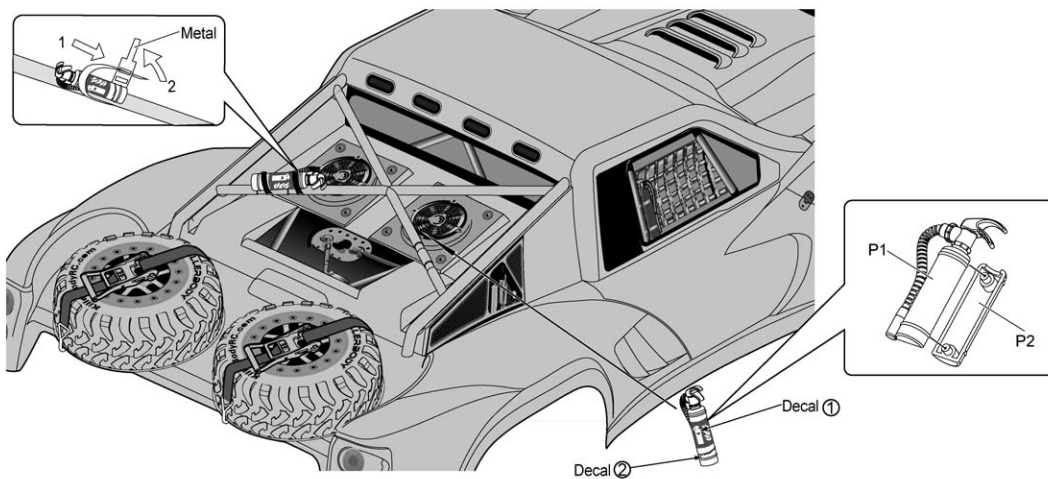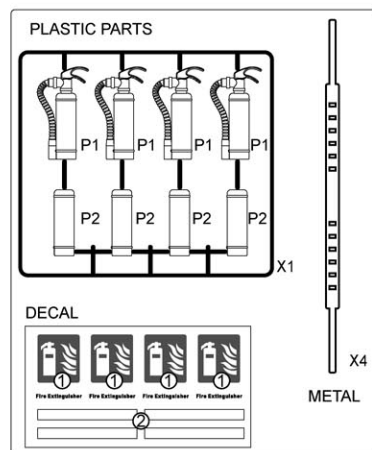

Wing Mirror




NO.48044

Decoration Body

When making the window transparent:

Non Decoration Body

When loading LED lights

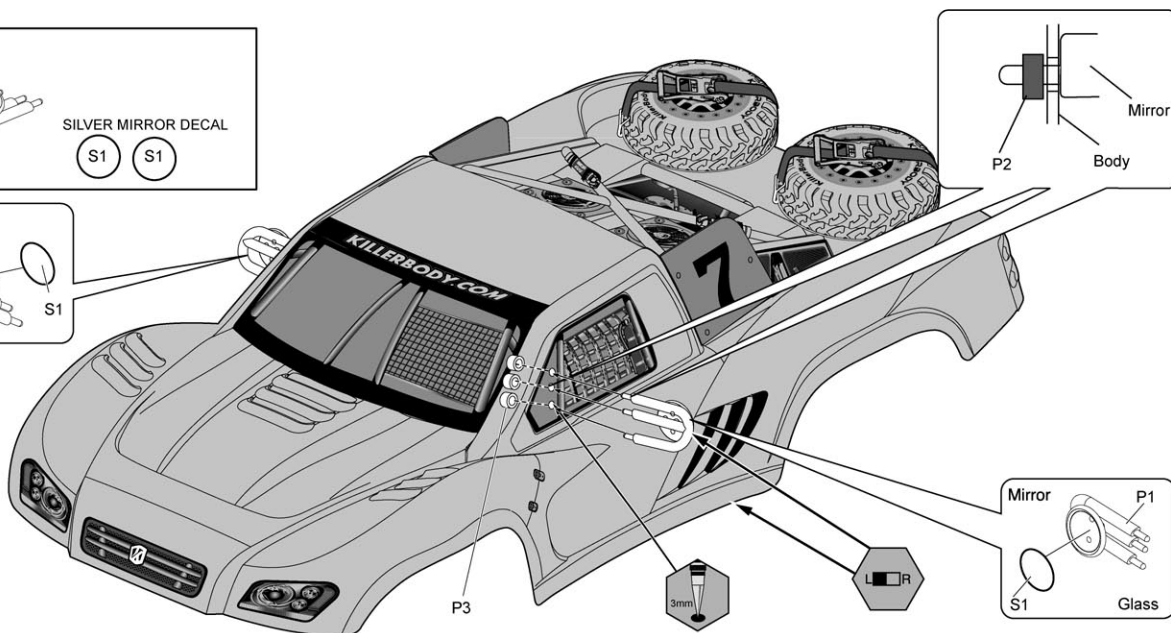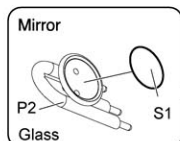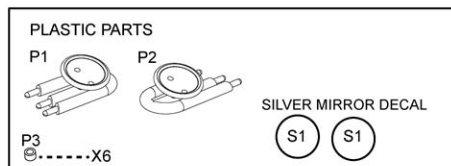



Accent Light Of Roof


Decoration Body

When making the window transparent:


Non Decoration Body

When loading LED lights

PA66 PLASTIC

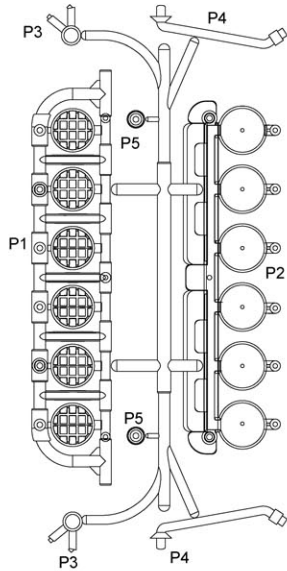


ELECTROPLATED LIGHT BUCKET

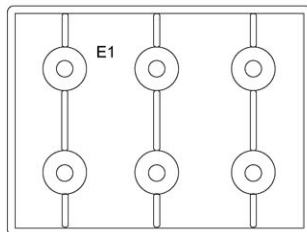

- 2.3X6mm ----- X11
- 2.3X5X6mm ----- X4
- 3X10X8mm ----- X2



LED Light System
W/Control Box (18 LEDS)
NO.48103

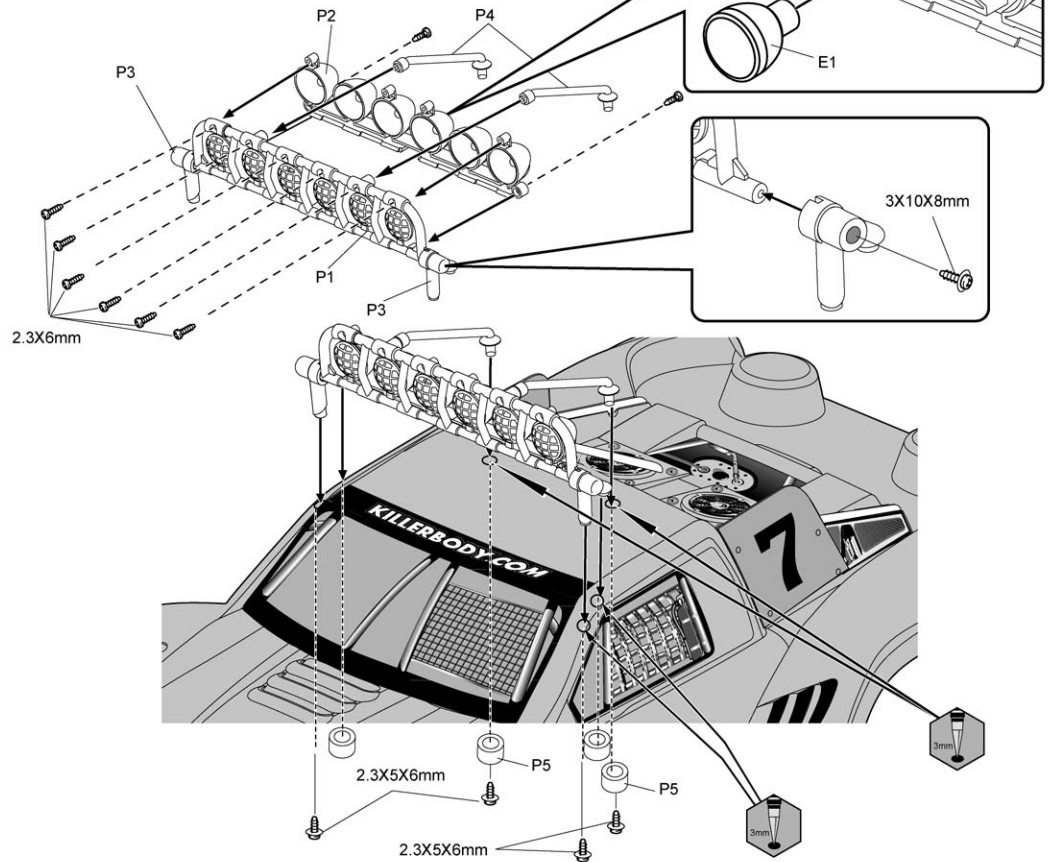

Light Bucket

NO.48041


Decoration Body

When making the window transparent:

Non Decoration Body

When loading LED lights

ELECTROPLATED LIGHT BUCKET

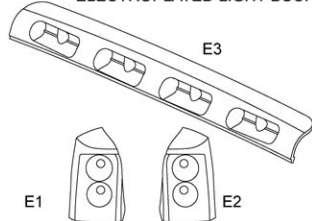


LED STOPPER


- LED STOPPER ----- 8
- 2 x 7mm F/H TP Screw ----- 8

▶ Please tape the wiring, etc. on the body using the attached aluminum tape.

▶ Please put the attached aluminum tape on the top and bottom of the headlight and the taillights.

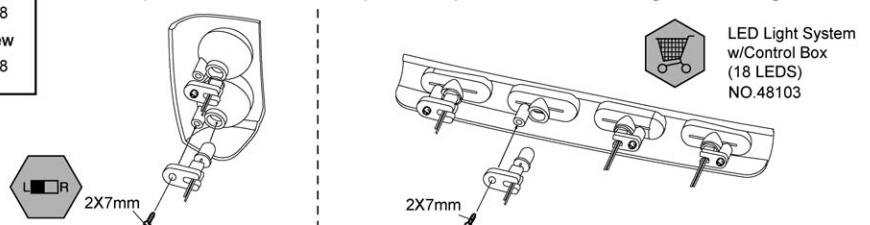

Tape up
an aluminum tape.

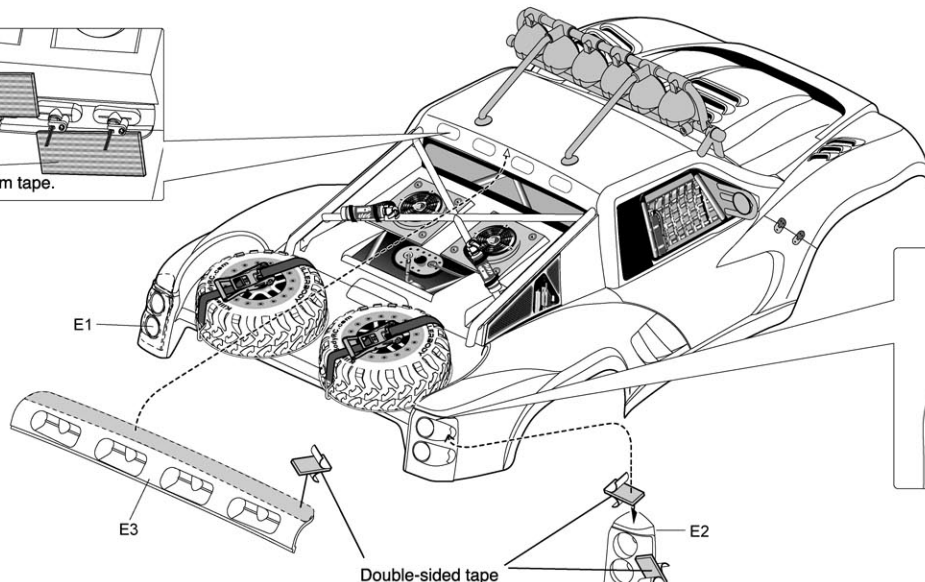

Tape up
an aluminum tape.

KID 2



Unique Cockpit

NO.48037


Decoration Body

When making the window transparent:

Non Decoration Body


When loading LED lights

1 Cutting

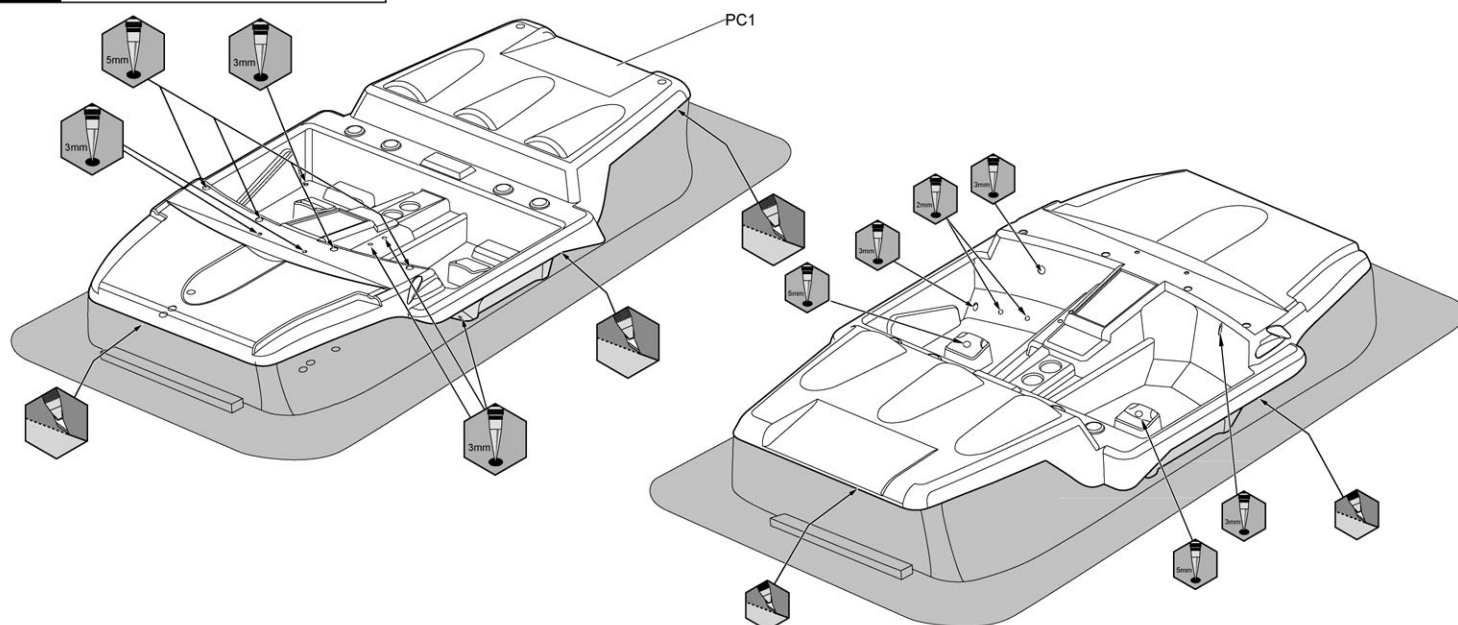


2 Painting


- Before painting, use a neutral detergent to remove any oil residues and dirt.

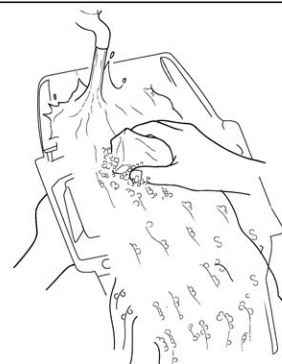

- Paint the cockpit from the inside.

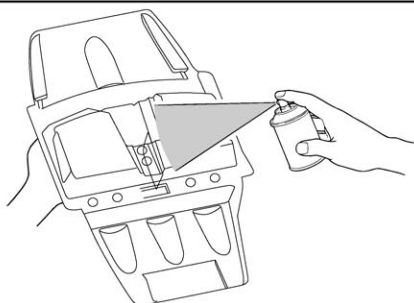


- After painting, remove the protective film from the cockpit.

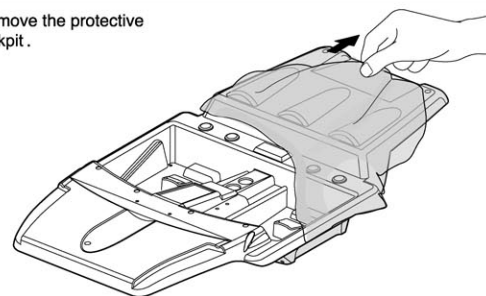

3 Decal

► The decal numbers between brackets are only for the opposite side.

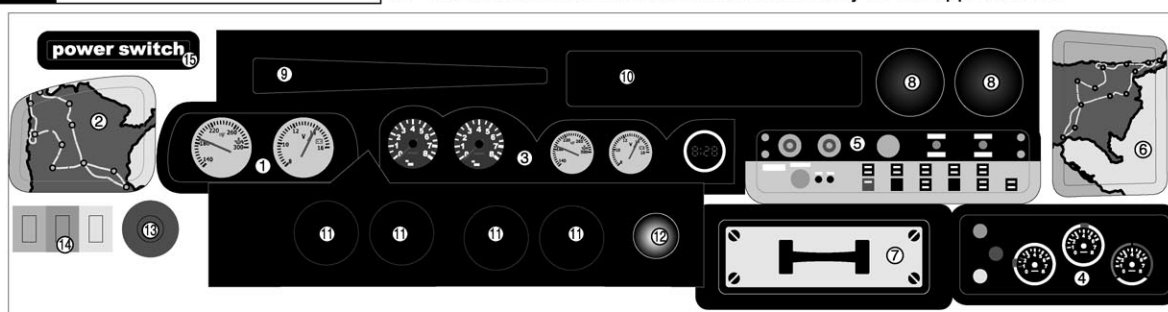





PARTS

PA66 PLASTIC




BODY	-----	X1
PA66 PLASTIC PARTS	-----	X1

PARTS BAG

LED STOPPER	-----	X2
 CLIP	-----	X5
 O-RING	-----	X5
 TAPPING SCREW	-----	X4
DOUBLE-SIDED TAPE	-----	X1
ALUMINUM TAPE	-----	X1

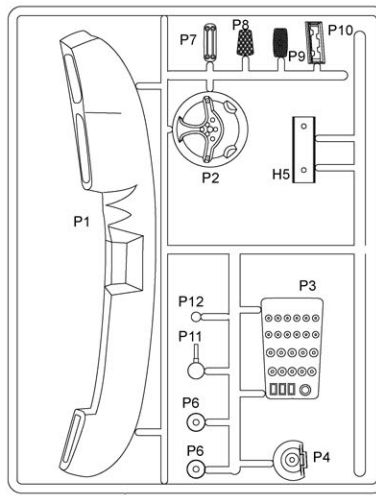

4 Plastic Parts

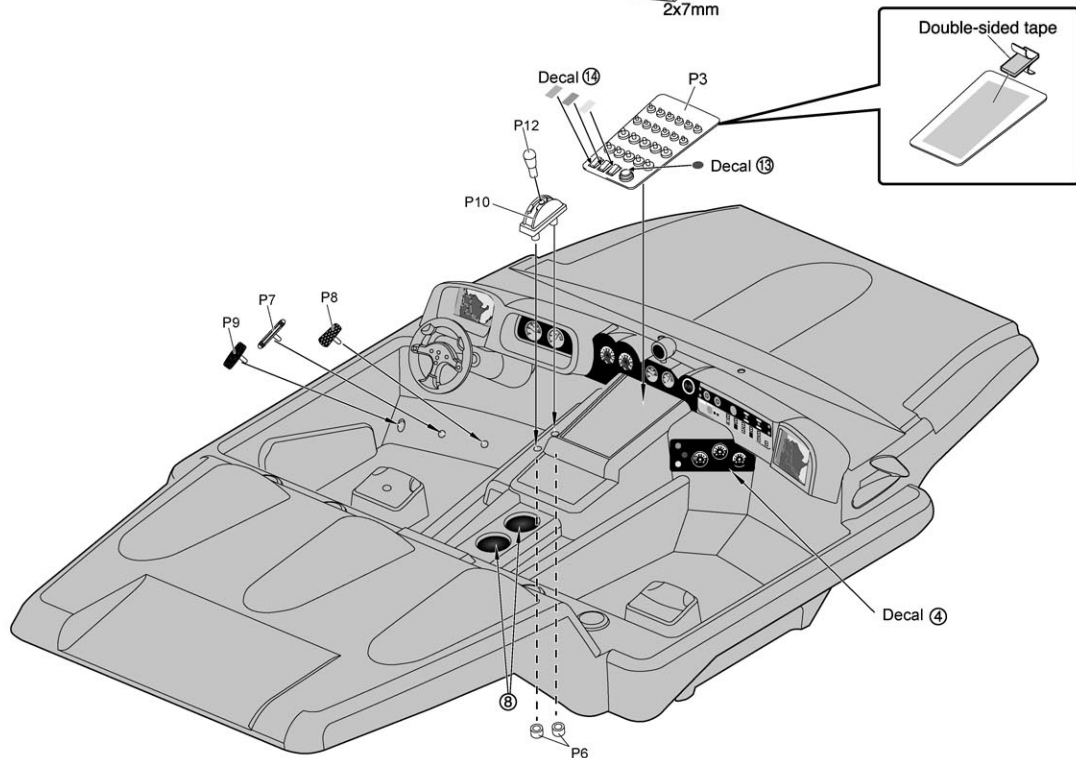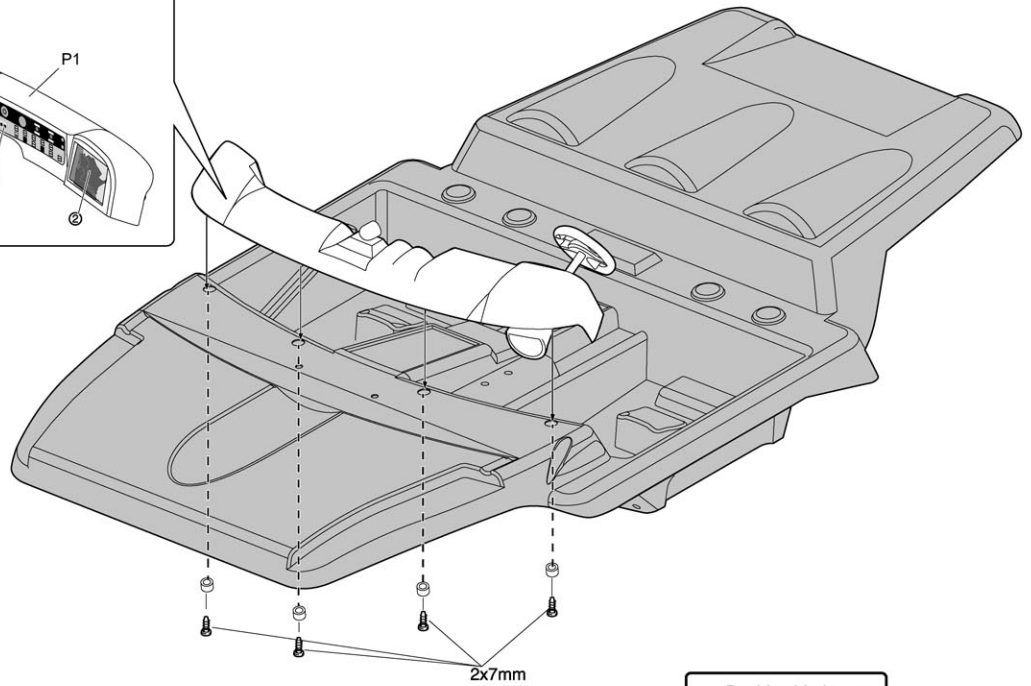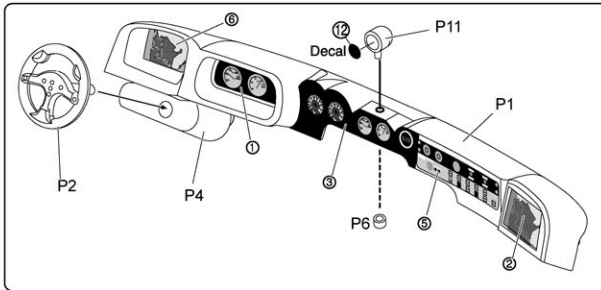



Seat

NO.48051

Decoration Body


When making the window transparent:

Non Decoration Body

When loading LED lights

PLASTIC PARTS

P1

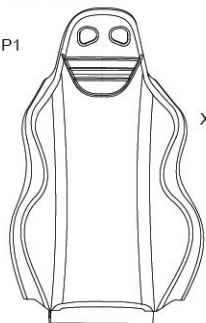


X2

P3



X2

P2

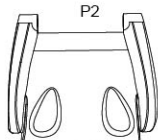

X2



TAPPING SCREW



----- 3



----- 4

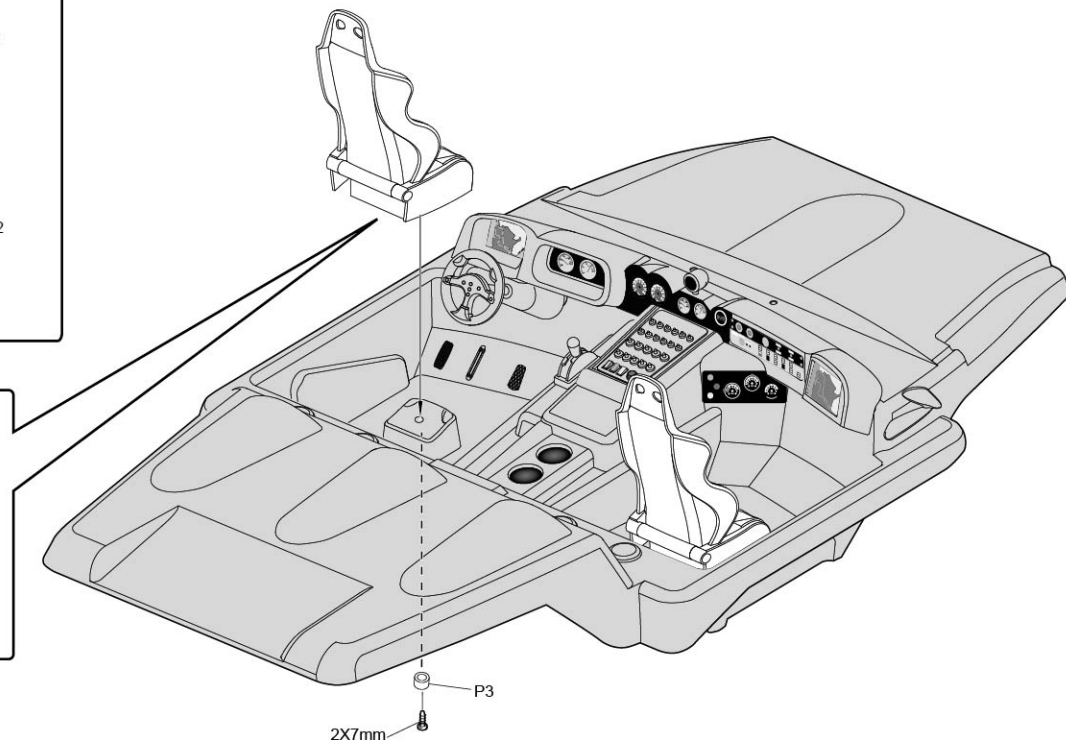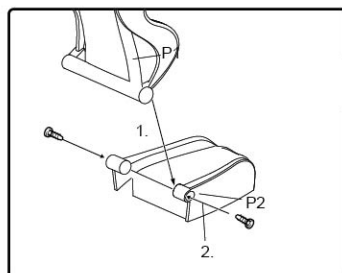

5 Body

Decoration Body


When making the window transparent:

Non Decoration Body


When loading LED lights



For safety reasons, always fit the body shell when running your car.

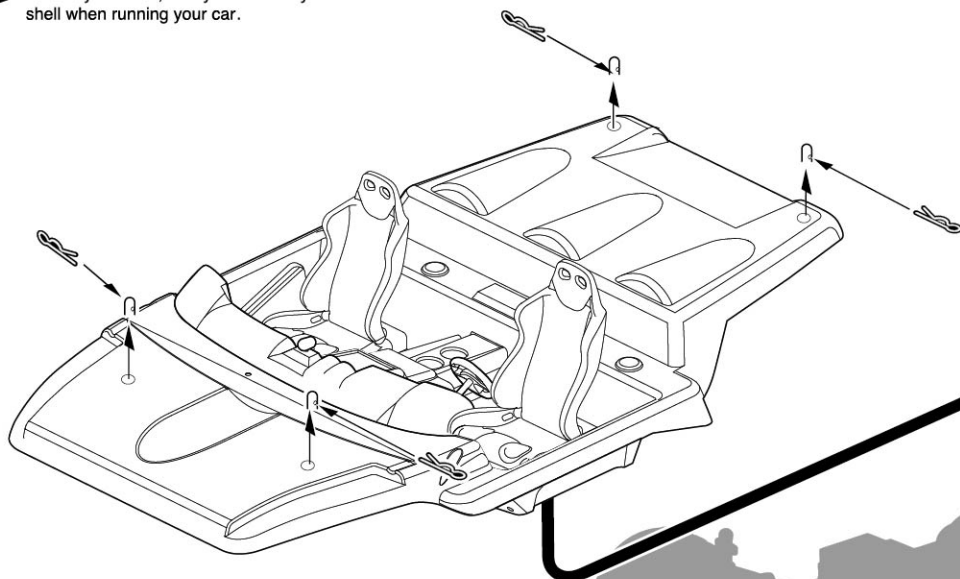

Use the extension body mount (sold separately) if the body mount height is not enough.

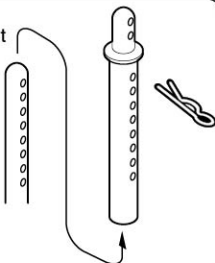

ABS PARTS



Book

PLASTIC PARTS



P1



P2



P3



P4




P5


P6





P7

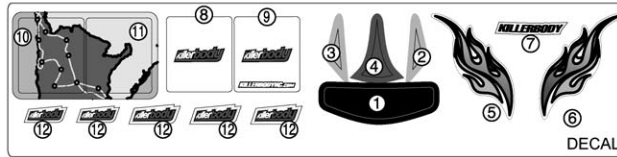

DECAL


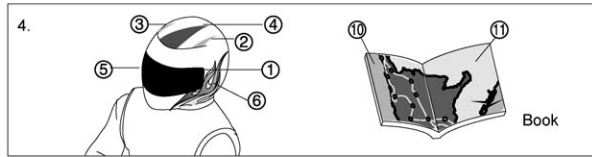


Book

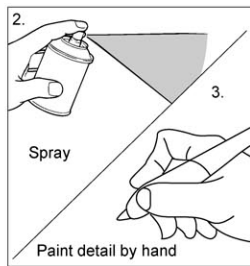
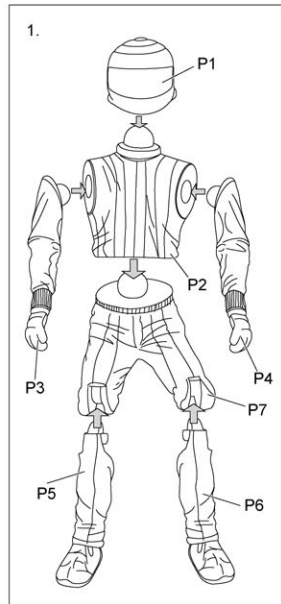


Spray

Paint detail by hand

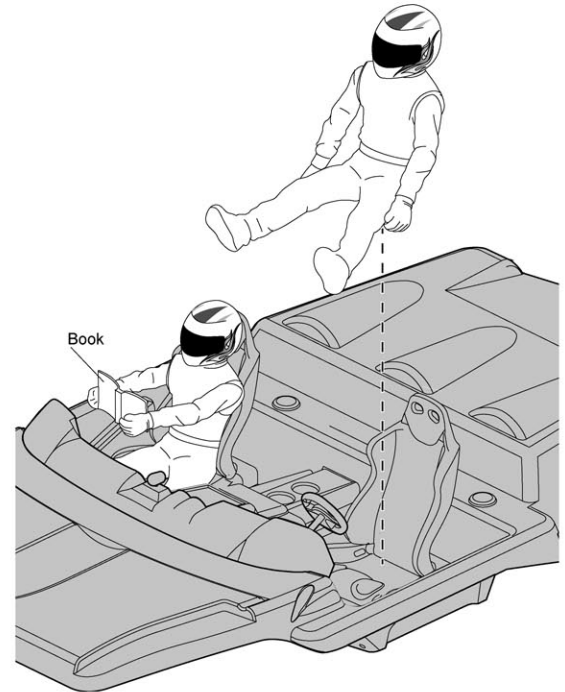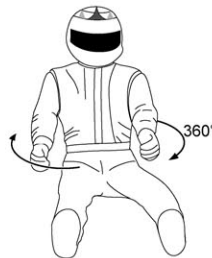

Book

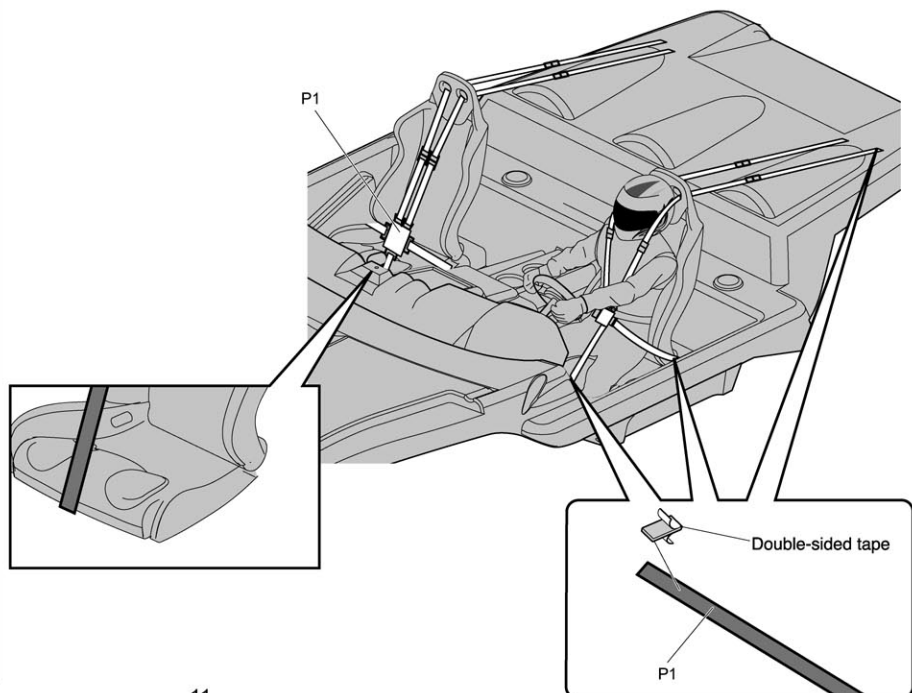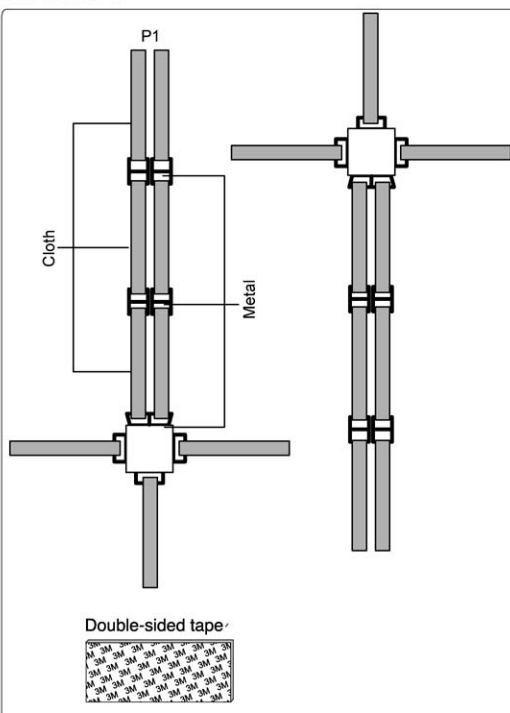

Double-sided tape




P1



Anti-role Bar of Cockpit



NO.48039

PLASTIC PARTS

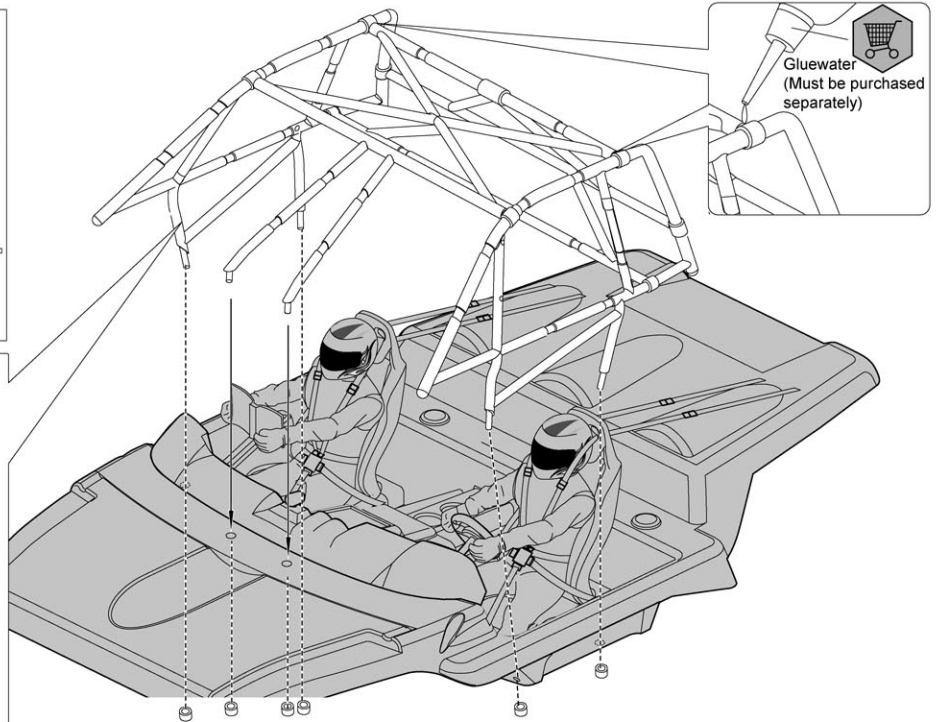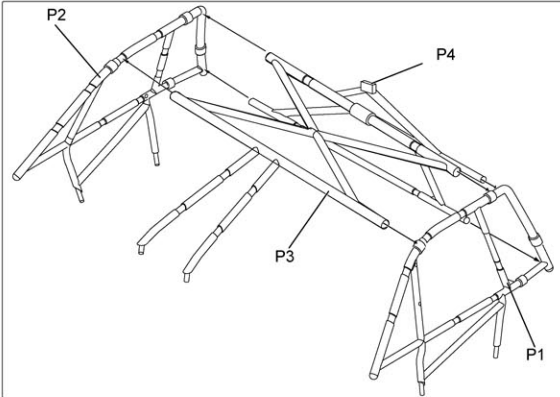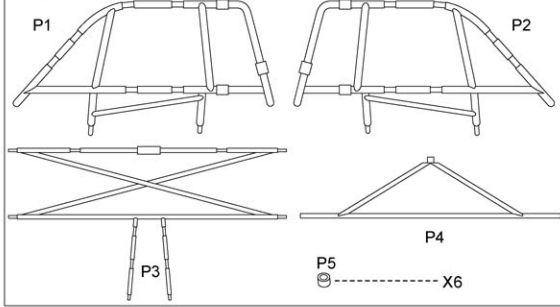



Protection Curtain (cloth)

NO.48047

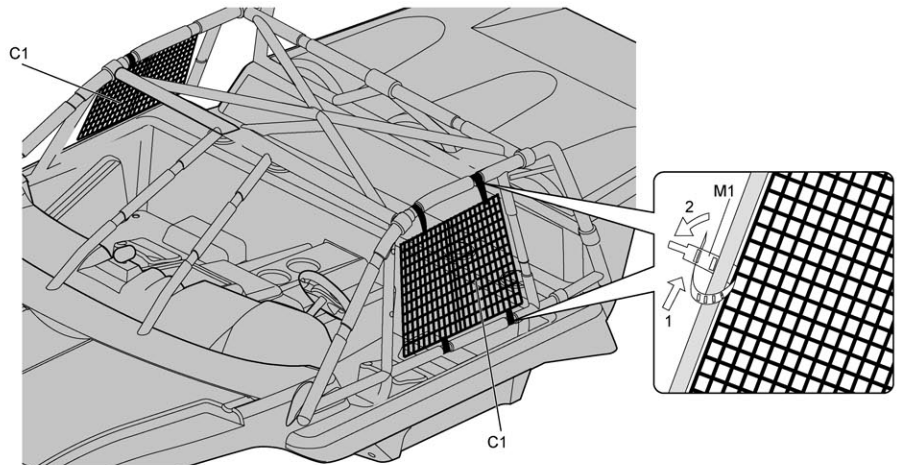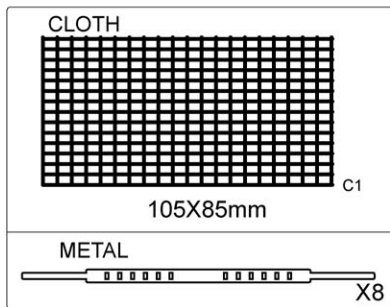

Protection Net (metal)



NO.48048

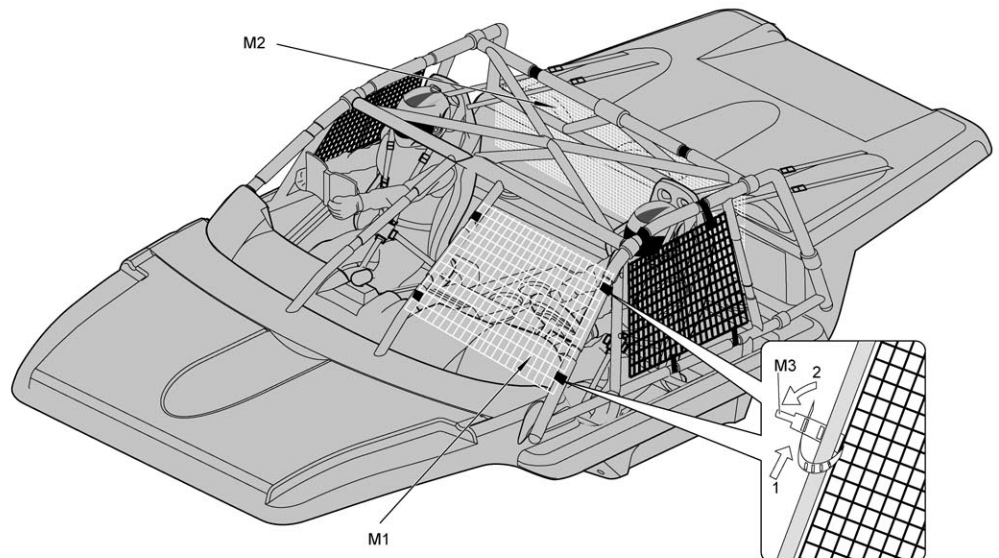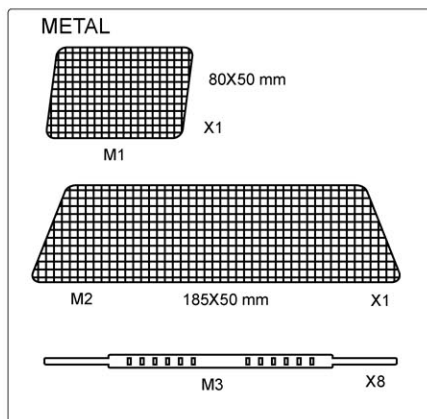





Fire-extinguisher

NO.48052

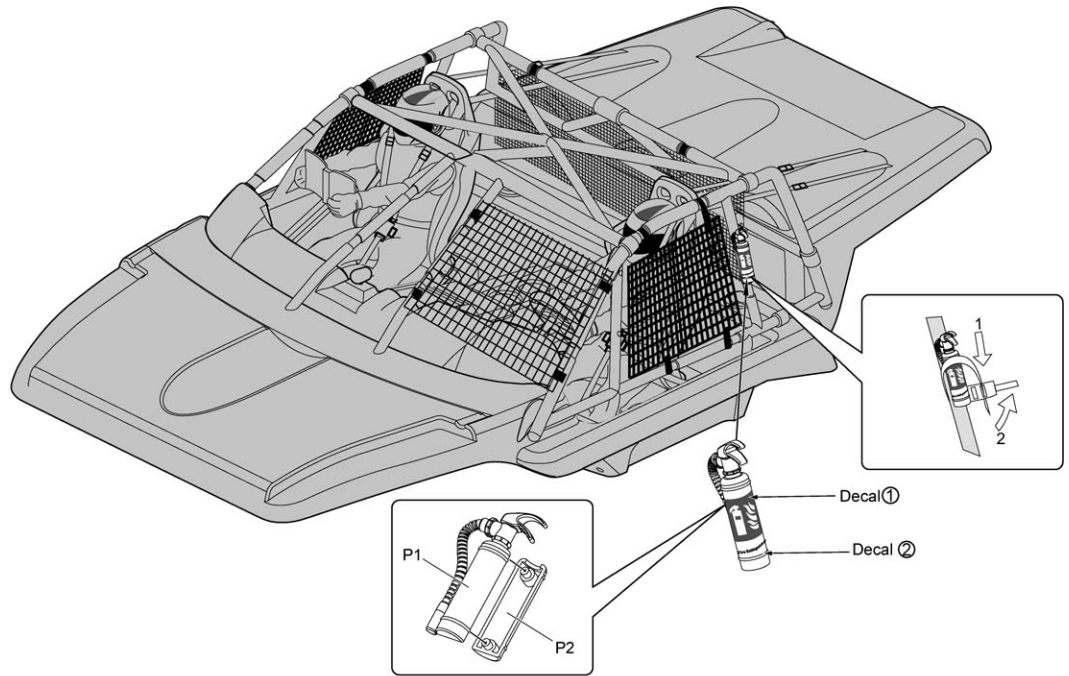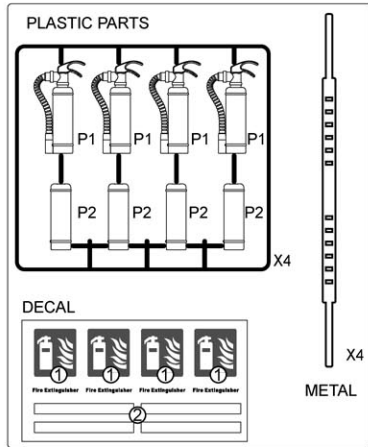

Front Bumper

NO.48042

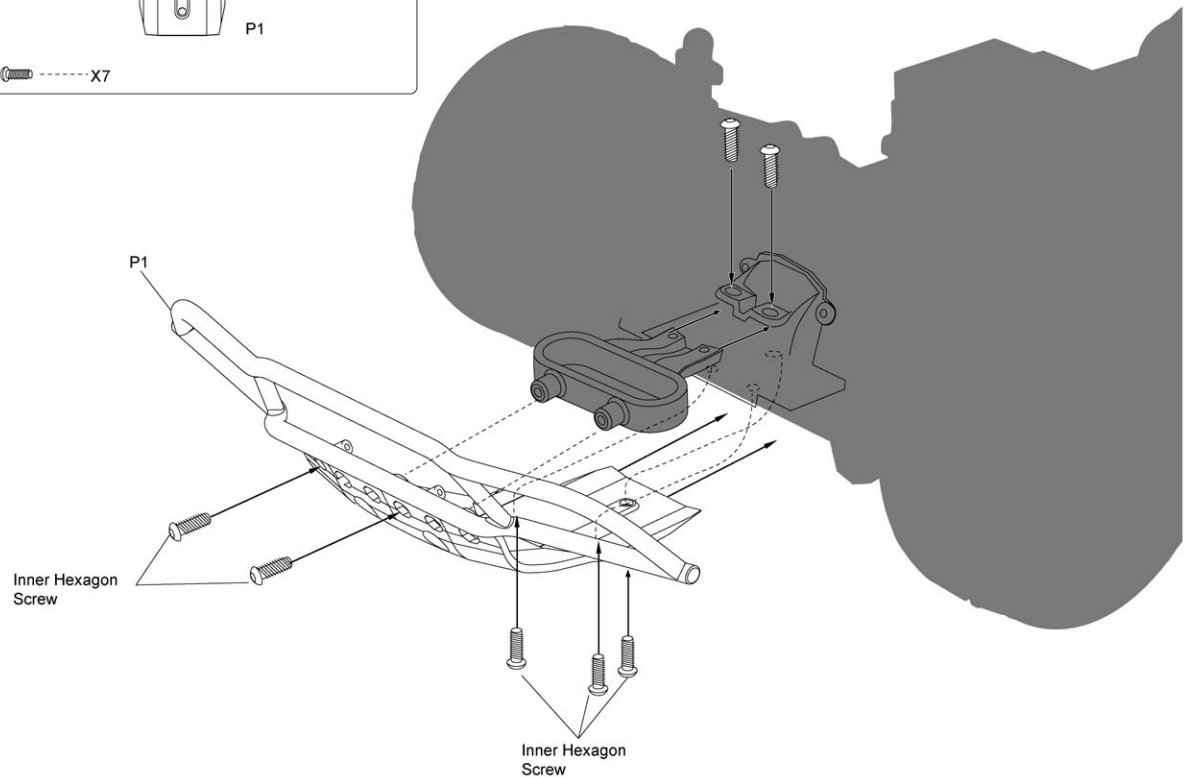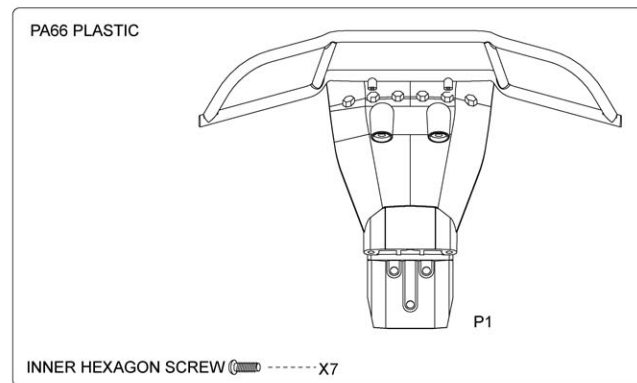



Rear Bumper

NO.48104


Decoration Body

When making the window transparent:


Non Decoration Body

When loading LED lights


PA66 PLASTIC

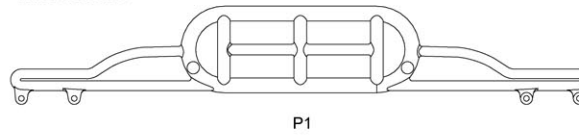

P1

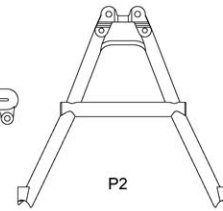


P2

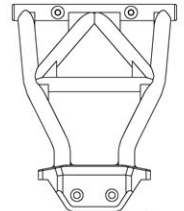

P3

INNER HEXAGON SCREW  X6

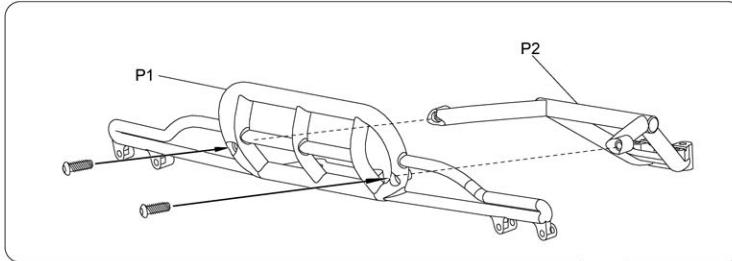

Inner Hexagon
Screw



Front Accent Light

NO.48046

Decoration Body


When making the window transparent:

Non Decoration Body


When loading LED lights

PA66 PLASTIC

P1

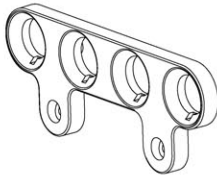

P2



P3



P3



P3



P3



P4



P4



P4



P4



P5



P5




P5



P5



ELECTROPLATED LIGHT BUCKET






E1

E1

E1

E1

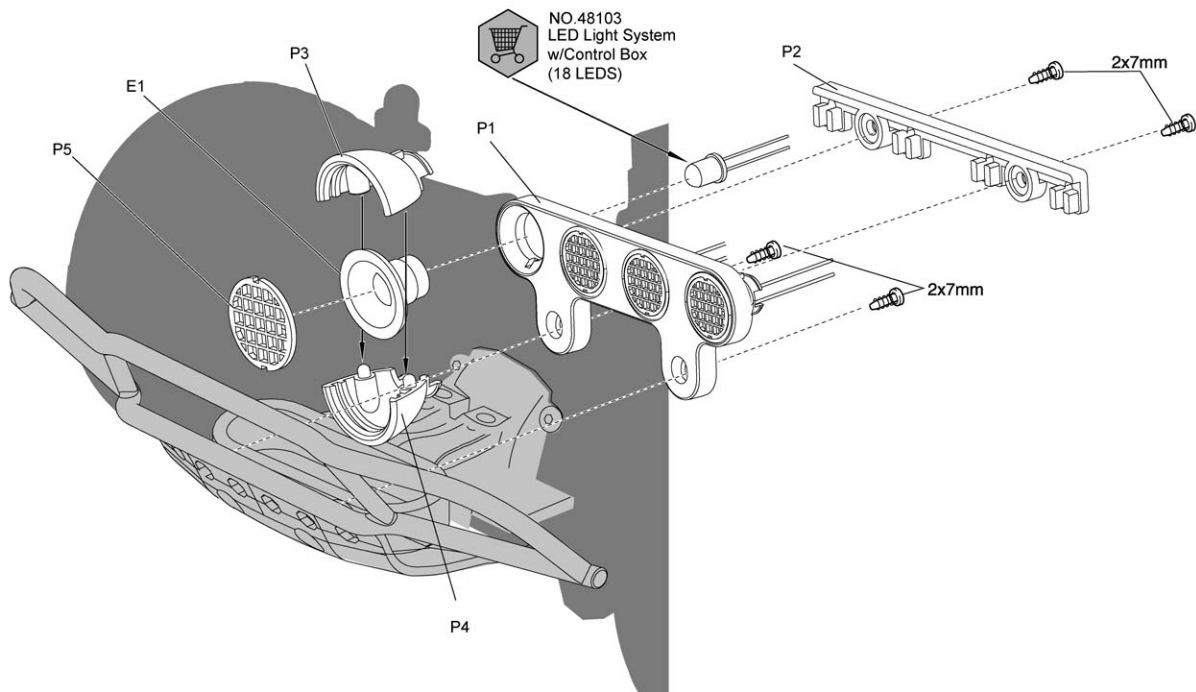


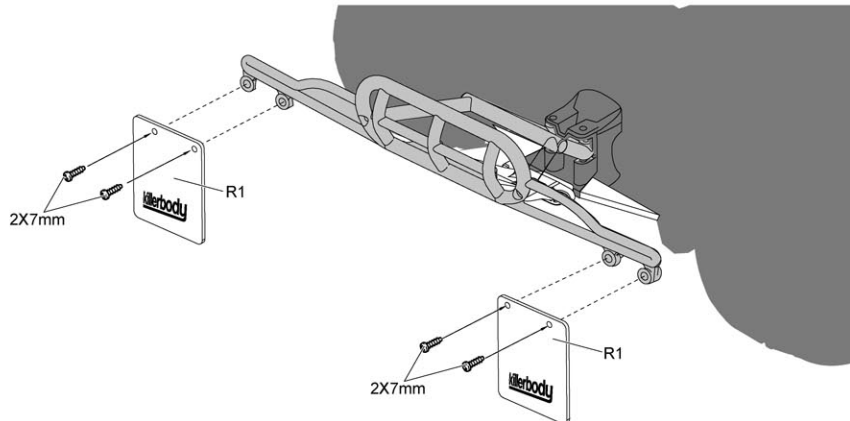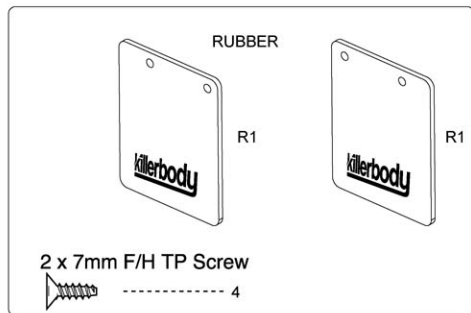

6 Body

Decoration Body
When making the window transparent:
Non Decoration Body
When loading LED lights


For safety reasons, always fit the body shell when running your car.

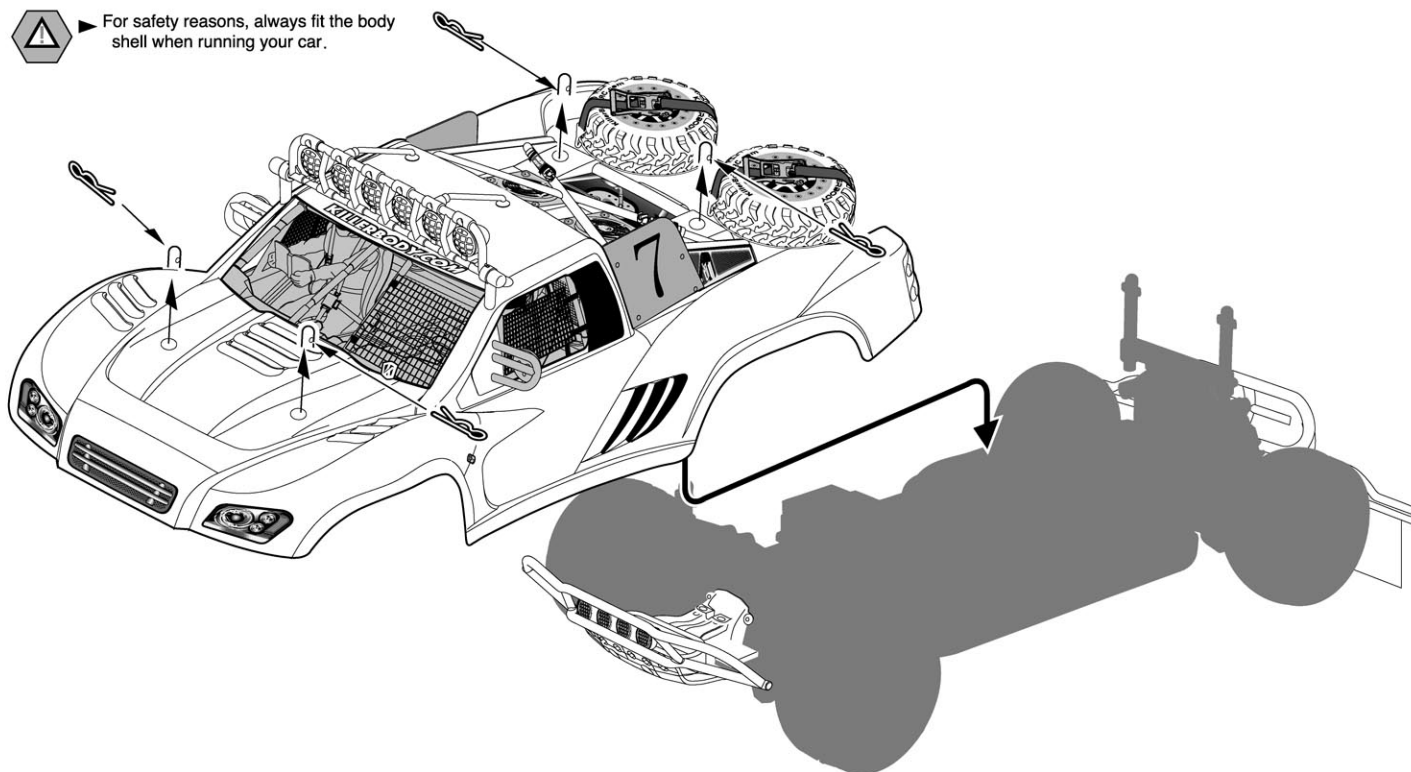

Option Parts & Accessory

No.	Part Names	No.	Part Names
48033	Short Course Truck Clear Body MONSTER	48051	Seat
48034	Short Course Truck Finished Body MONSTER Tattoo graphics (Printed)	48052	Fire-extinguisher
48035	Short Course Truck Finished Body MONSTER Mars graphics (Printed)	48053	Seat Belt
48036	Short Course Truck Finished Body MONSTER Carbon fiber graphics (Printed)	48054	Metal Euphroe
48037	Unique Cockpit Clear Body	48103	LED Light System w/Control Box (18 LEDS)
48038	Spare Tire	48066	Liquid Masking Medium
48039	Anti-role Bar of Cockpit	48062	Short Course Truck Finished Body Set MONSTER Tattoo graphics (Printed) Assembled with: Light Bucket / Accent Light of Roof / Spare Tire / Anti-role Bar / Fire-extinguisher / Wing Mirror
48040	Anti-role Bar	48049	Short Course Truck Finished Body Set MONSTER Mars graphics (Printed) Assembled with: Light Bucket / Accent Light of Roof / Spare Tire / Anti-role Bar / Fire-extinguisher / Wing Mirror
48041	Light Bucket	48070	Short Course Truck Finished Body Set MONSTER Carbon fiber graphics (Printed) Assembled with: Light Bucket / Accent Light of Roof / Spare Tire / Anti-role Bar / Fire-extinguisher / Wing Mirror
48042	Front Bumper	48071	Unique Cockpit Finished Body Set Assembled with: Anti-role Bar of Cockpit / Protection Curtain (cloth) / Protection Net (metal) / Fire-extinguisher
48104	Rear Bumper		
48044	Wing Mirror		
48045	Accent Light of Roof		
48043	Fender		
48046	Front Accent Light		
48047	Protection Curtain (cloth)		
48048	Protection Net (metal)		
48050	Driver		