

killerbody™

REAR BUMPER NO.48104

● Symbols used throughout the instruction manual, comprise:



Cut off shaded portion.



5mm
Drill holes with
the specified diameter.



Pay close attention here!





Must be purchased
separately.





Assemble left and right sides
the same way.

PA66 Plastic



Inner Hexagon Screw  X6

P3

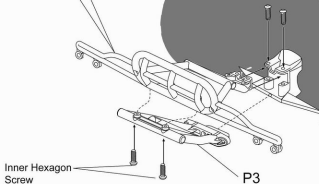

Inner Hexagon
Screw

P3