
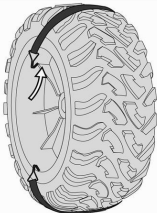



killerbody™

Metal Euphroe
Fit for 1/10 RC Car
NO.48523/48544


● Symbols used throughout the instruction manual, comprise:




Hitch the hooklet on the edge of the parts.

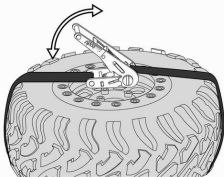

Adjust the tape until the parts stable.

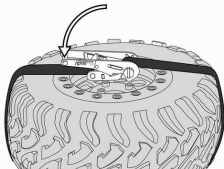

Press the buckle to retain the tape.
(Shown as the figure)

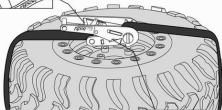

Lift up both sides of buckles to loose the tape.
(Shown as the figure)

