


1980 Skyline Hardtop
2000 Turbo GT-ES
BODY SHELL
Official Licensed Product
NO.48636

killerbodyTM
1/10 RC PLANNING INSTRUCTION SHEET

This body can be used with 1/10 electric touring car chassis (Long Wheelbase: 257mm Width: 195-200mm)

Before beginning assembly, please read these instructions thoroughly!

● Symbols used throughout the instruction manual, comprise:

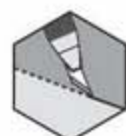

Cut off shaded portion.



5mm
Drill holes with
the specified diameter.



Pay close attention here!



Must be purchased
separately.



Assemble left and right sides
the same way.



● Before Assembly

Decoration Body

- ▶ In the case of a decoration body, please assemble it according to the contents showed.

When making the window transparent

- ▶ If you want to make the window transparent with a non decoration body, please assemble it according to the contents showed.

Non Decoration Body


- ▶ In the case of non decoration body, please assemble it according to the contents showed.

When loading LED lights

- ▶ If you want to load LED lights with a non decoration body, please assemble it according to the contents showed.

PARTS


PC body	-----	X1	Silver mirror decal	-----	X1
PC parts	-----	X5			
ABS parts	-----	X1			
ABS chromed parts	-----	X1			
Decal sheet (chromed)	-----	X1			
Window masks	-----	X1			

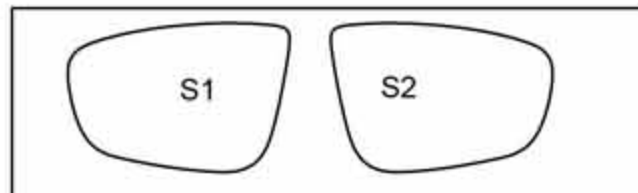


PARTS BAG

	LED stopper	-----	X12
	Screw 2.3X6mm	-----	X26
	Double-sided tape	-----	X1


PC PARTS

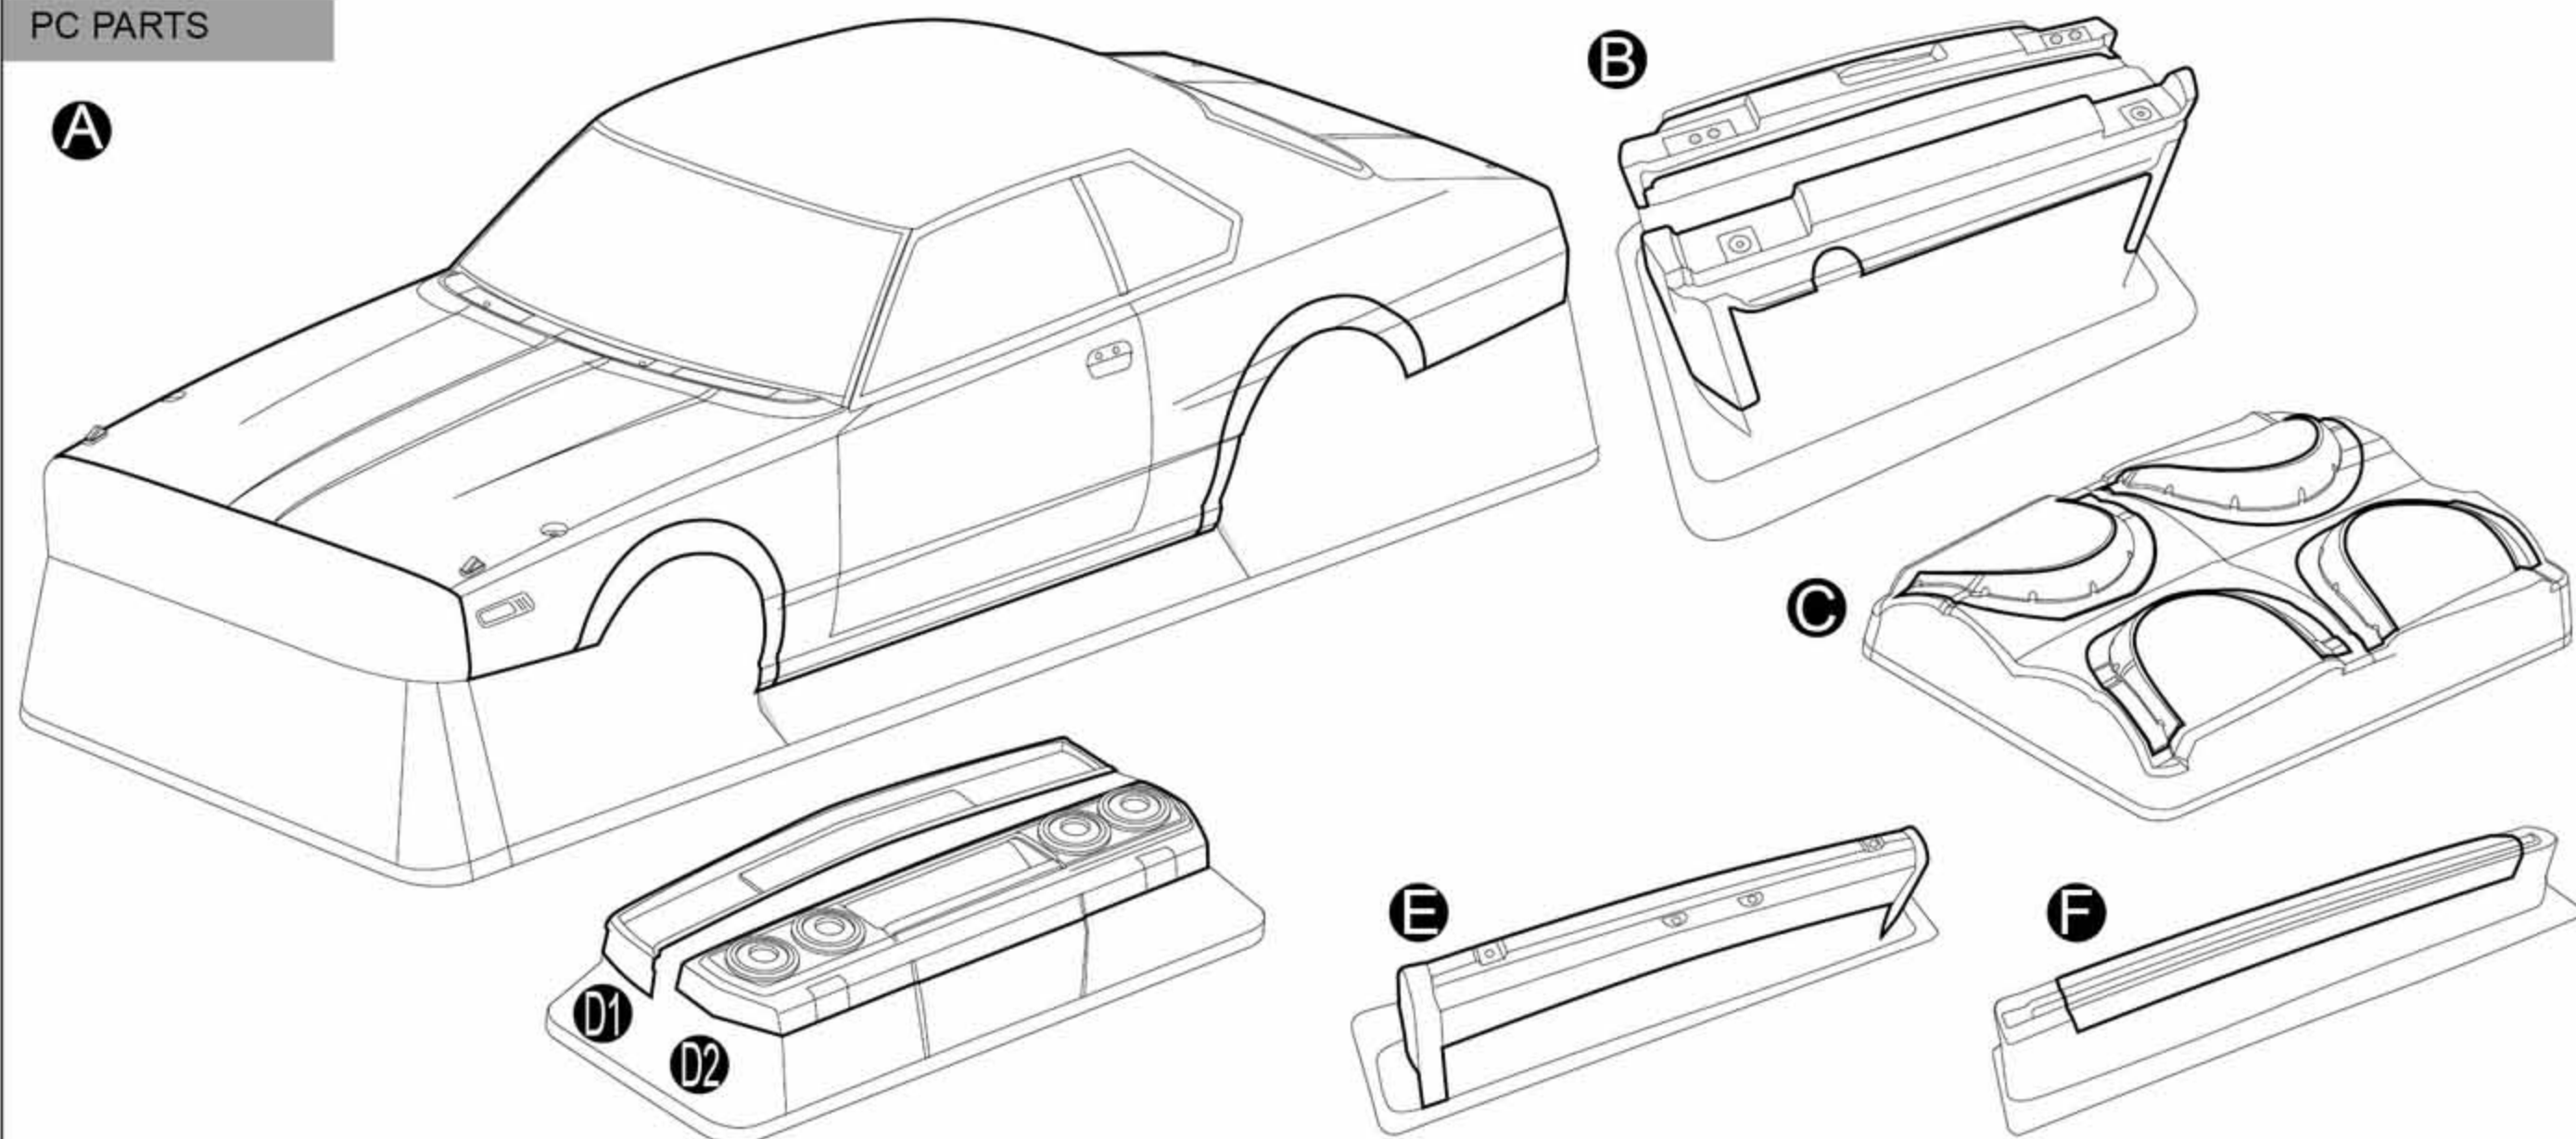


ABS PARTS






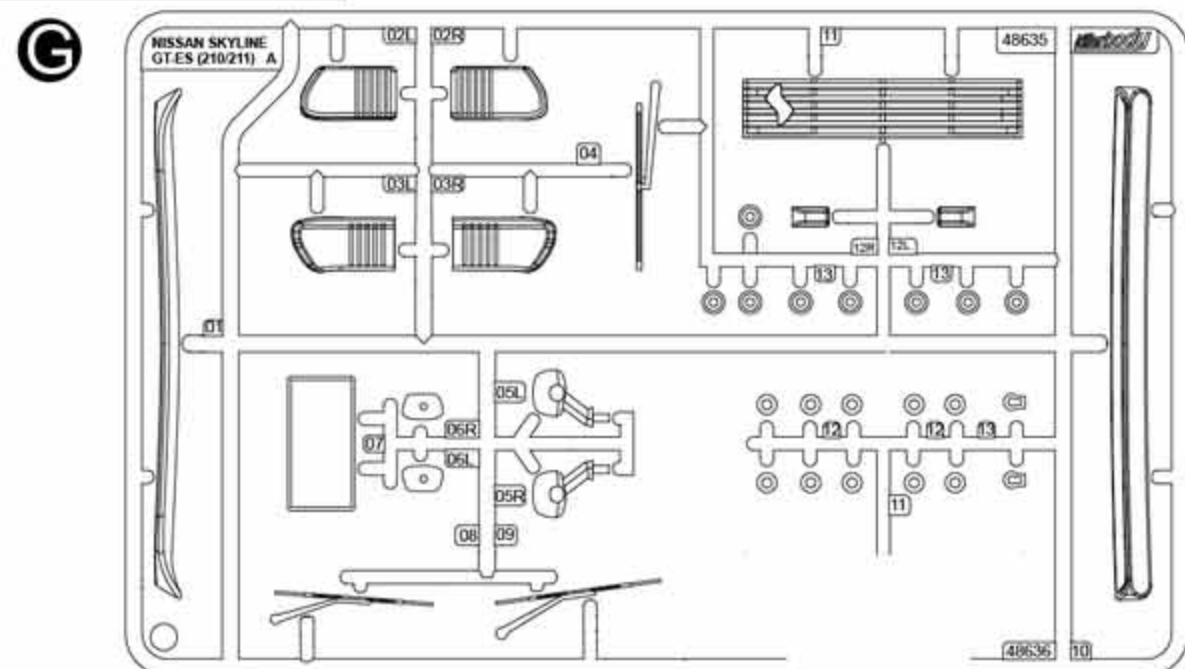


H Chromed parts

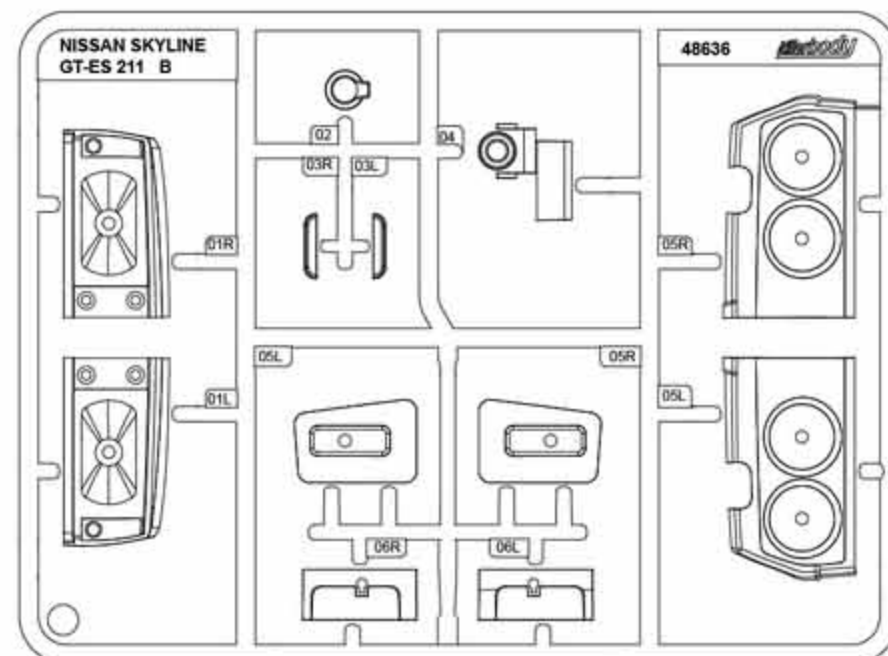

1 Cutting

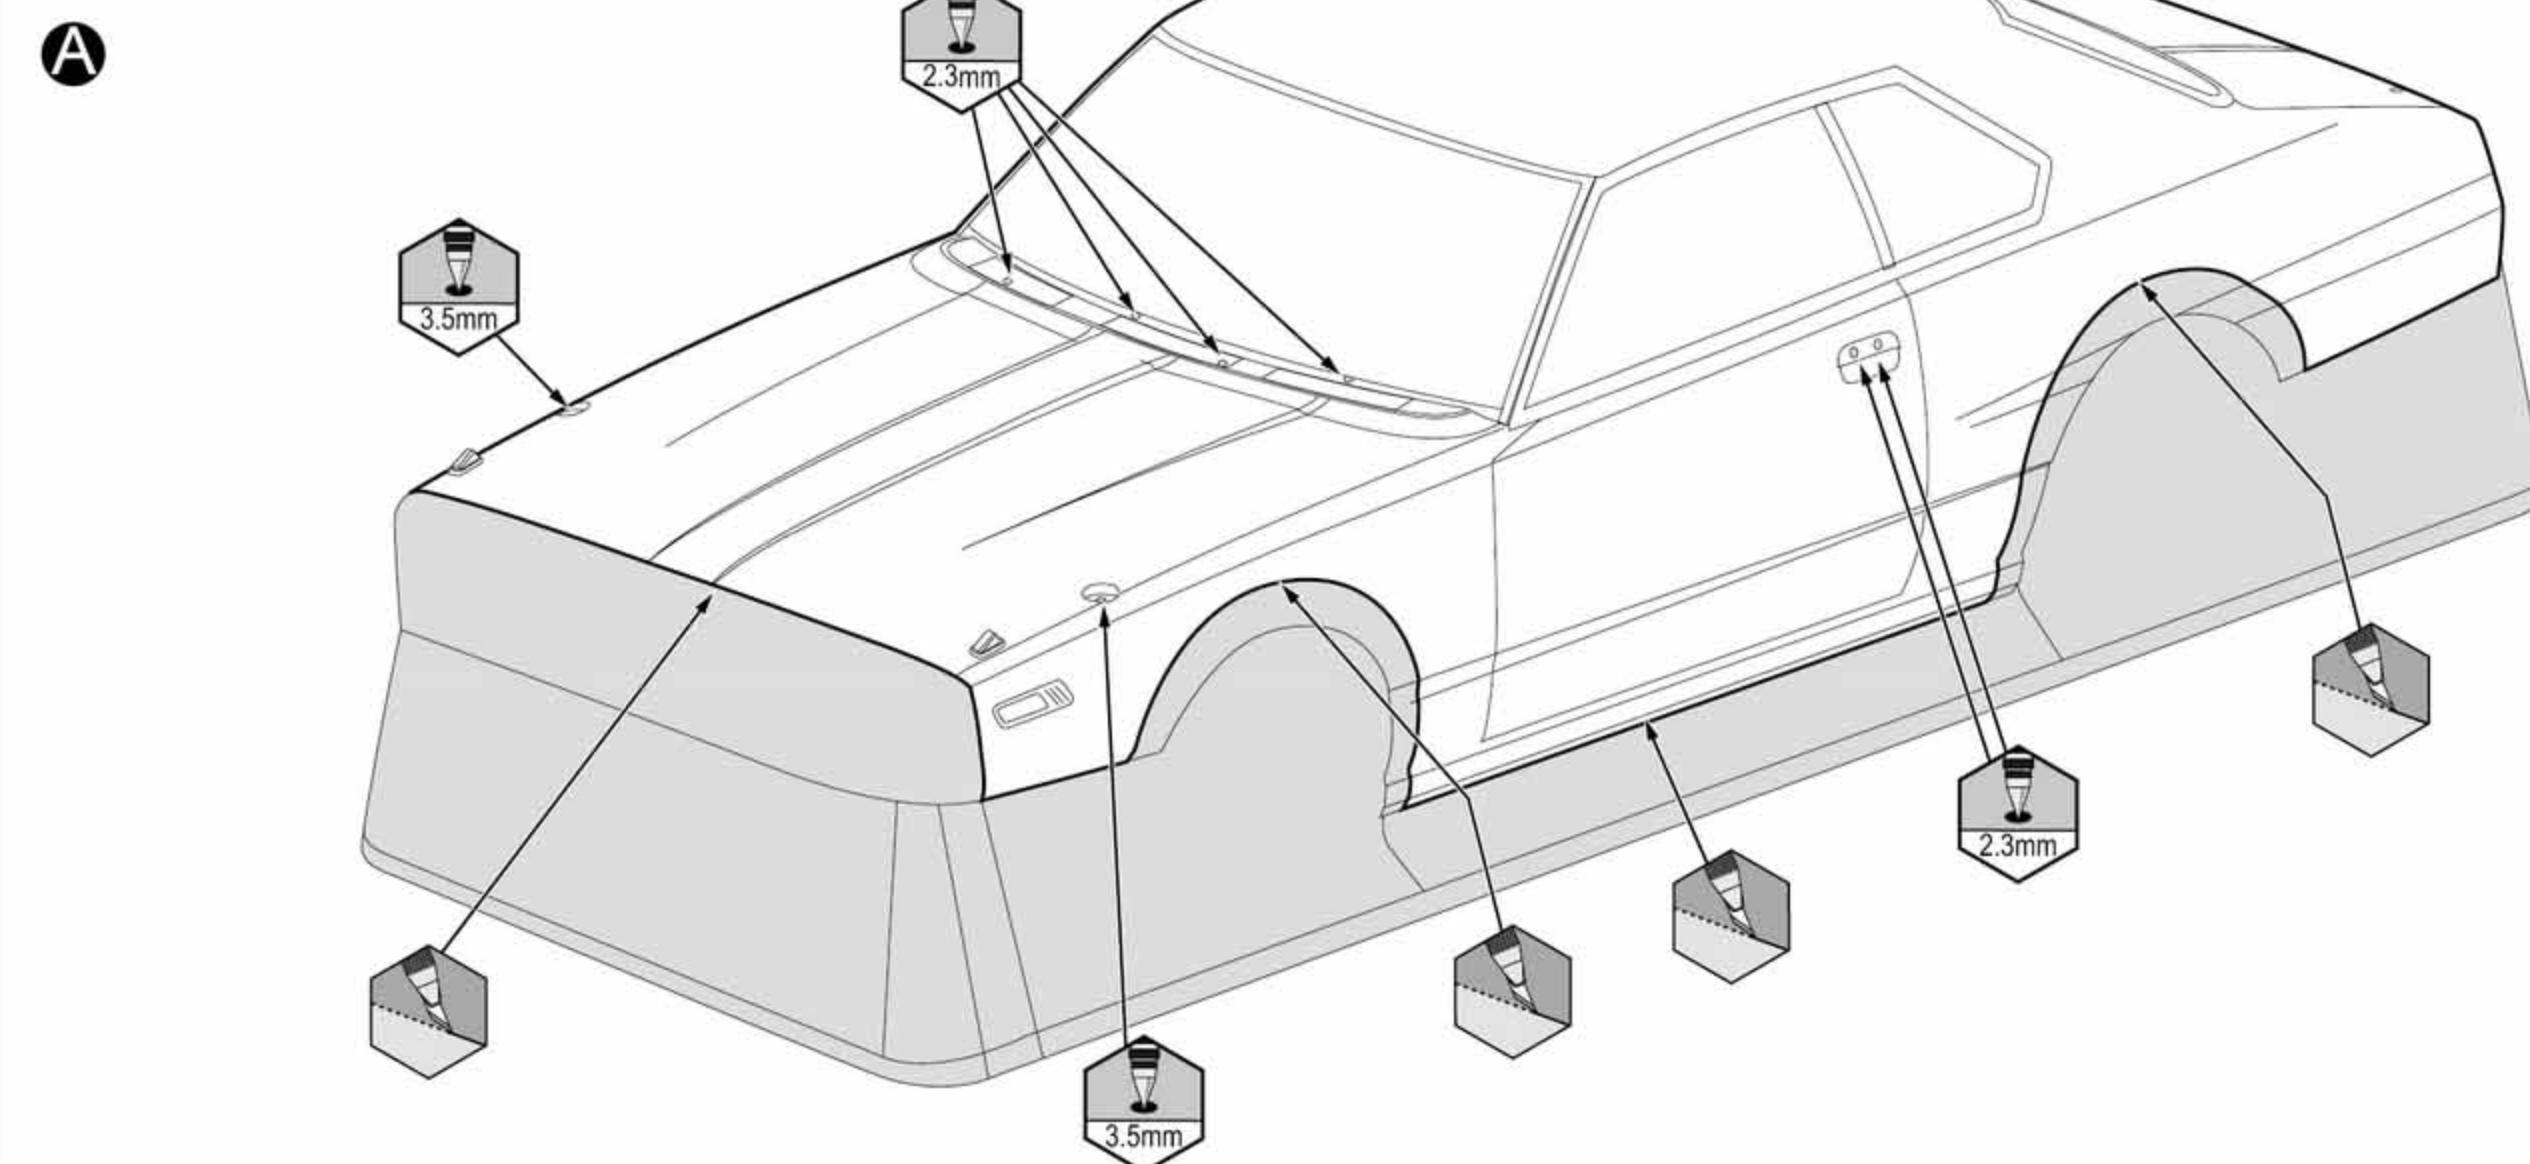


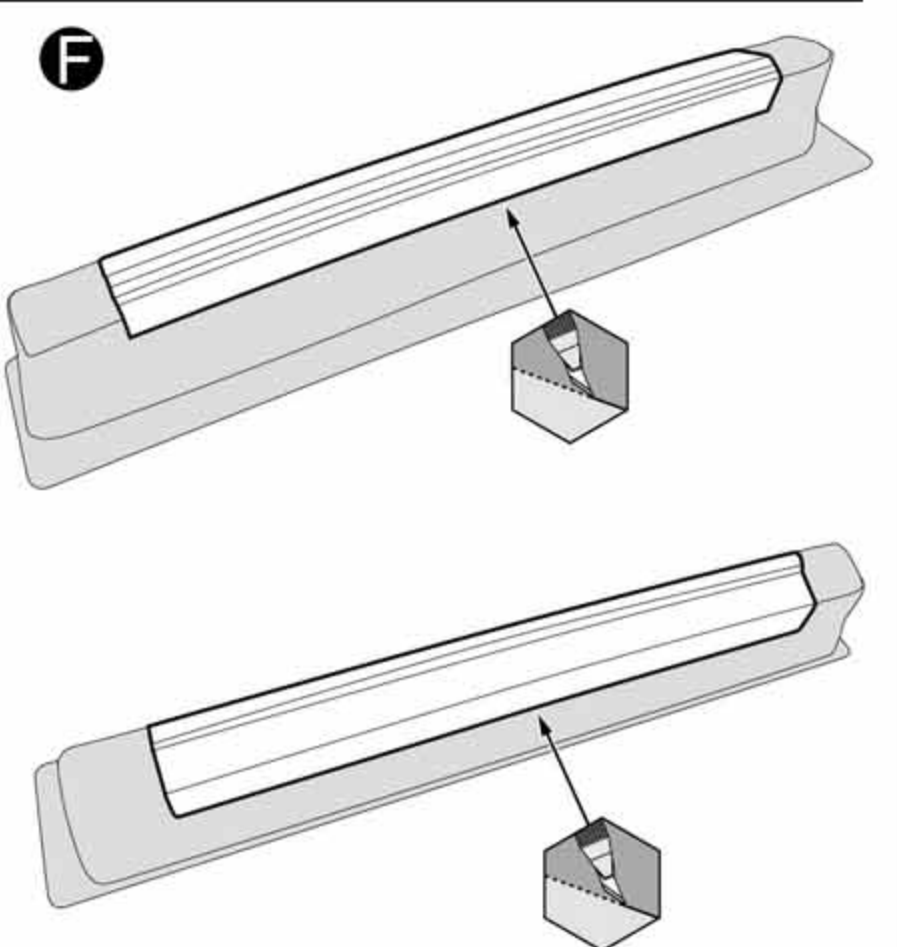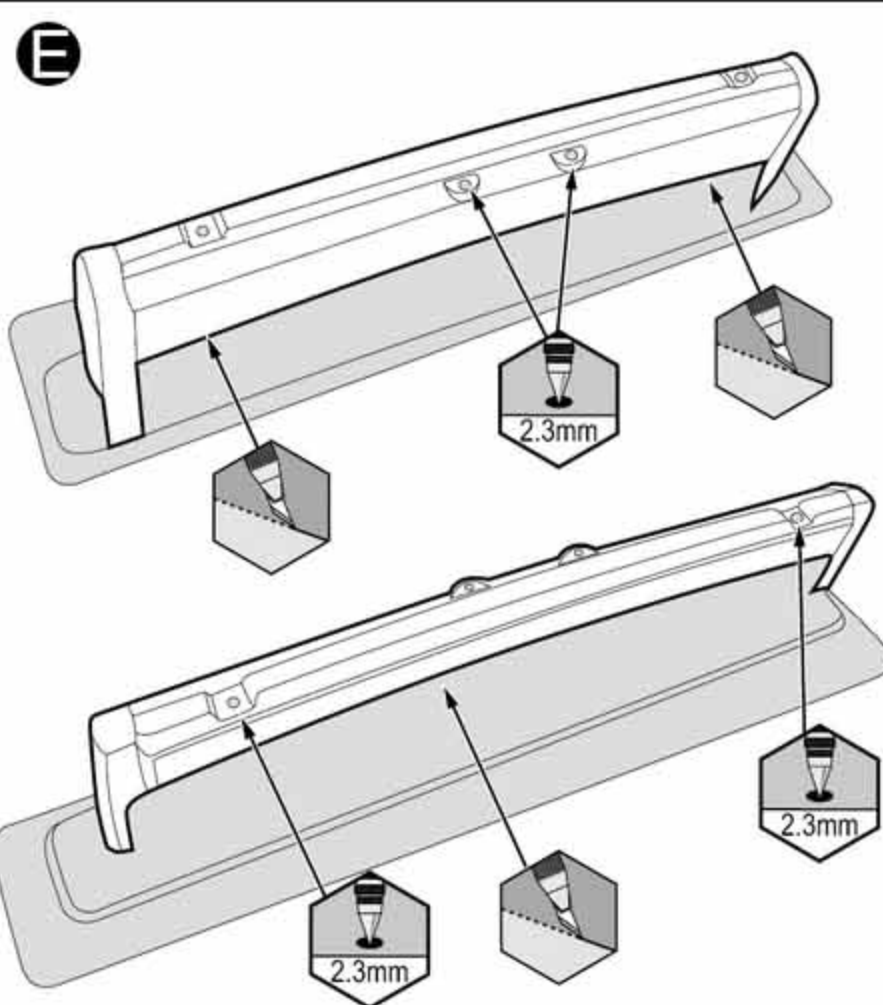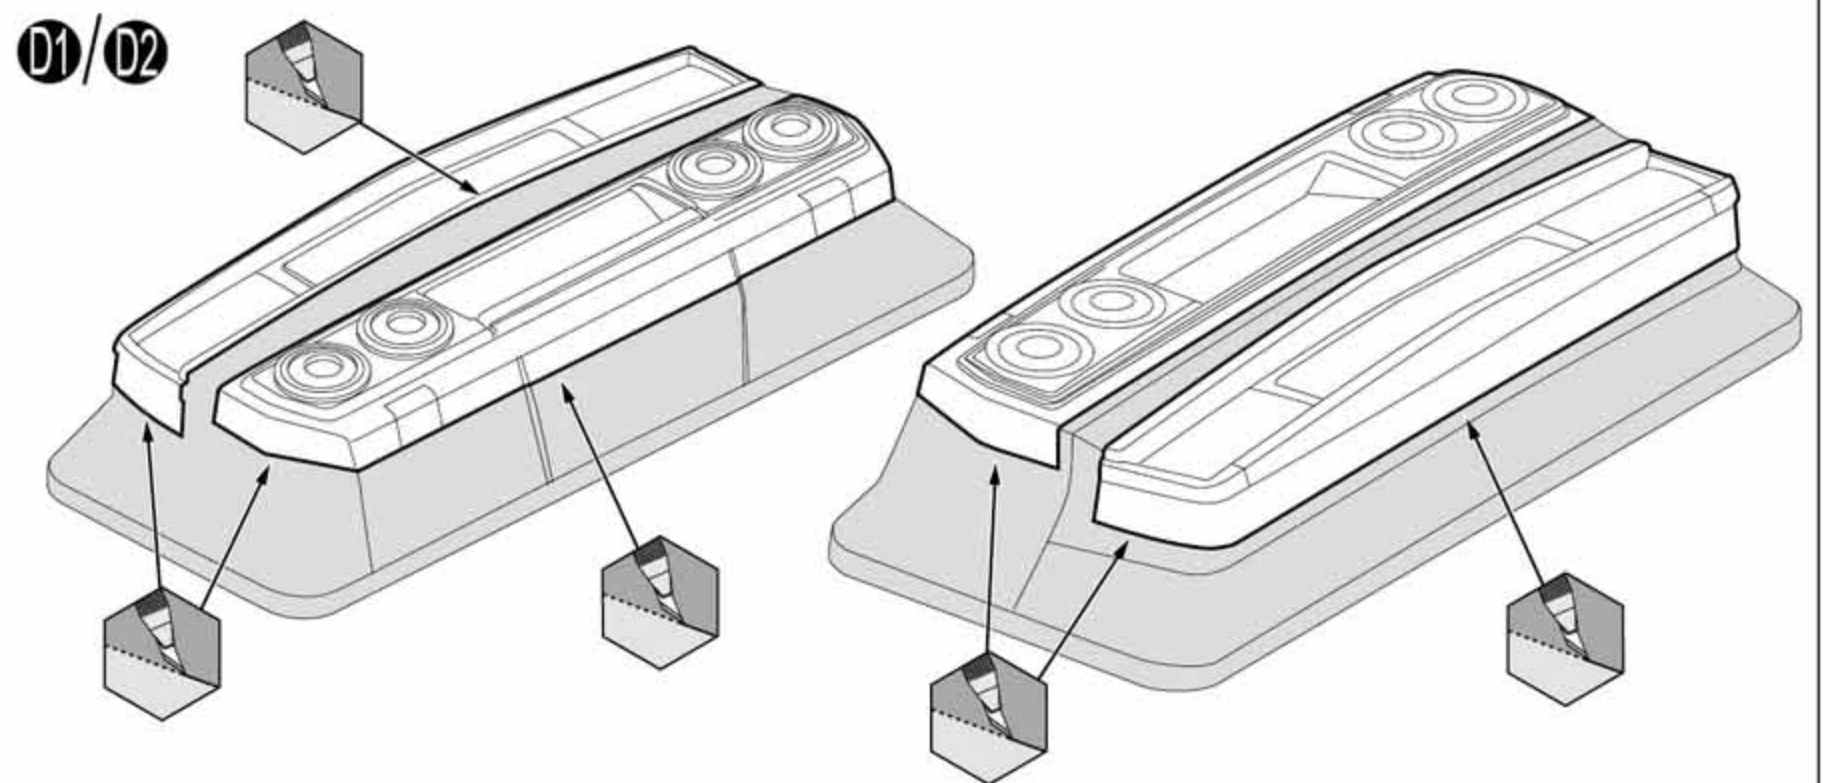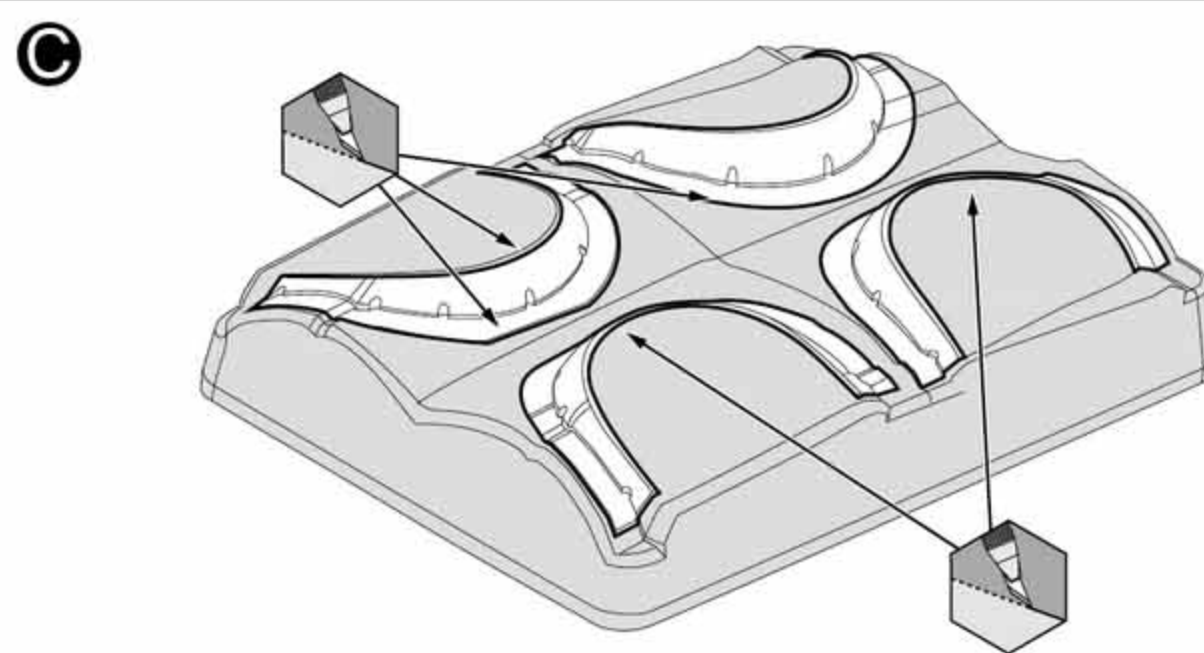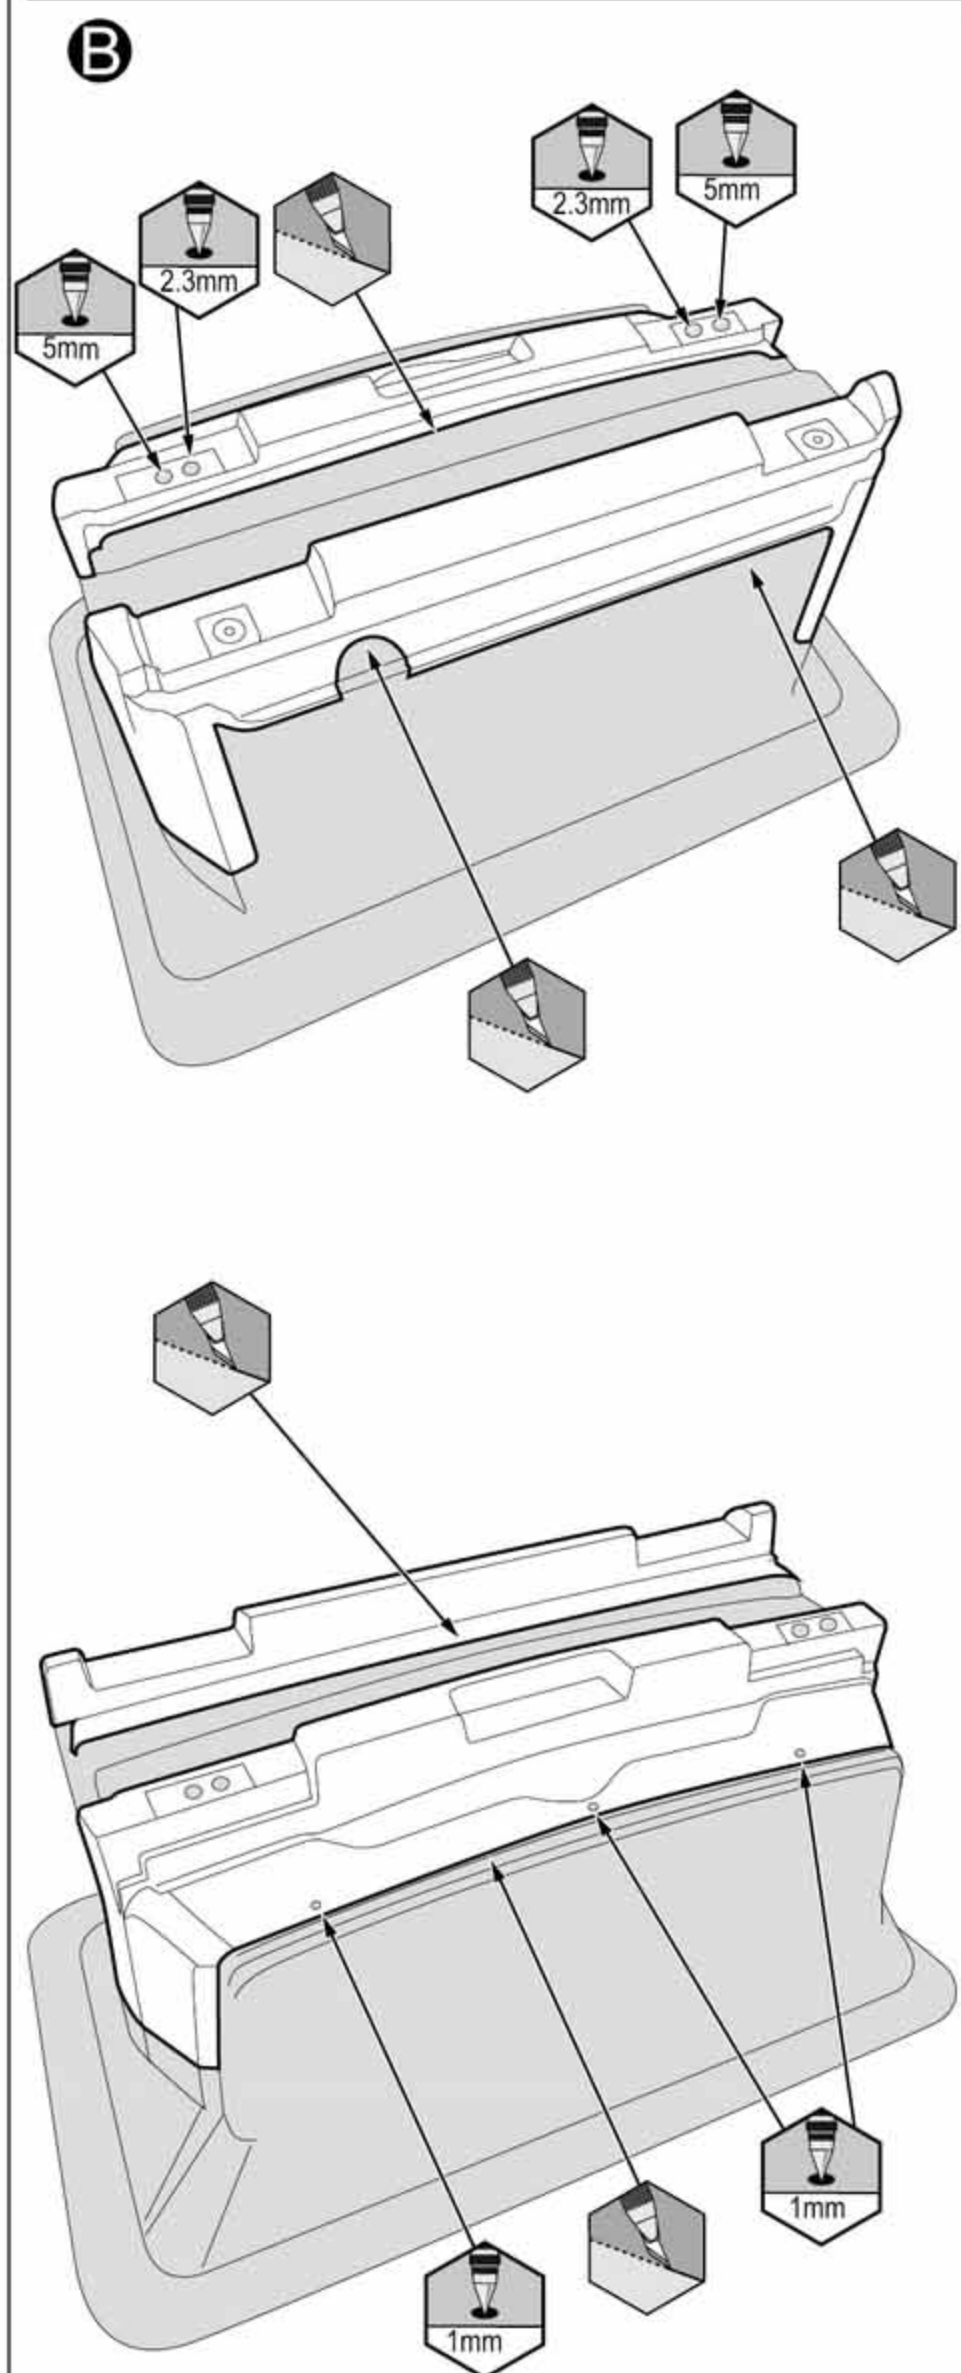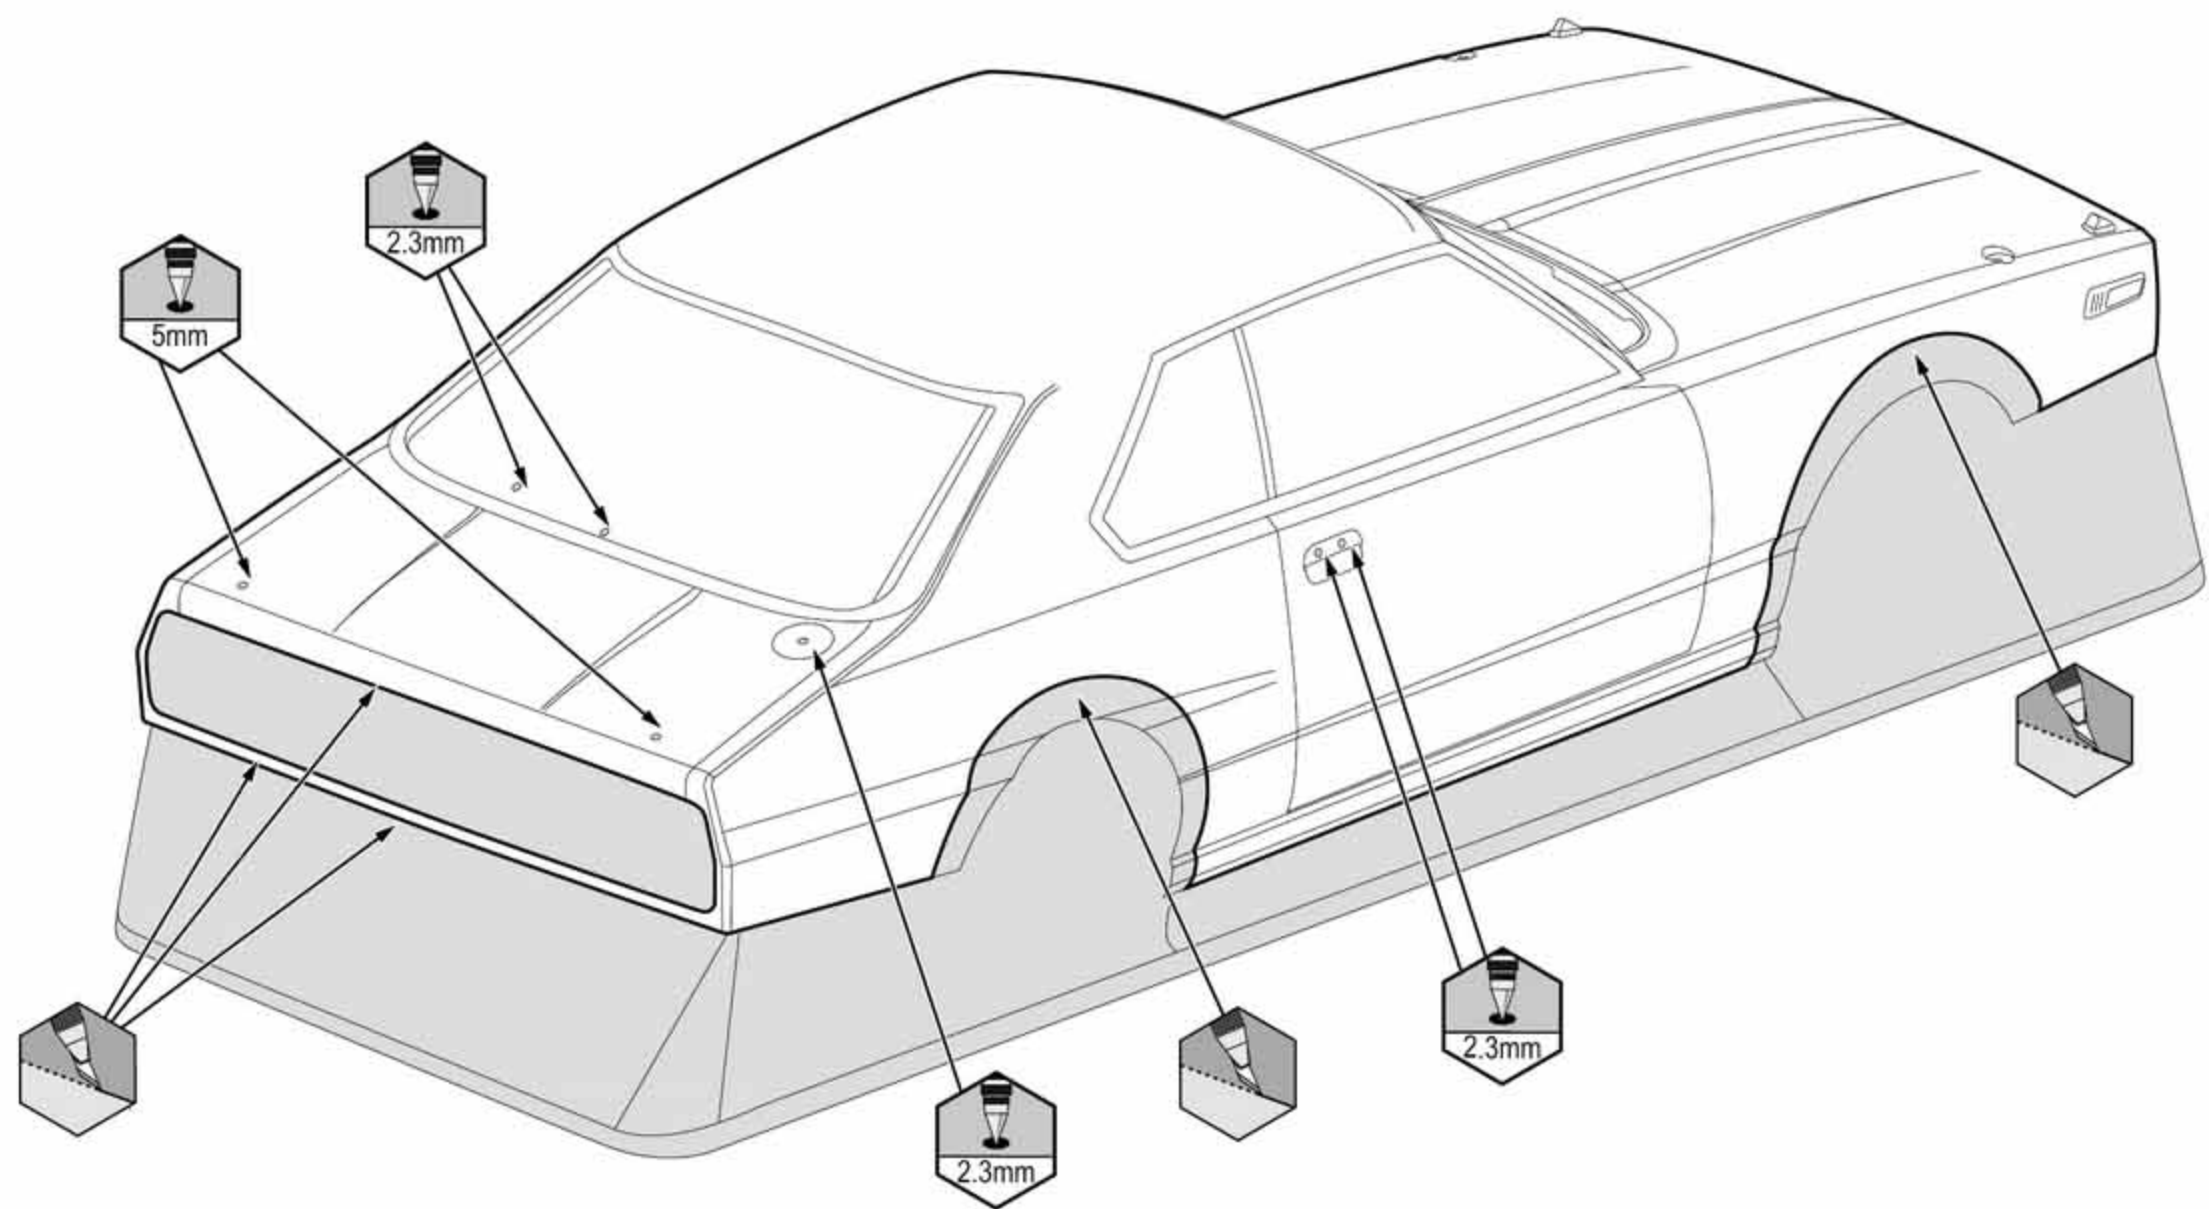


2 Painting

A B C E F





- 1 Before painting, use a neutral detergent to remove any oil residues and dirt.

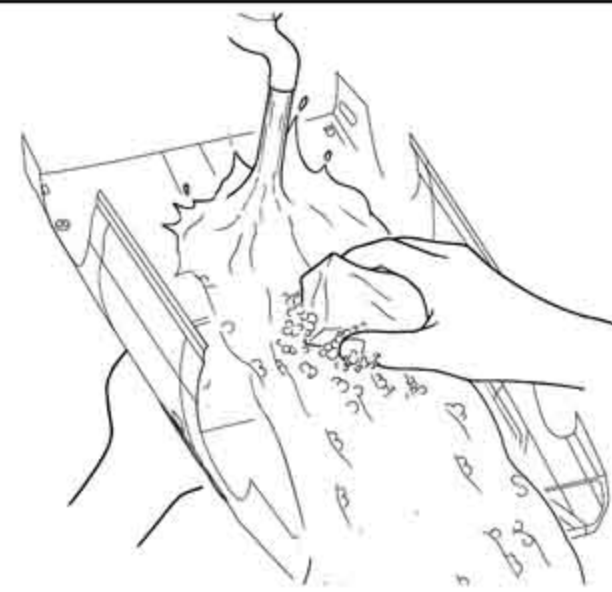


- 2 Mask the parts from inside.

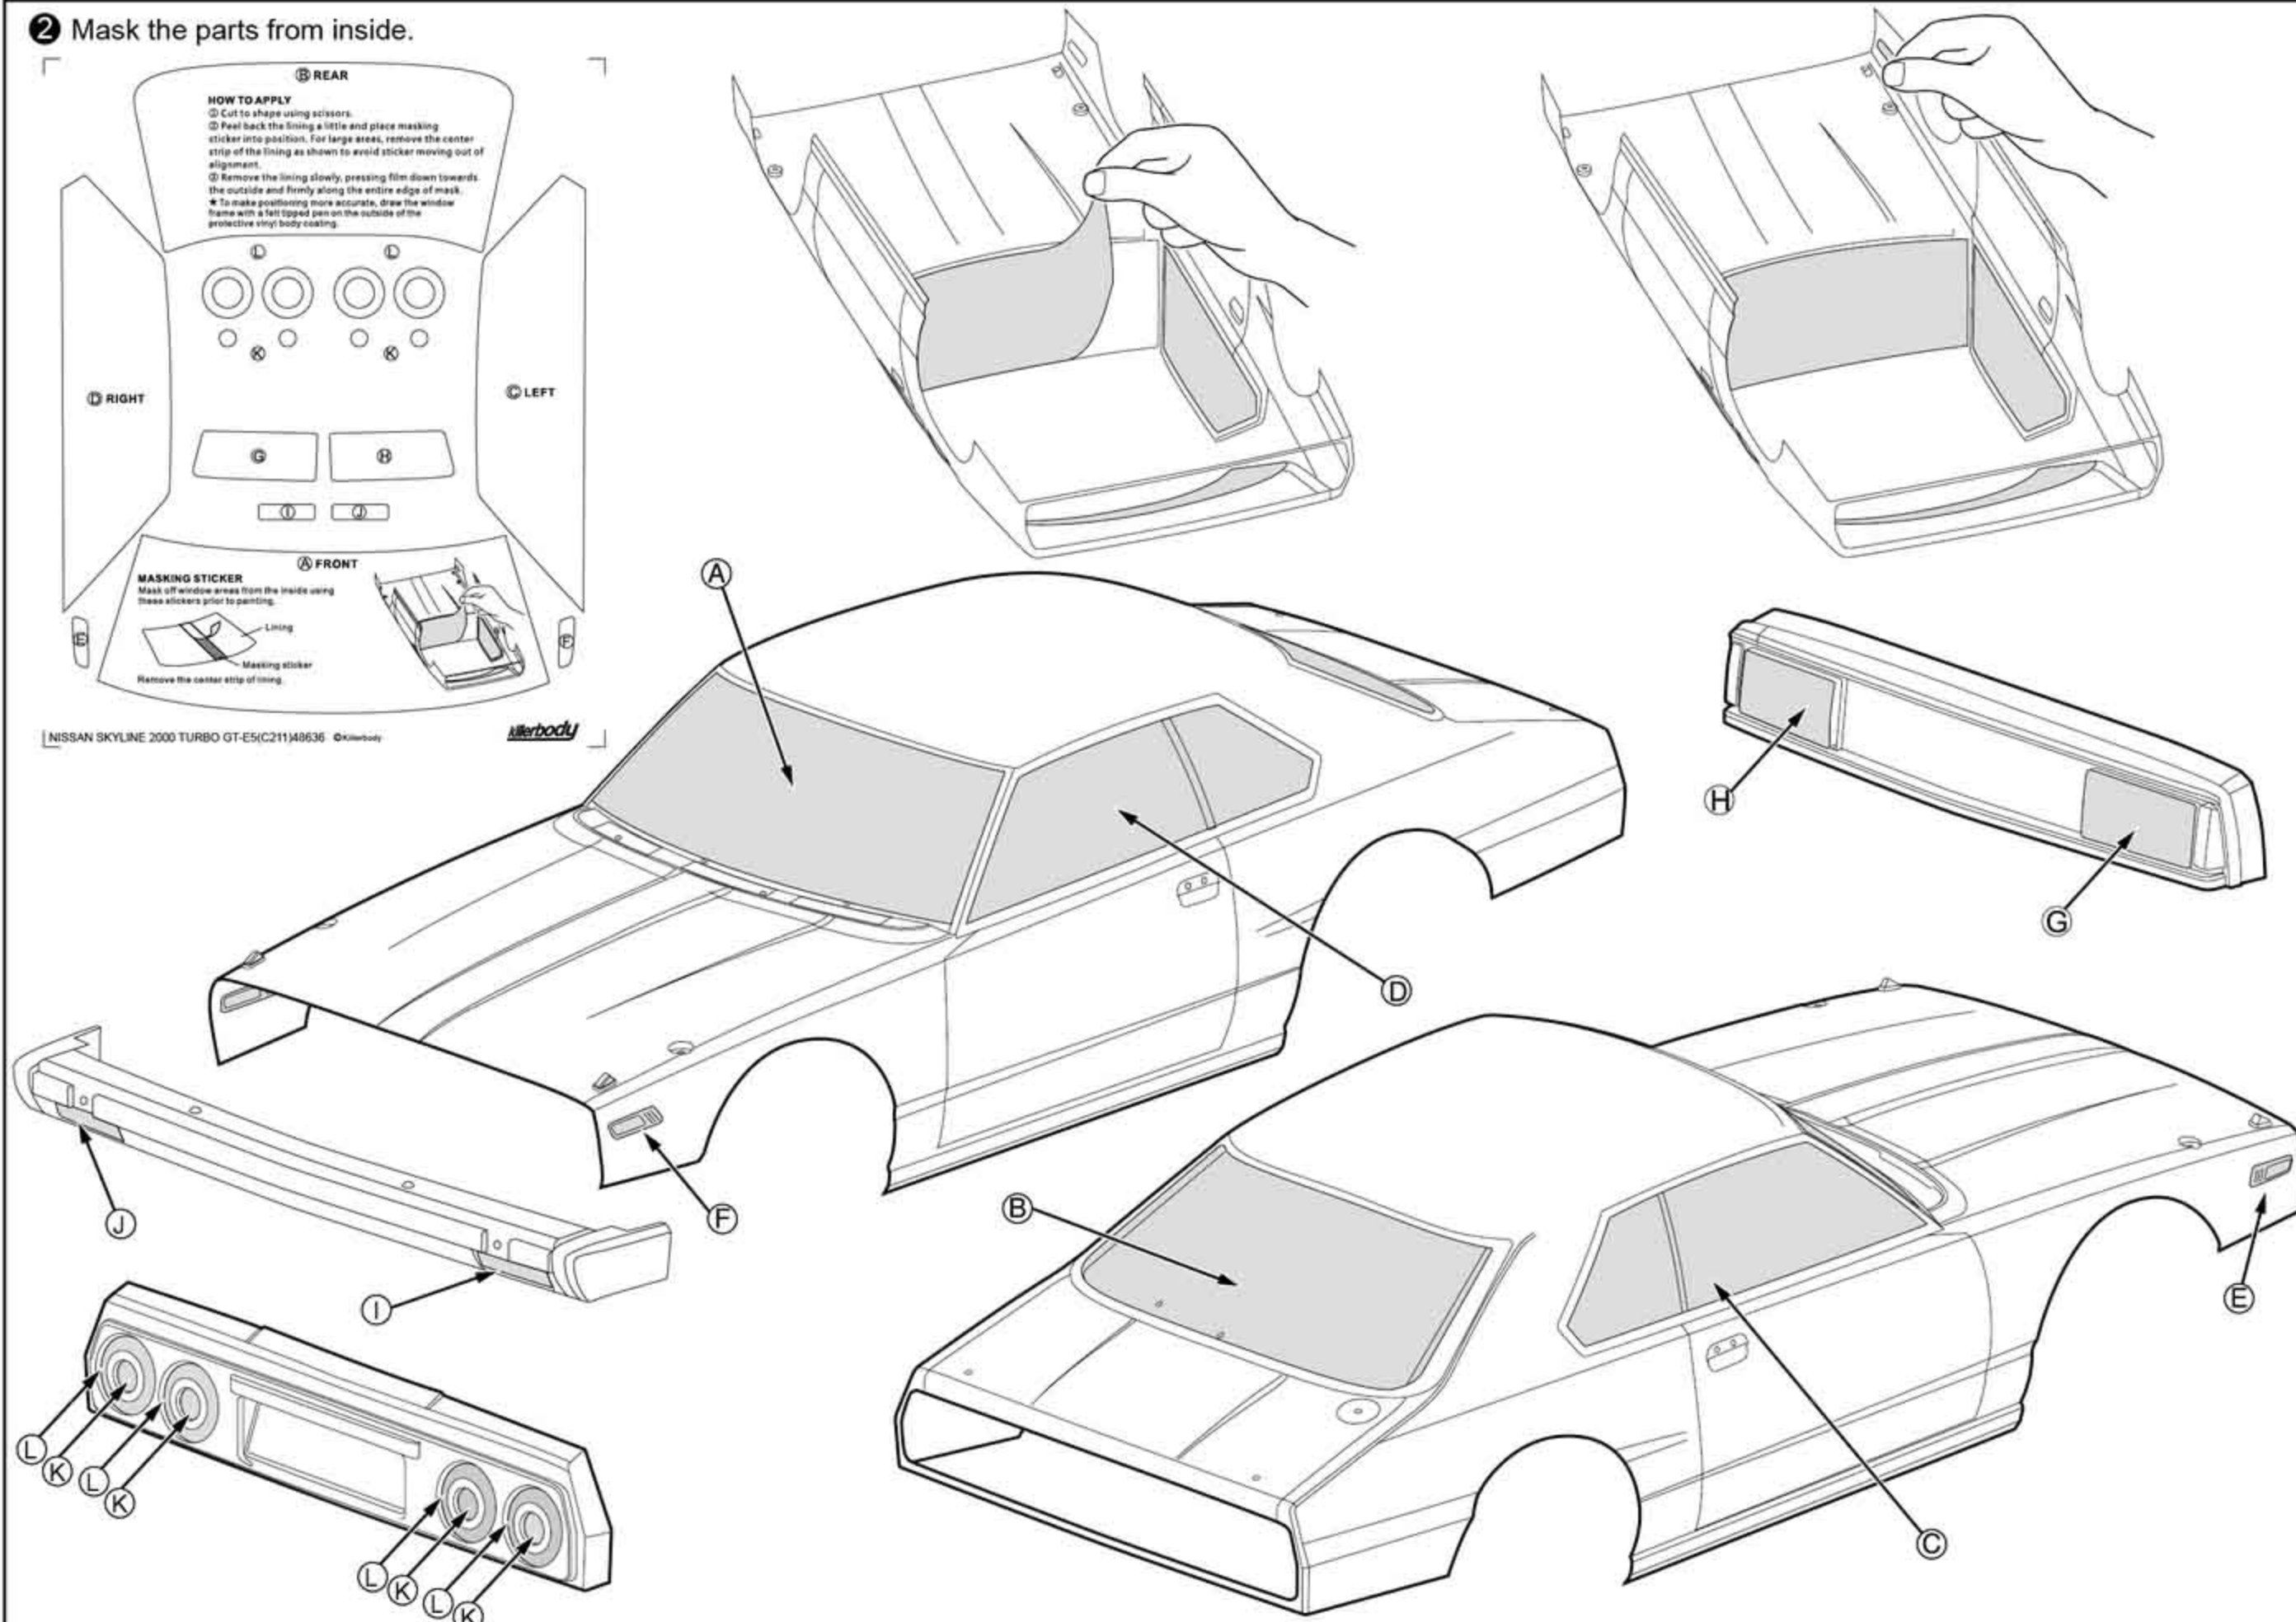


- 3 Paint A, B, C, E, F from inside.

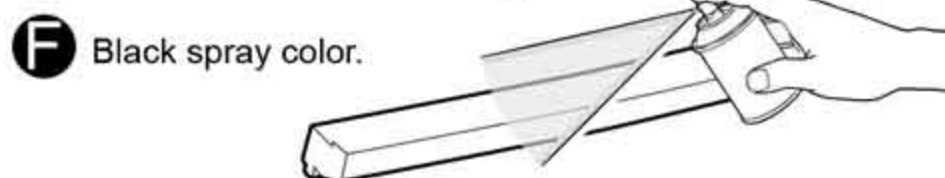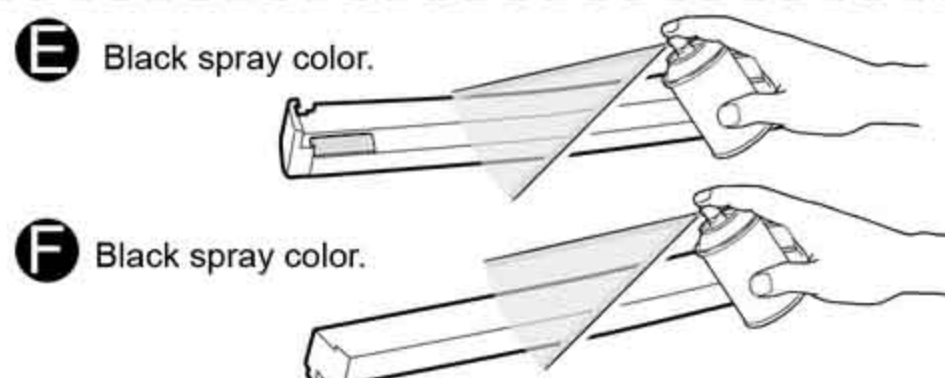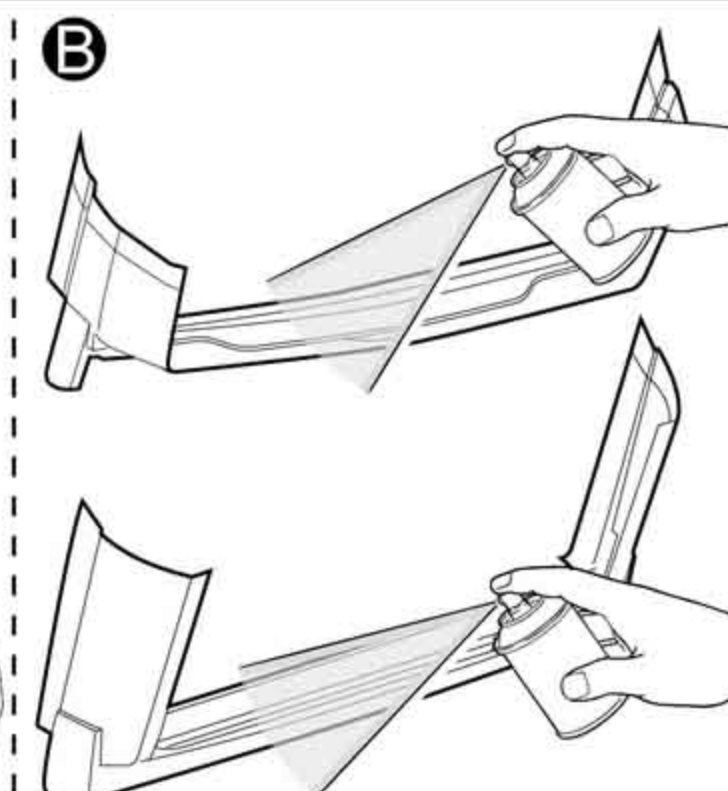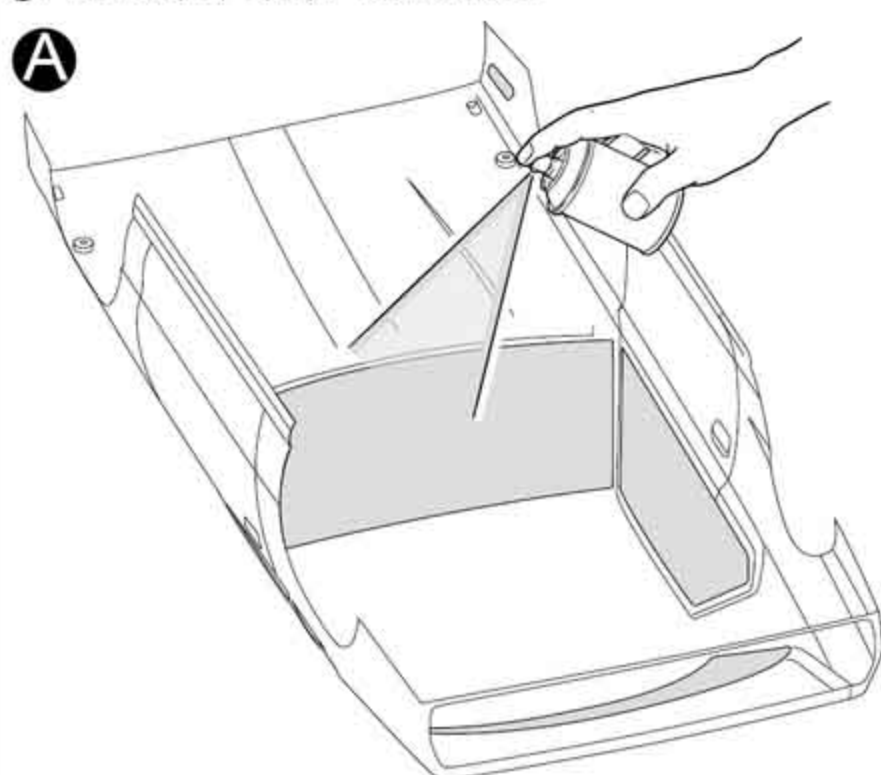


- 4 Paint rear wing from outside.

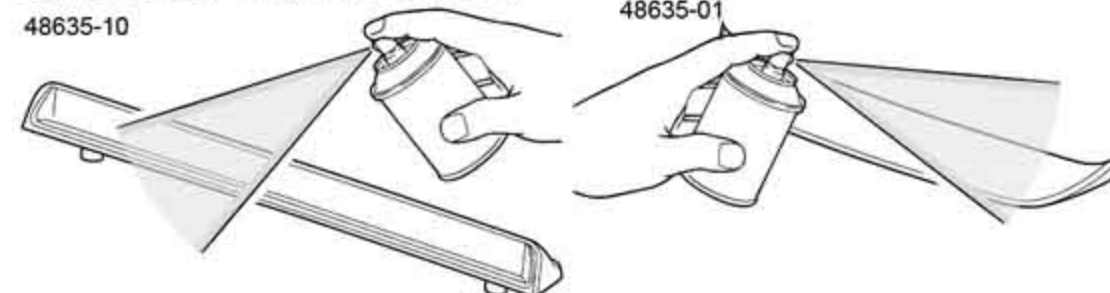


- 5 Paint silver-grey spray color from outside.

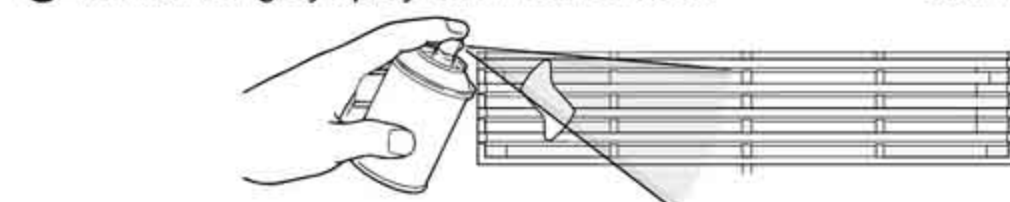


- 6 Remove the protective film from outside.

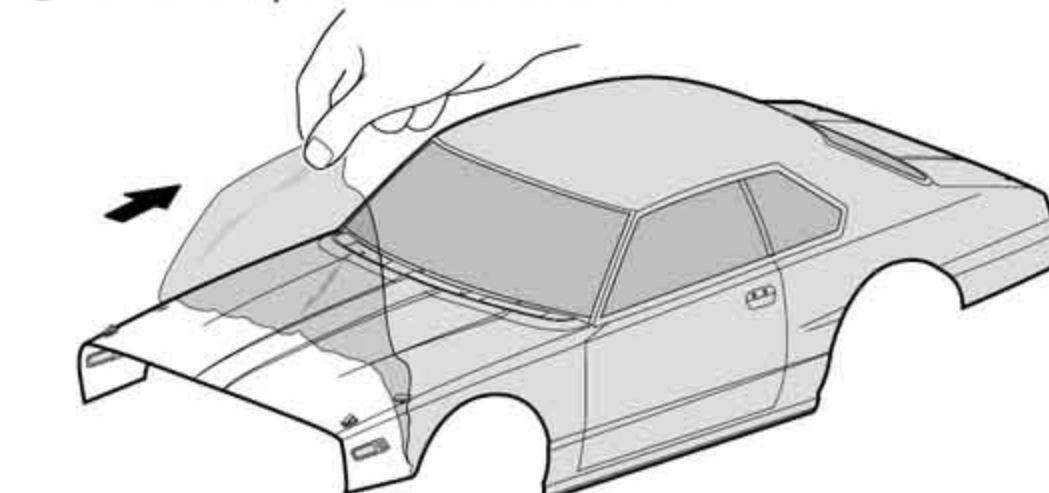

3 Decal

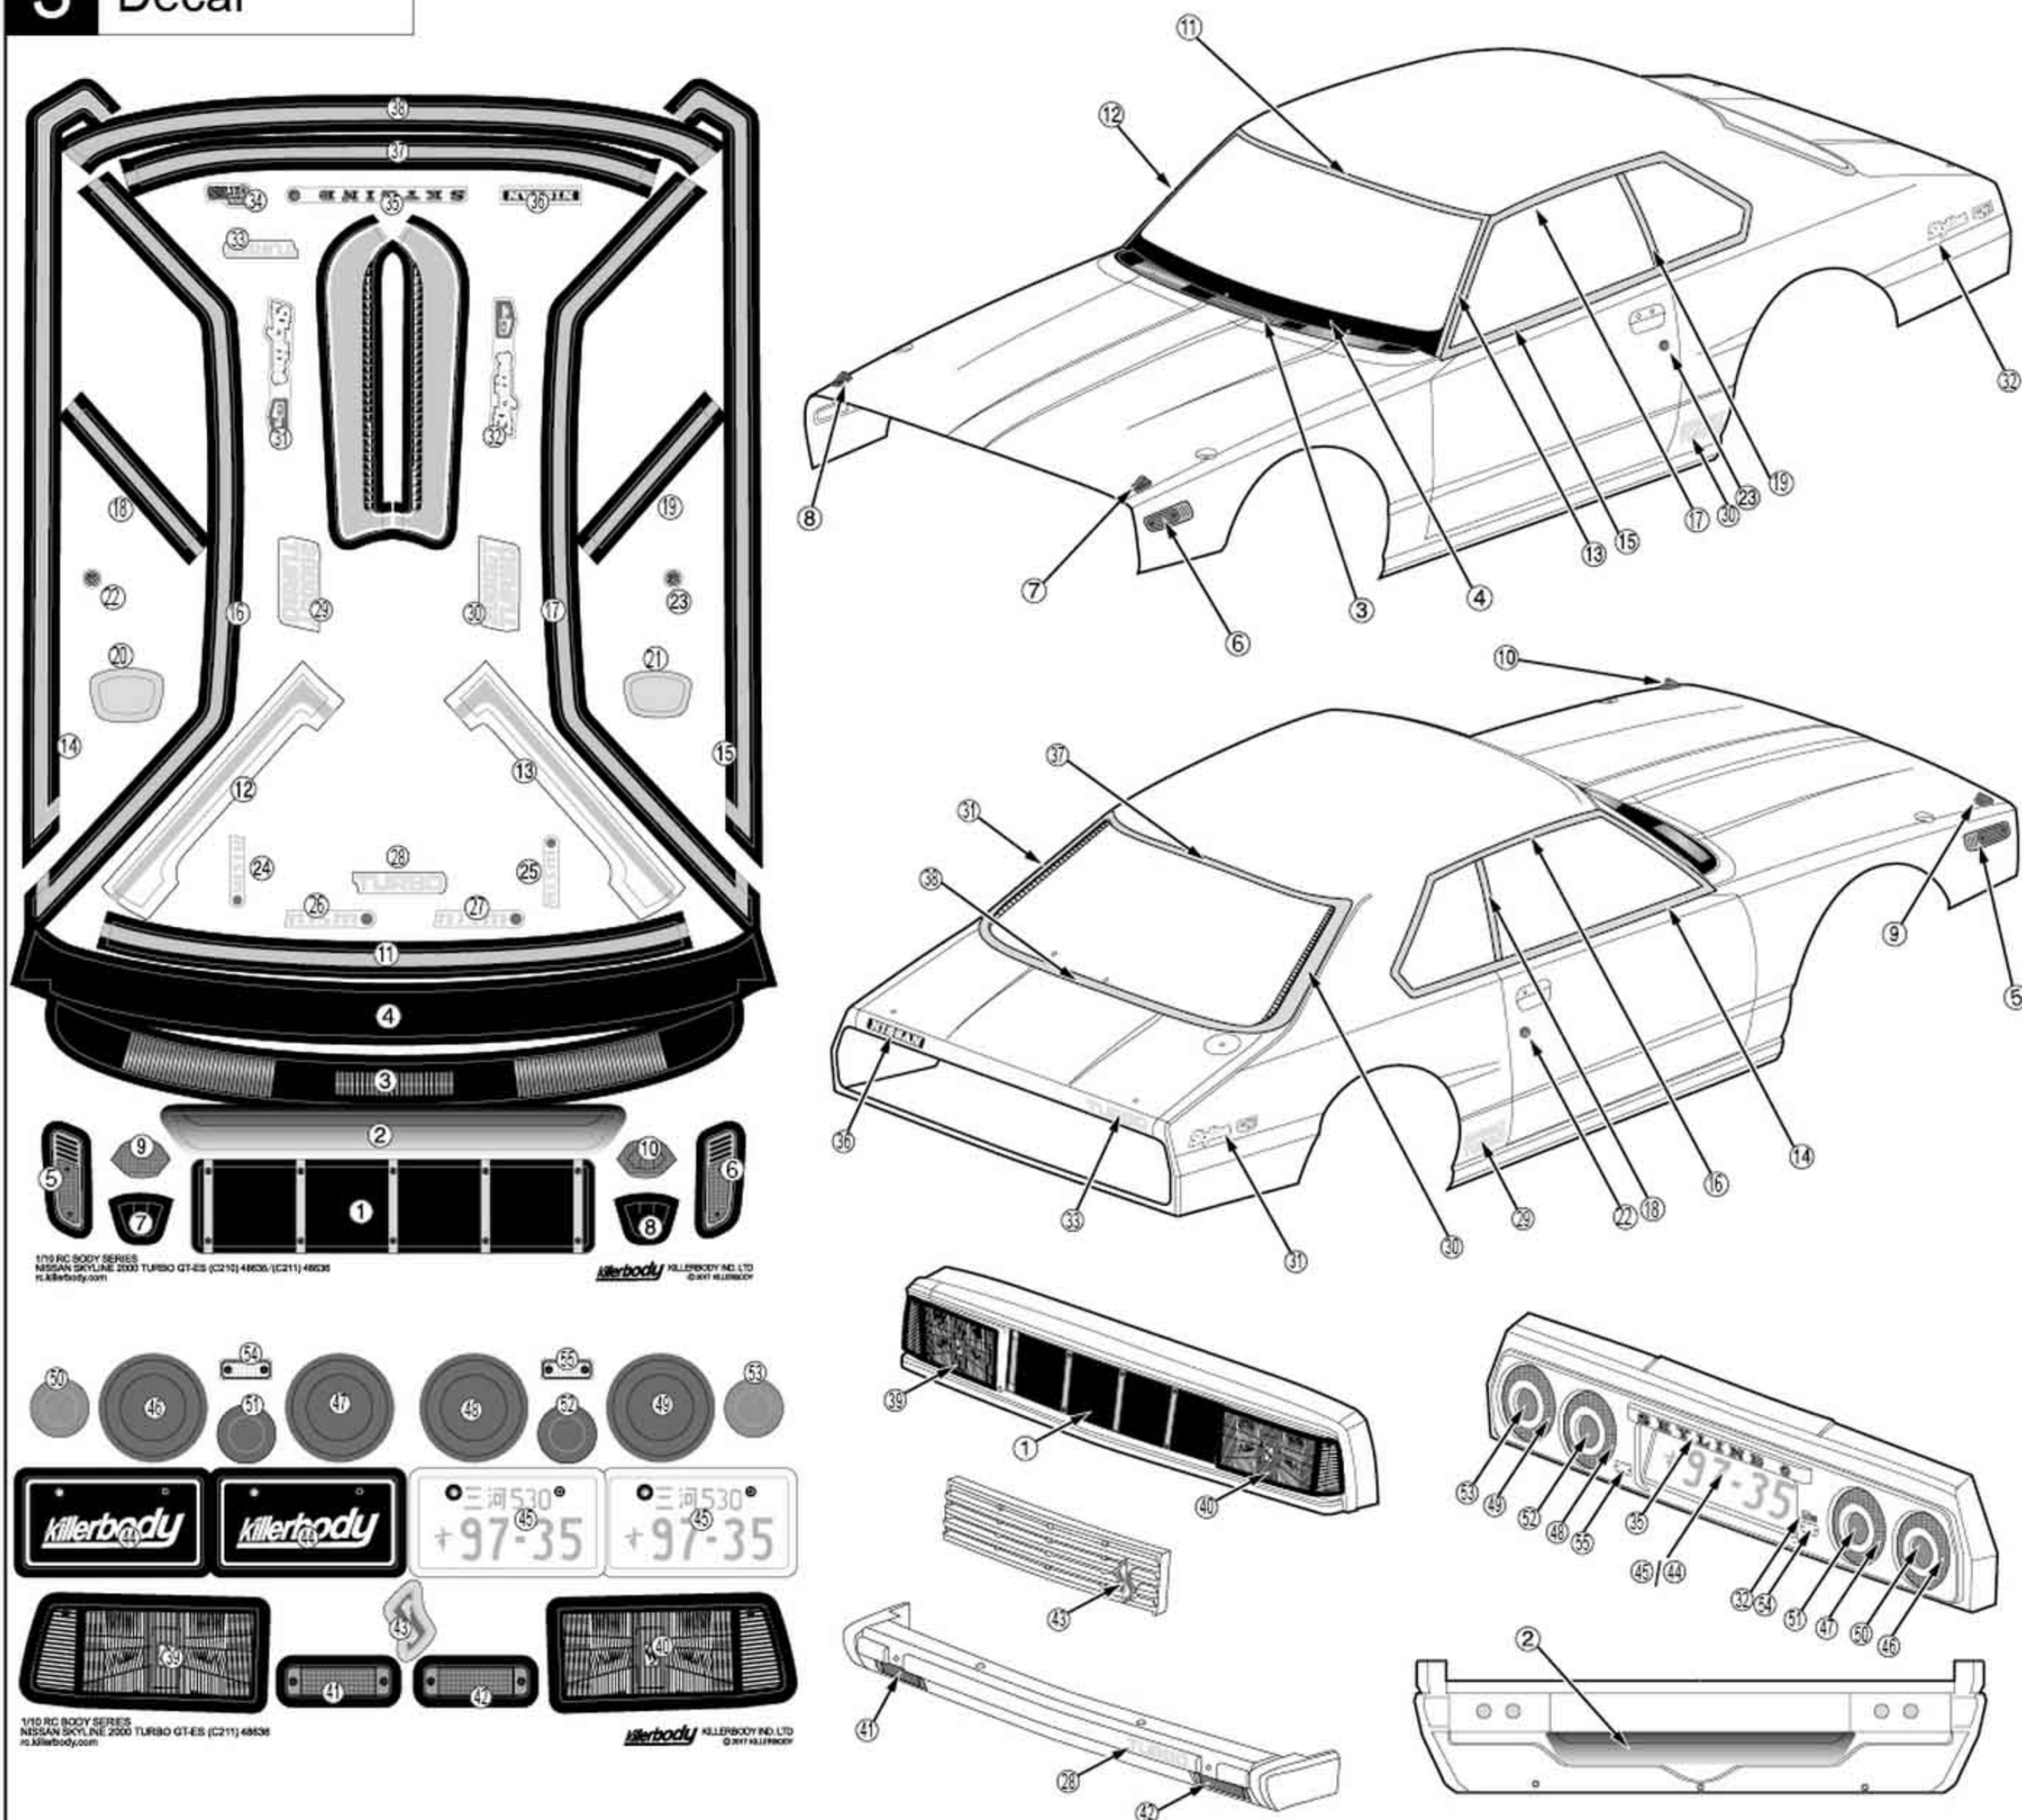

4 Assembling

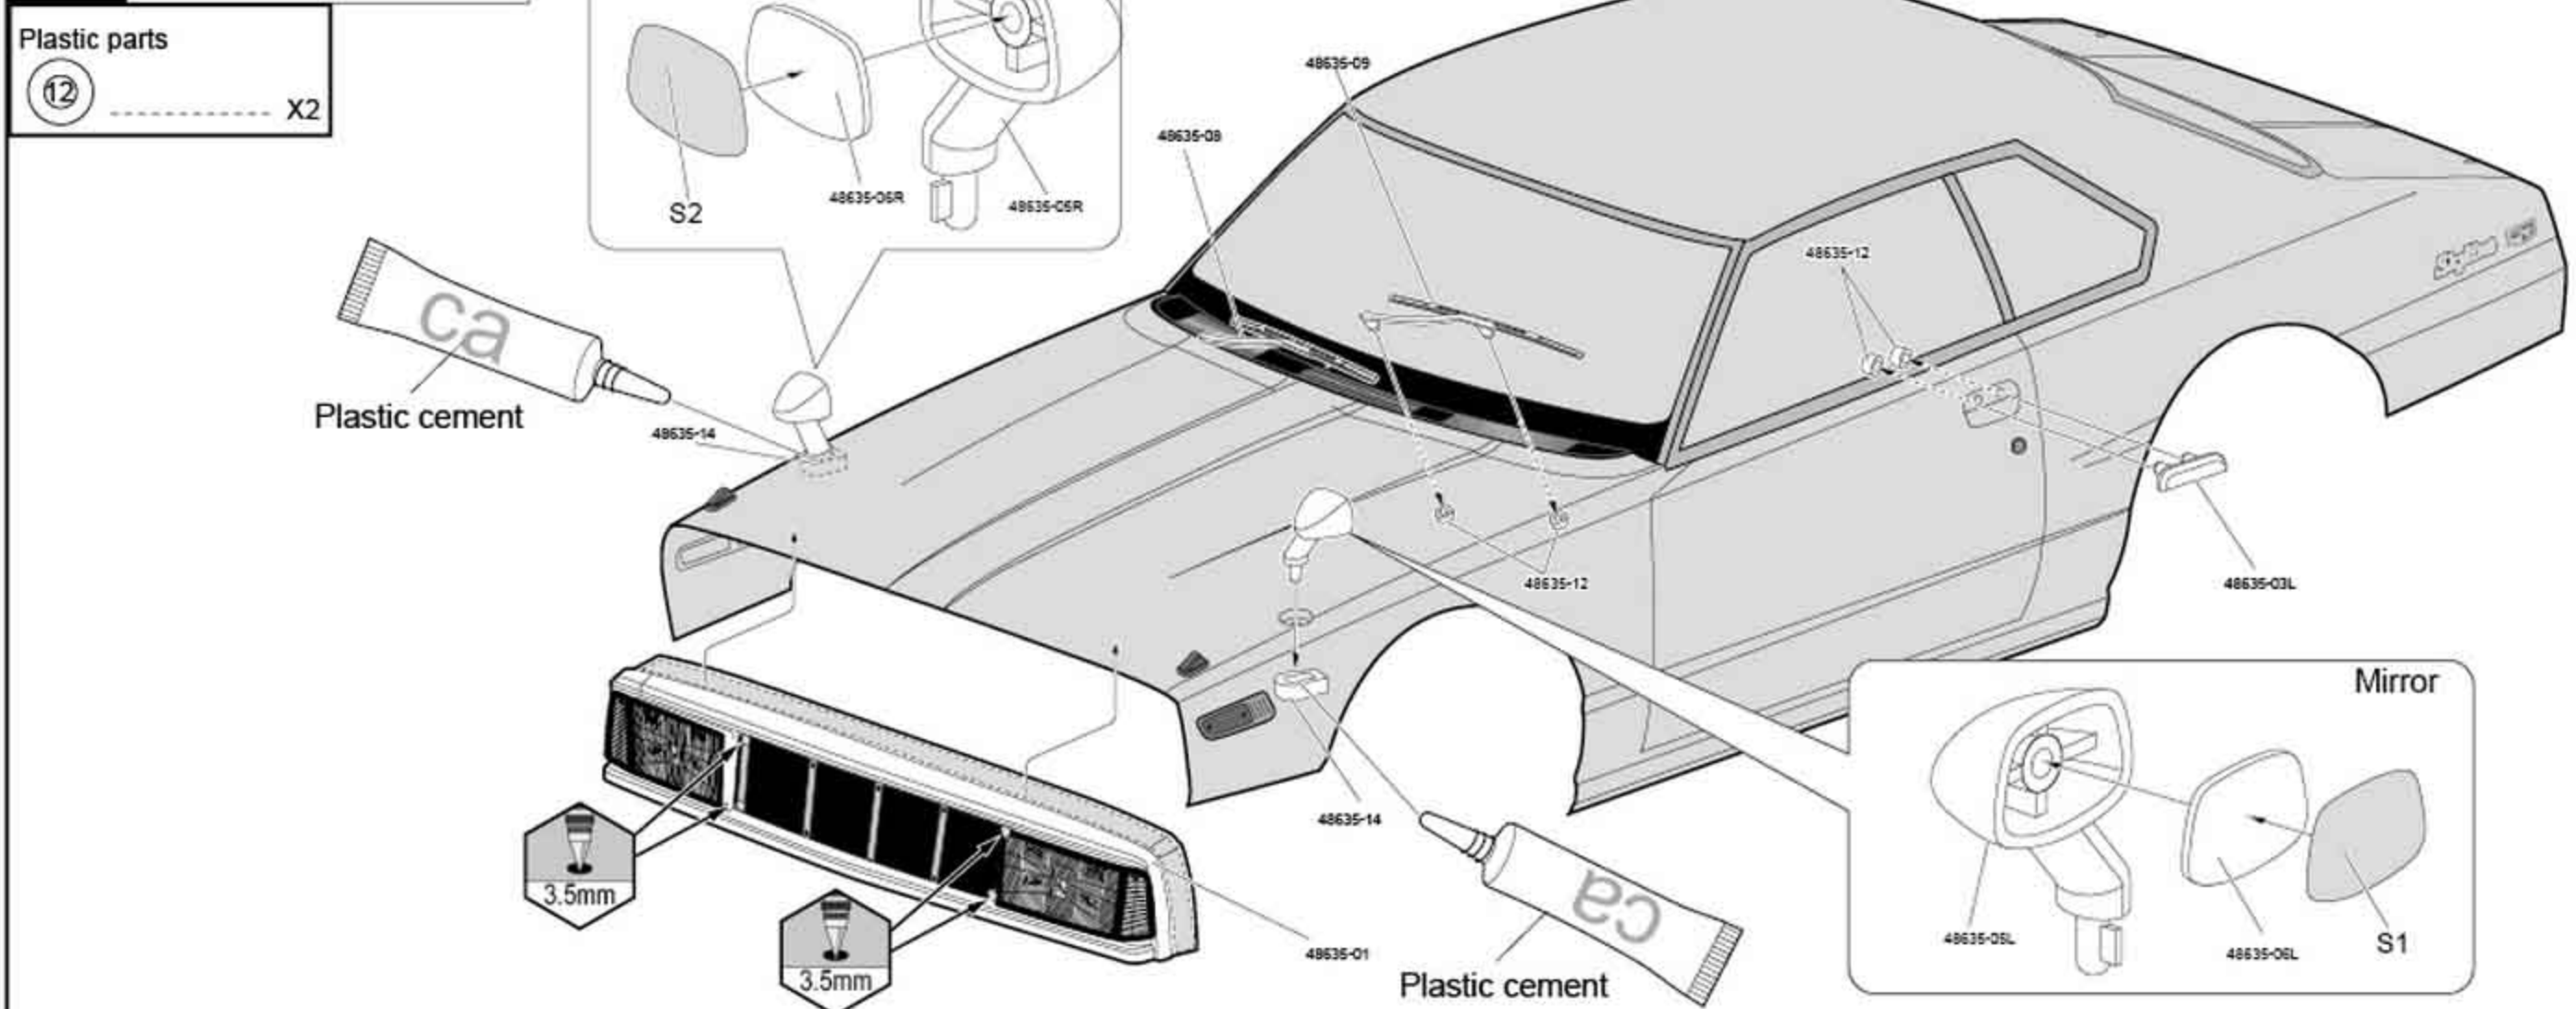

5 Assembling

Screw 2.3X6mm



-----X5

Plastic parts

(13) -----X2

Plastic parts

(12) -----X4

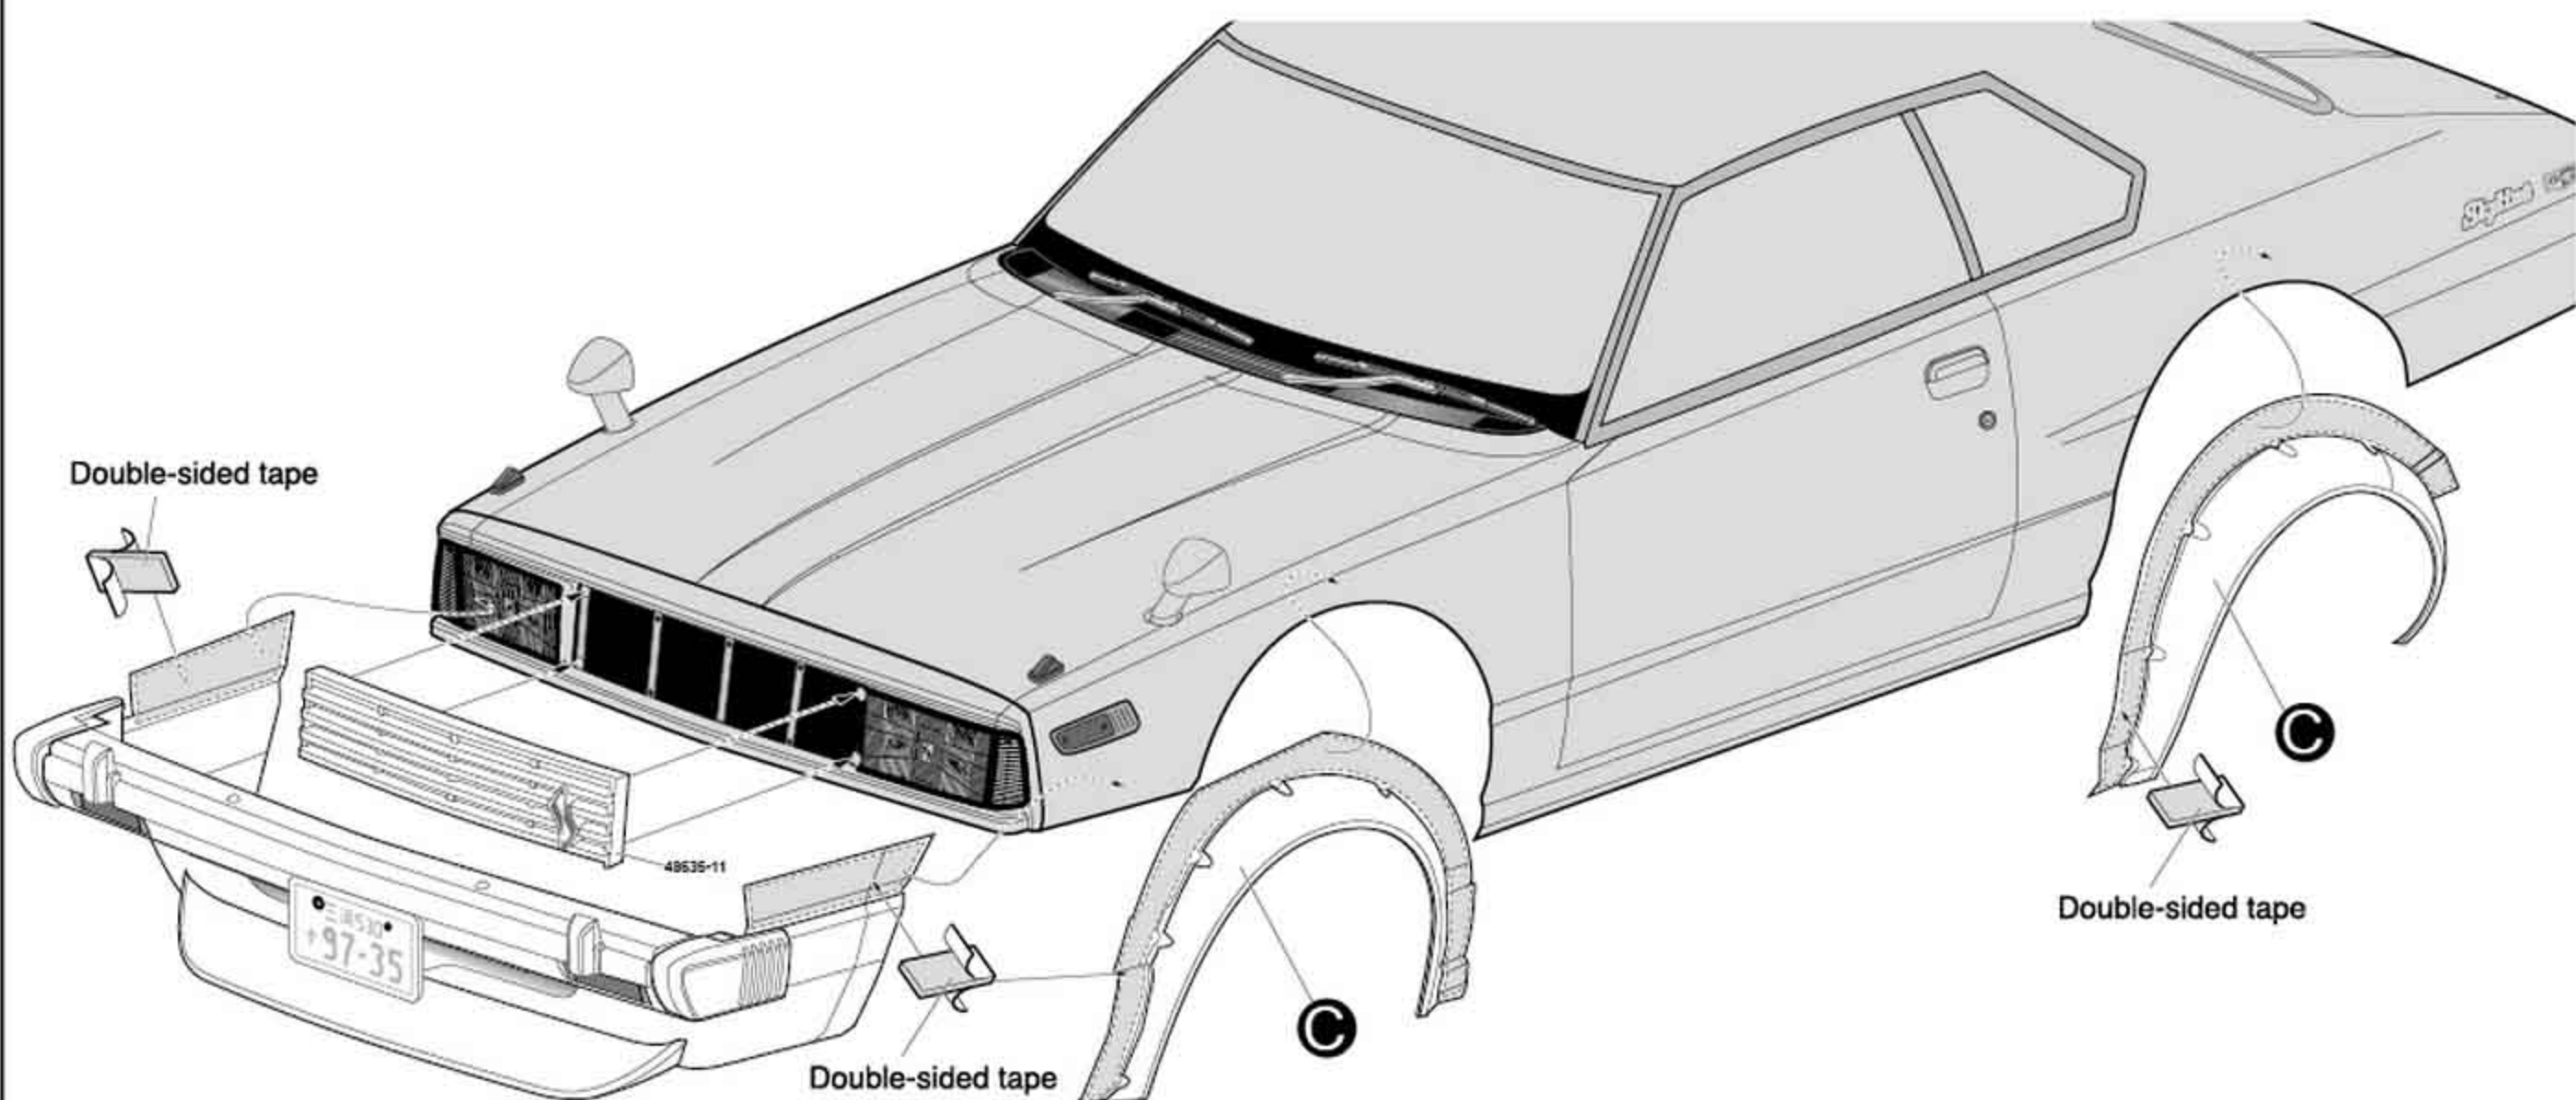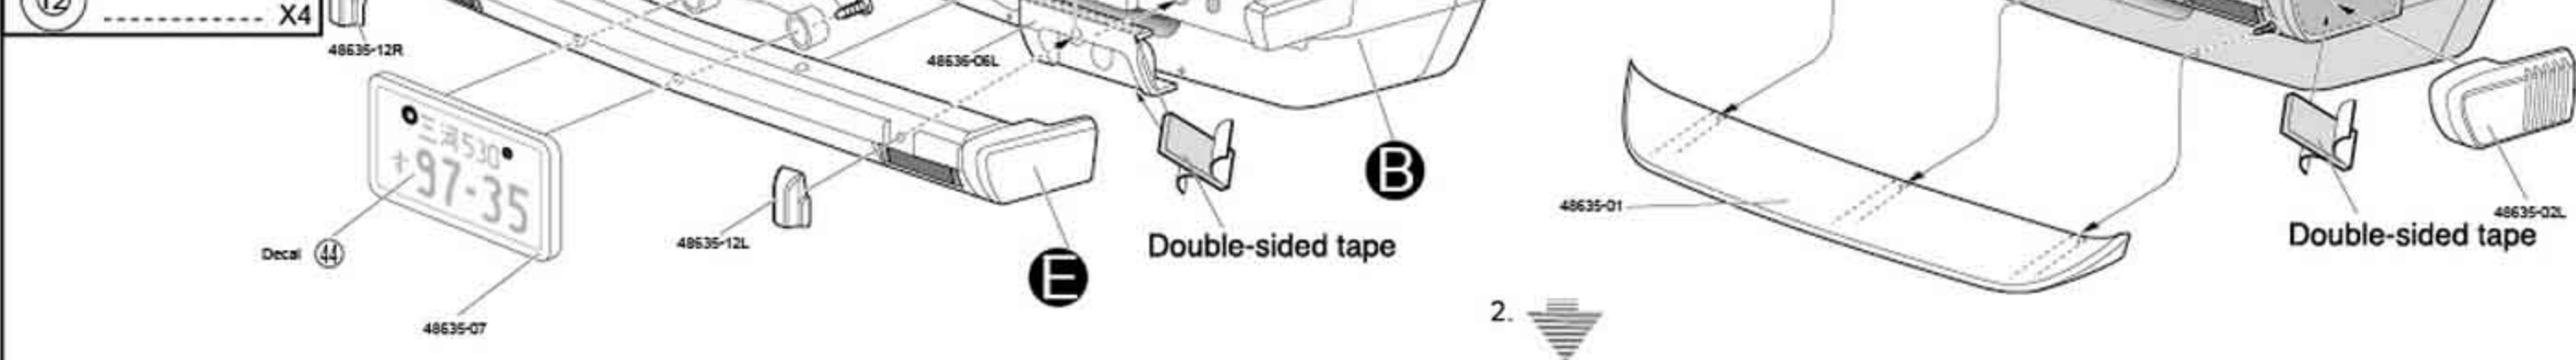

6 Assembling

Screw 2.3X6mm


-----X3

Plastic parts

(13) -----X3

Plastic parts

(12) -----X2

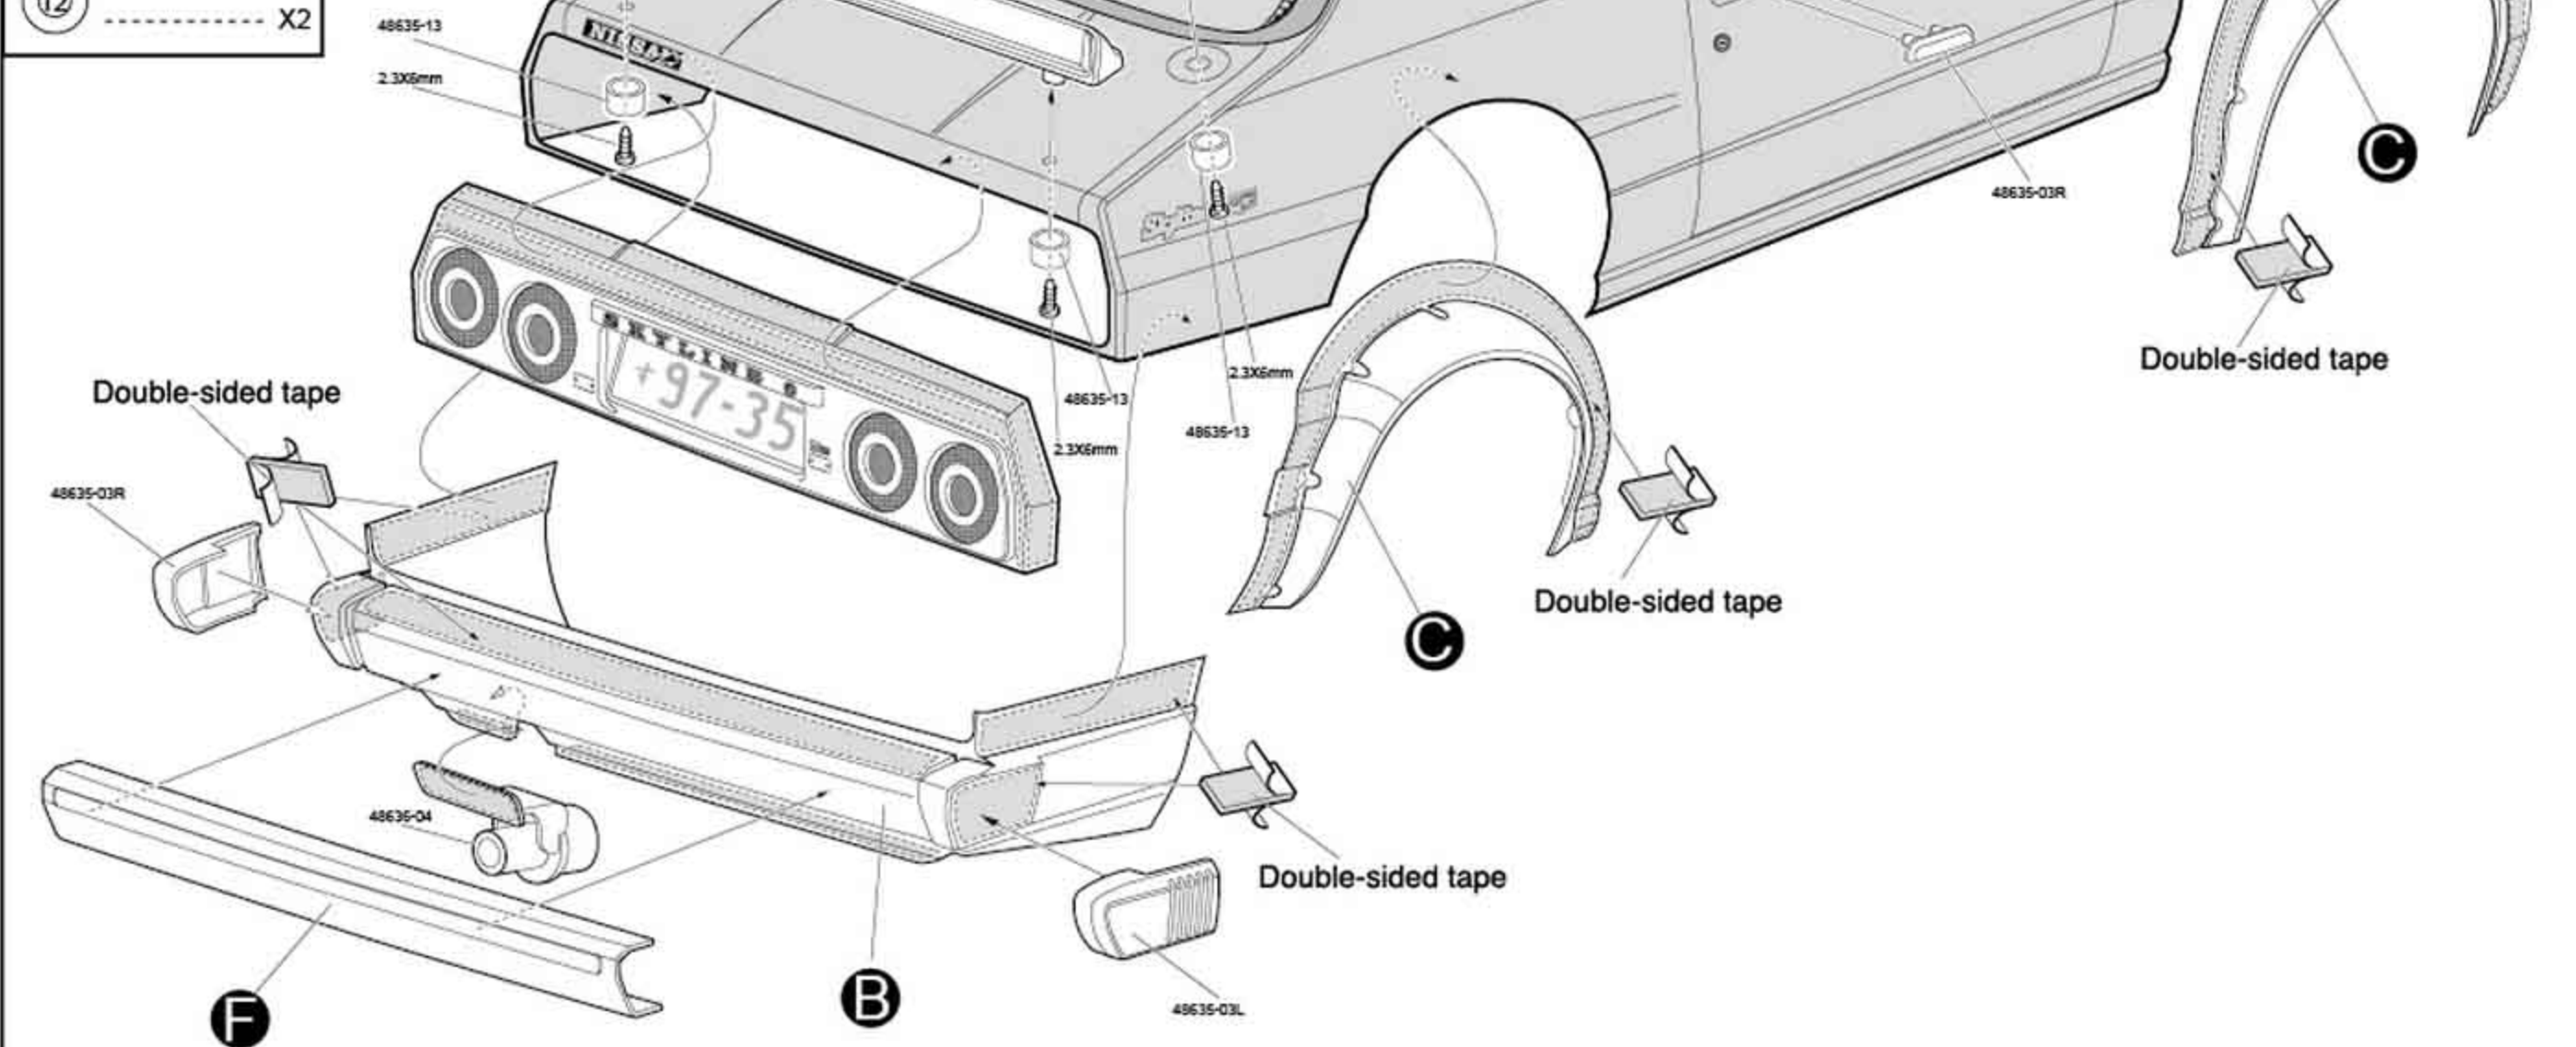

7 Assembling



NO.48687 LED Unit Set w/Control Box 13 LEDS (3mm: 13 LEDS)

Screw 2.3X6mm



X18

LED stopper

X8




< Front >

< Rear >

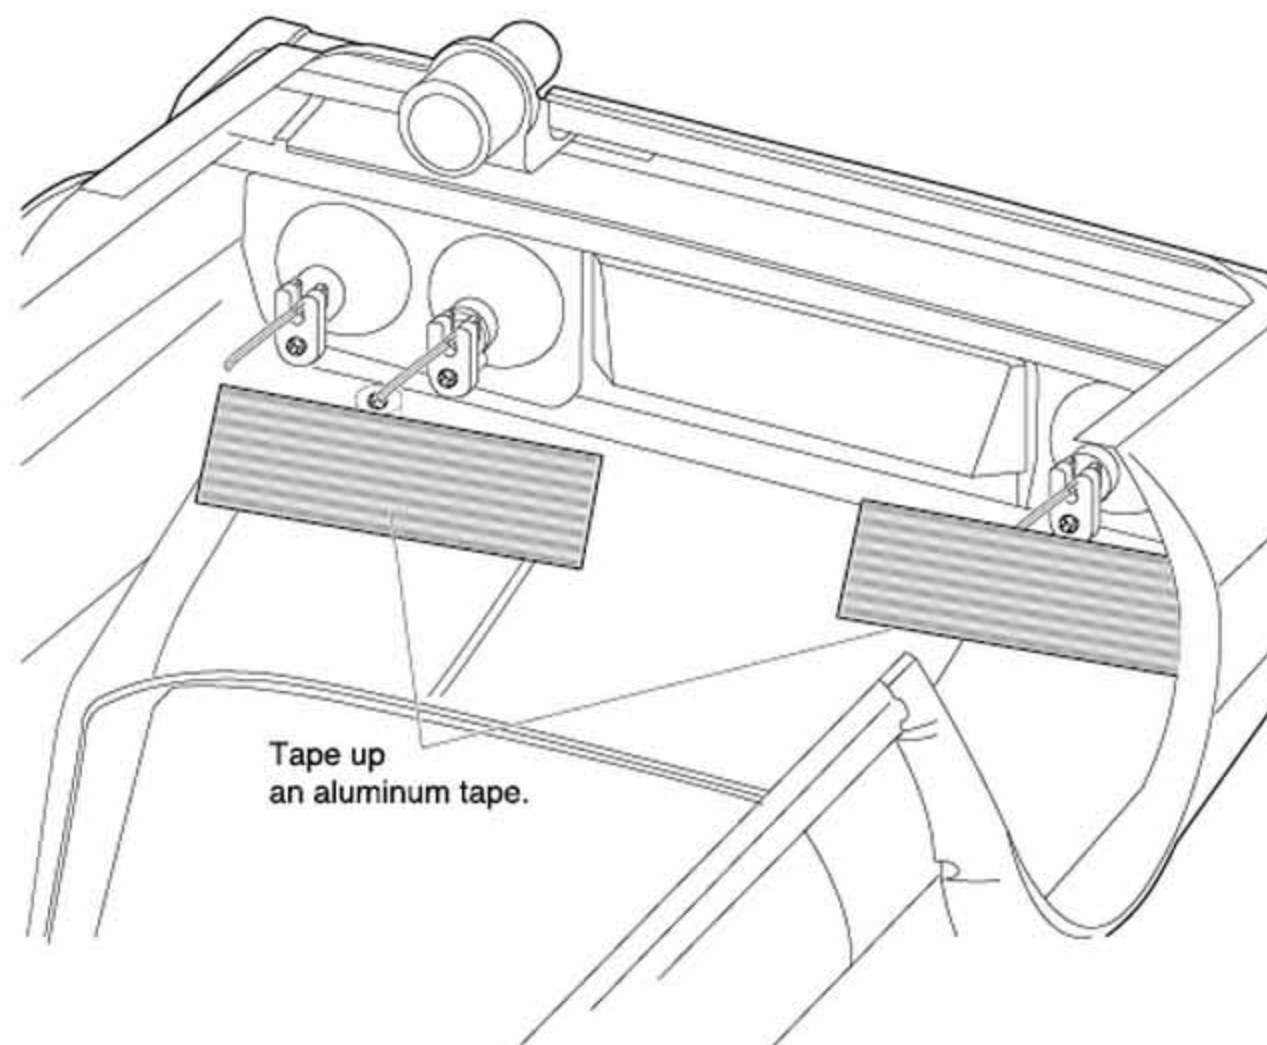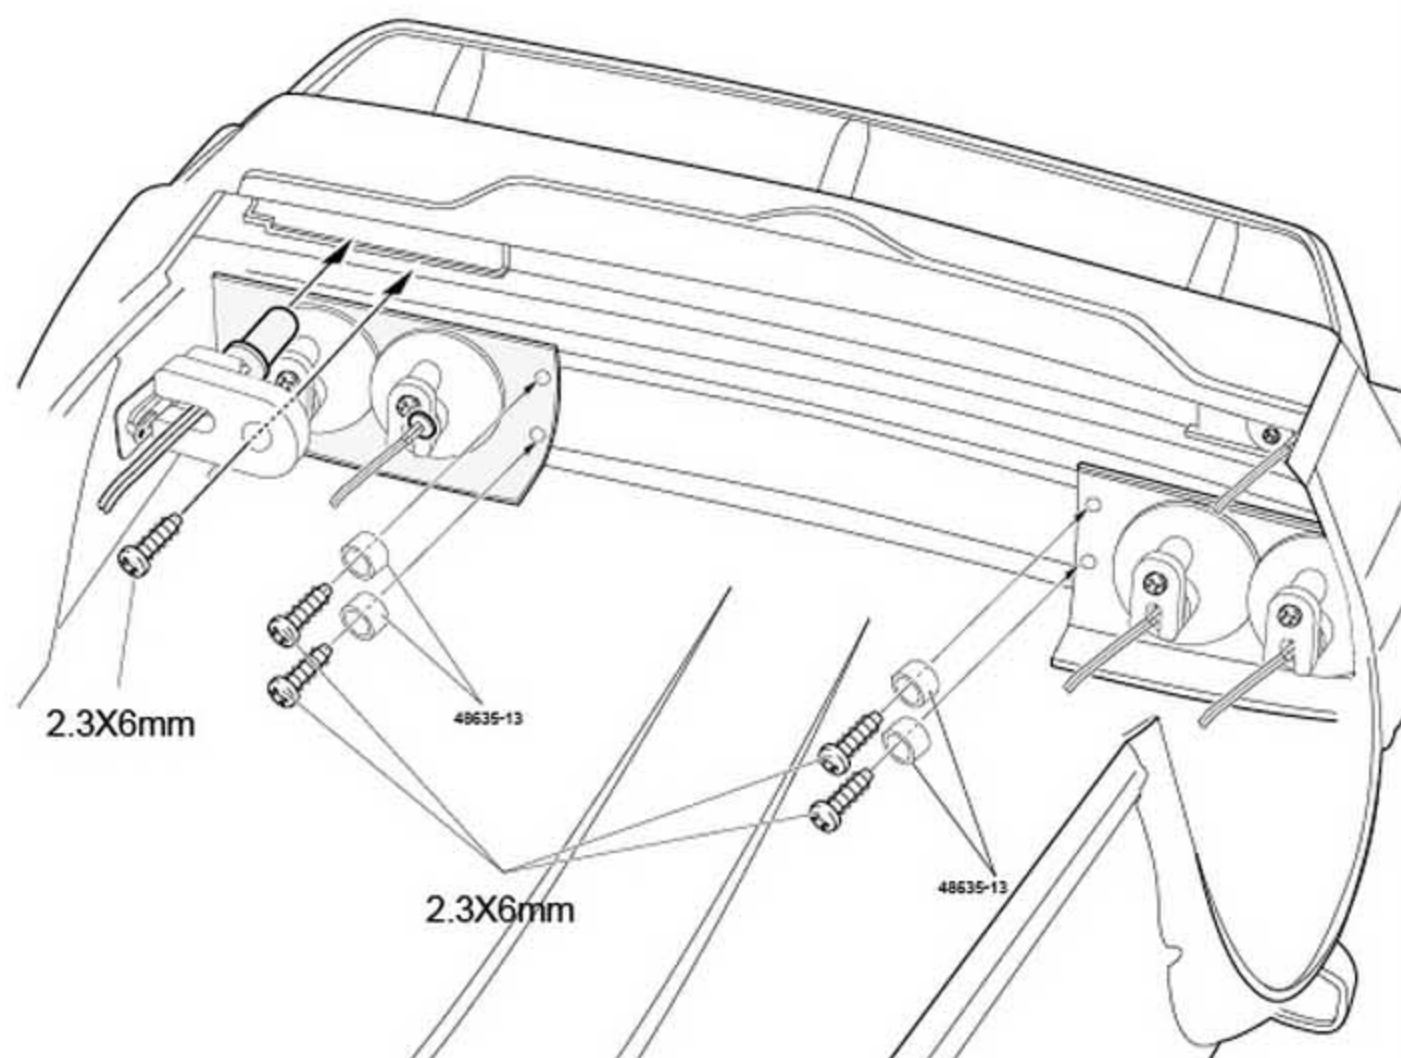

< Front >


< Rear >

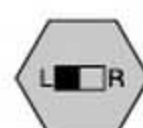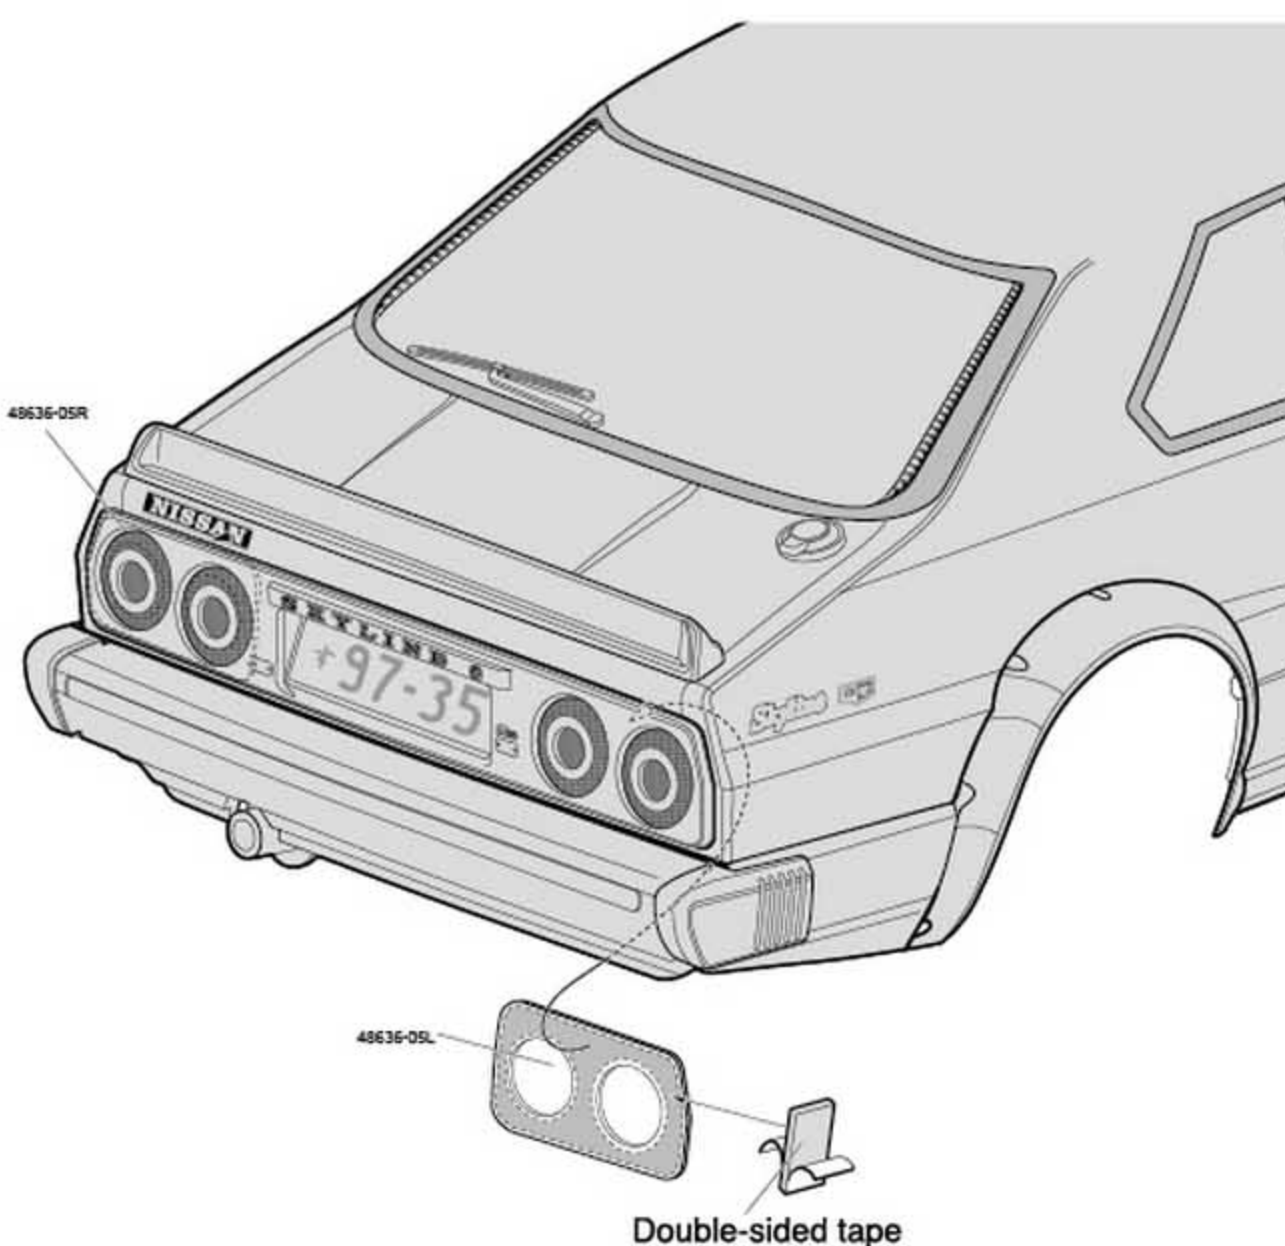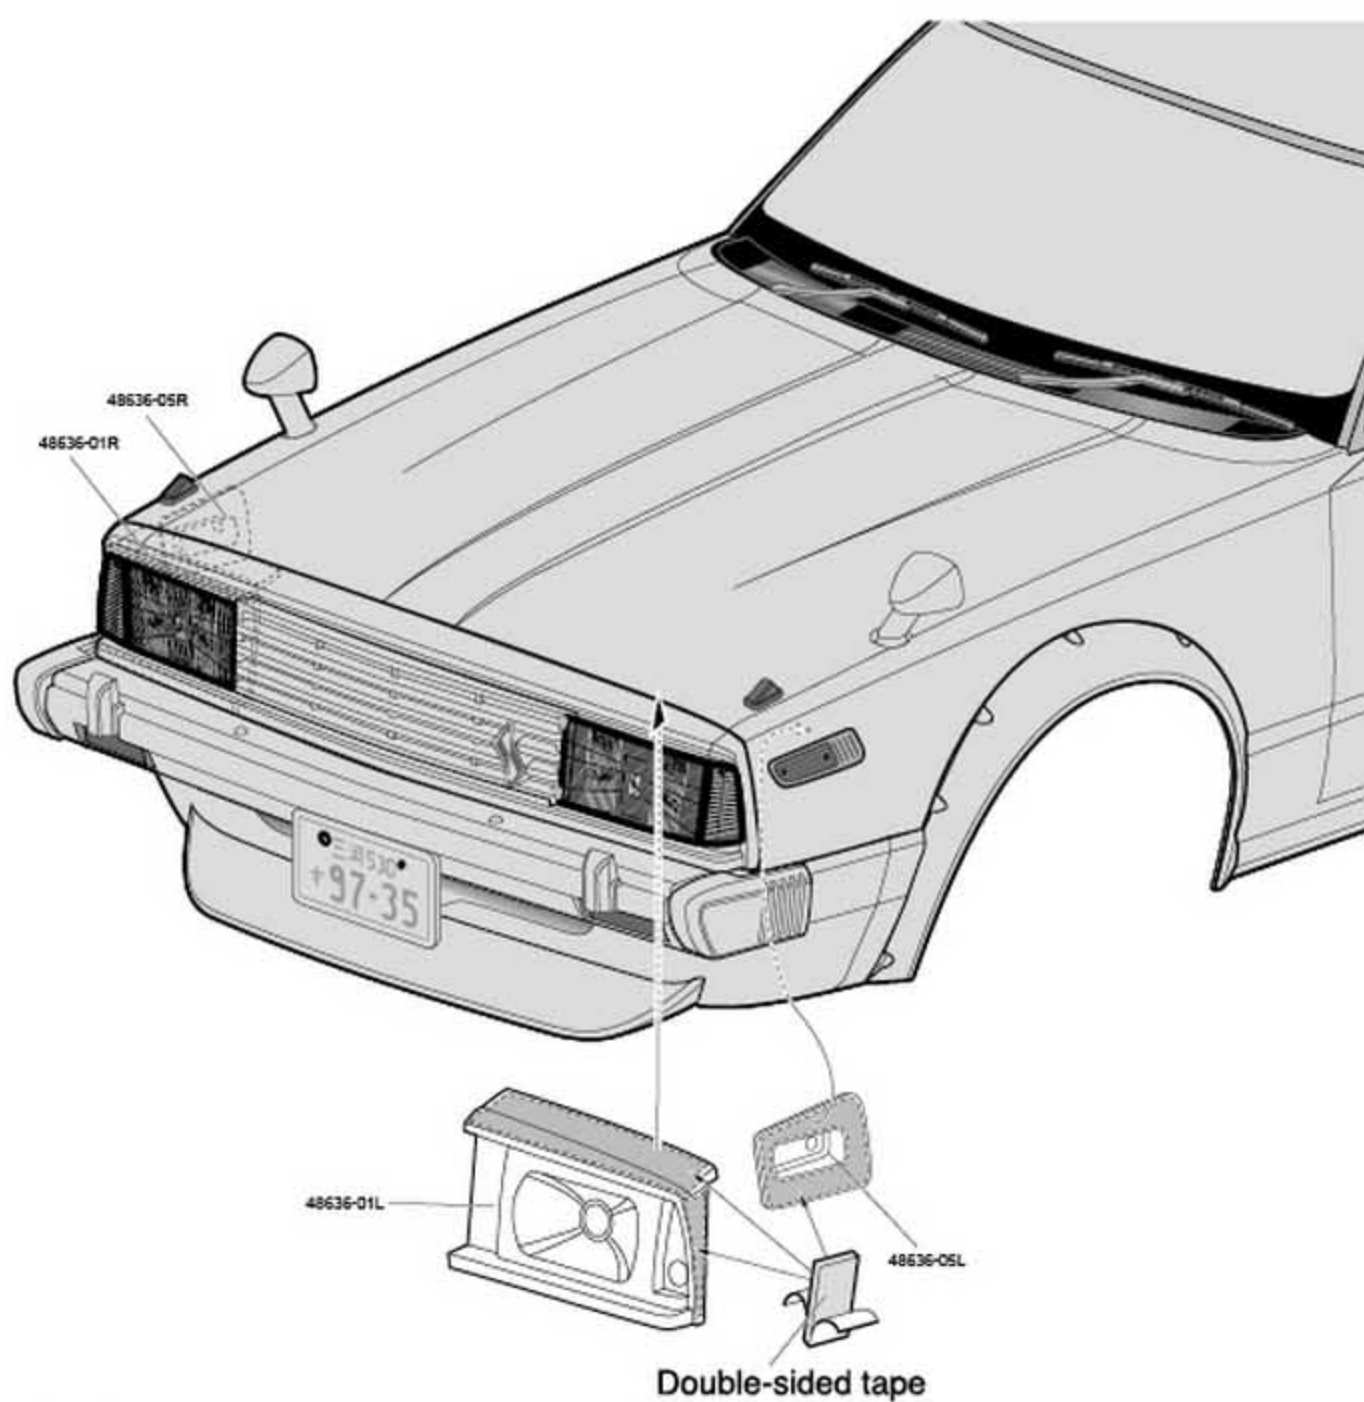


8 Finished



► For safety reasons, always fit the body shell when running your car.

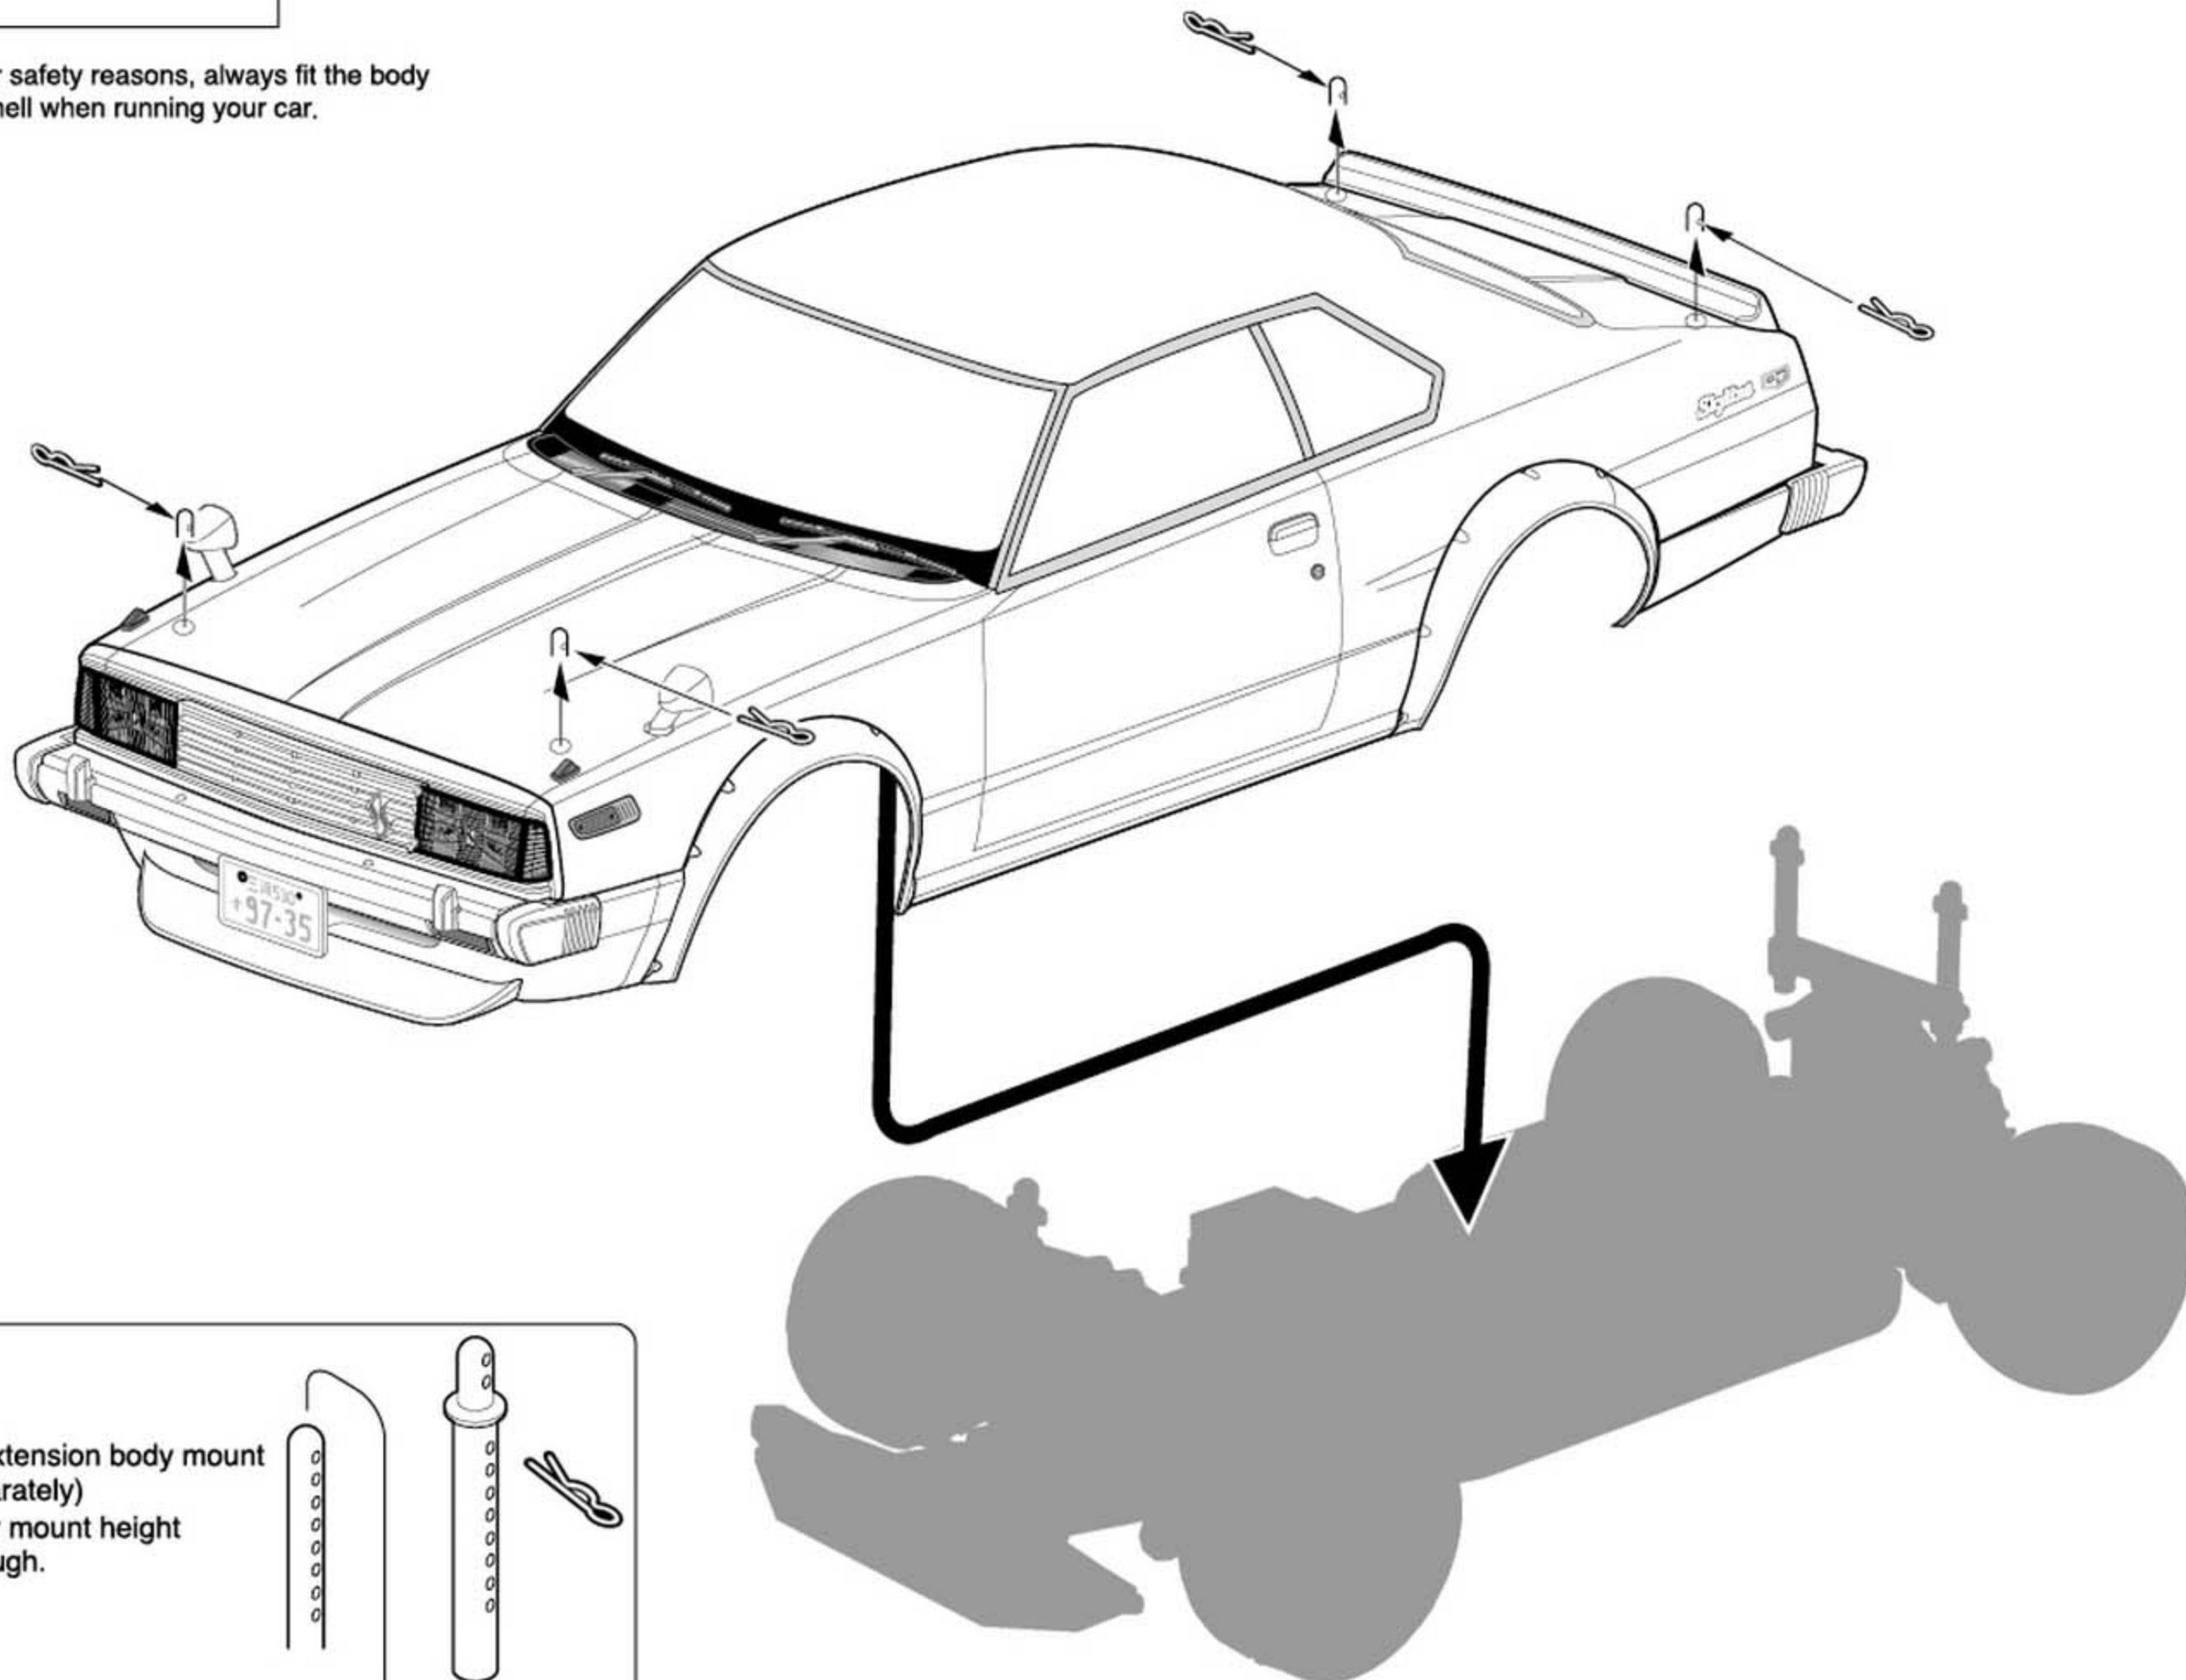

► Use the extension body mount (sold separately) if the body mount height is not enough.

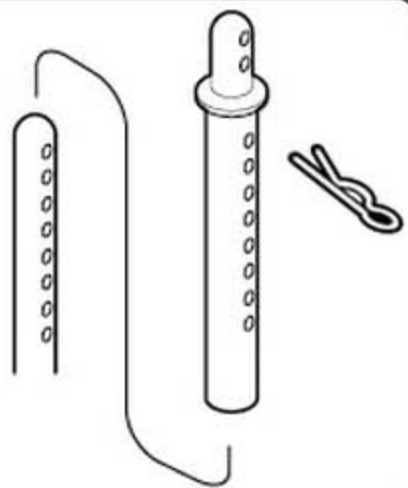

RC.KILLERBODY.COM