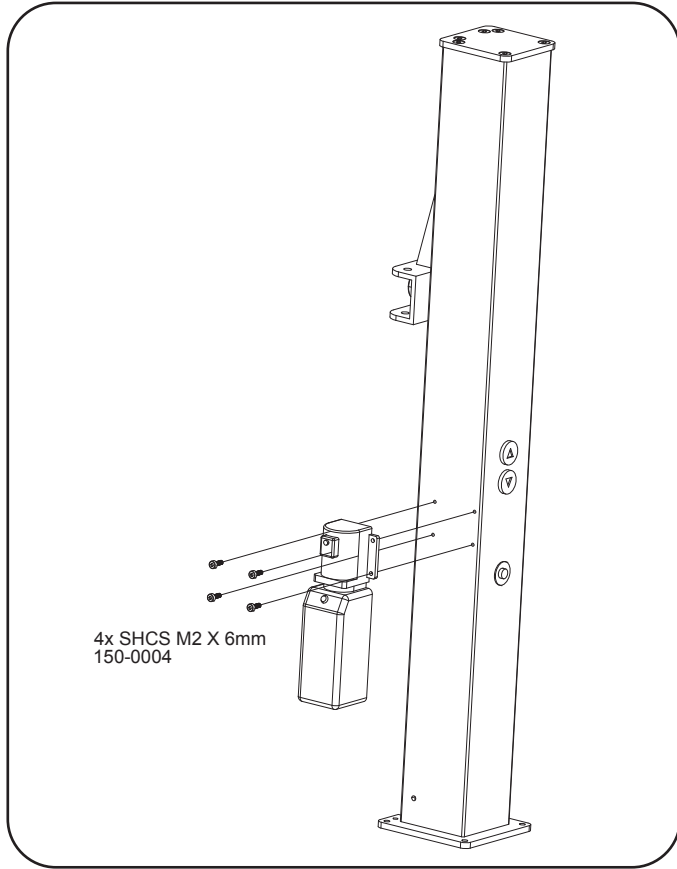# Z-X0052 RC4WD 1/10 Bendpak XPR-9S Two-Post Auto Lift

Step 1. *Install Control Box*

4x SHCS M2 X 6mm
150-0004

Step 2. *Install Lift Arms Right Side*

E-clip
250-0005

2   2

3

1

1

3
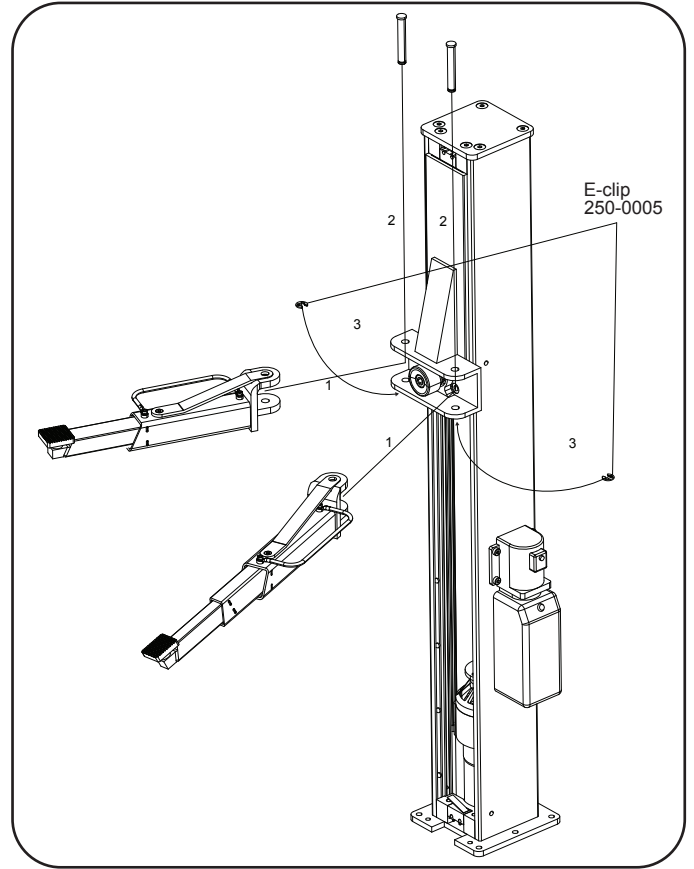
Step 3. *Install Lift Arms Left Side*

2   2

E-clip
250-0005

3

1

1

3

Step 4. *Install Lift Towers*

8x BHCS M3 x 8mm
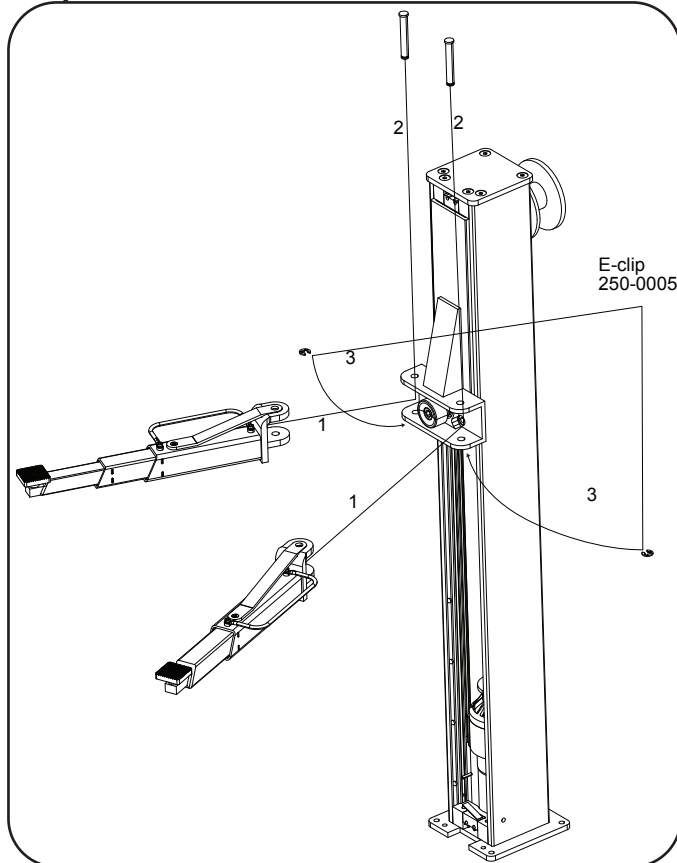150-0061
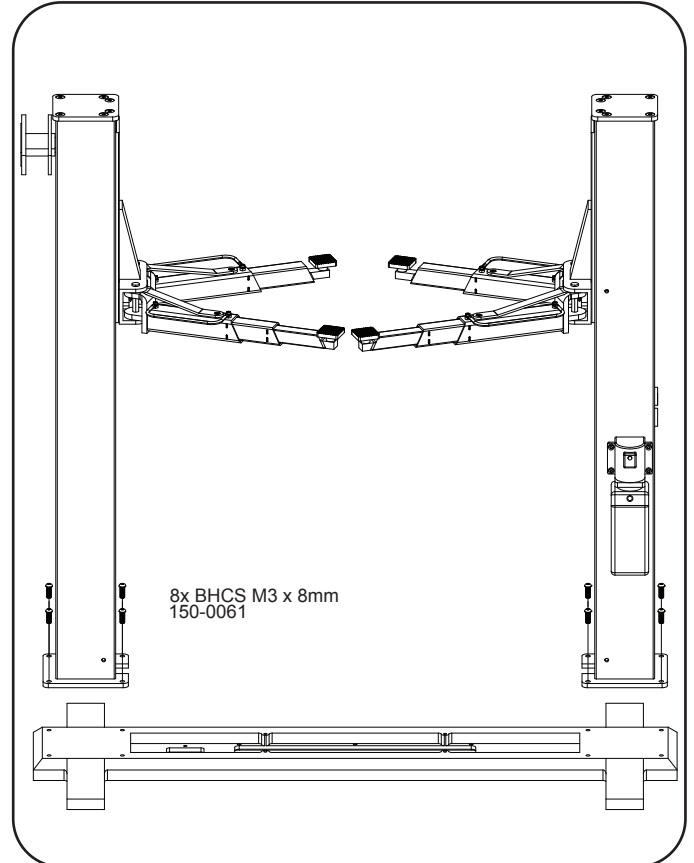
Z-X0052 RC4WD 1/10 Bendpak XPR-9S Two-Post Auto Lift

Step 5. *Connect Electronics*

5 | 5
3 | 3
4 4
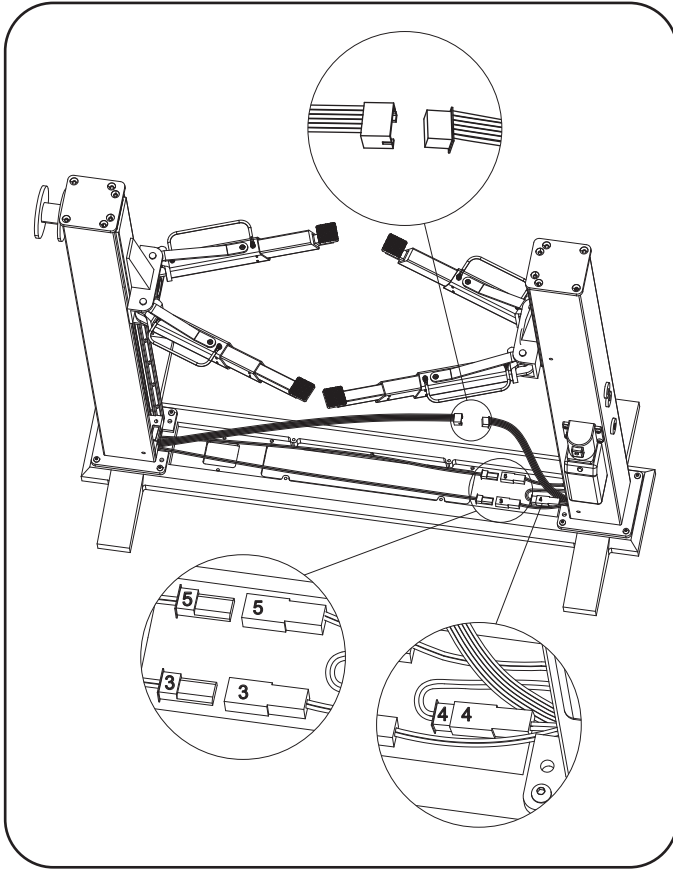
Step 6. *Install Battery and Battery Cover*

4x BHCS M3 x 4mm
150-0059

4x BHCS M3 x 8mm
150-0062
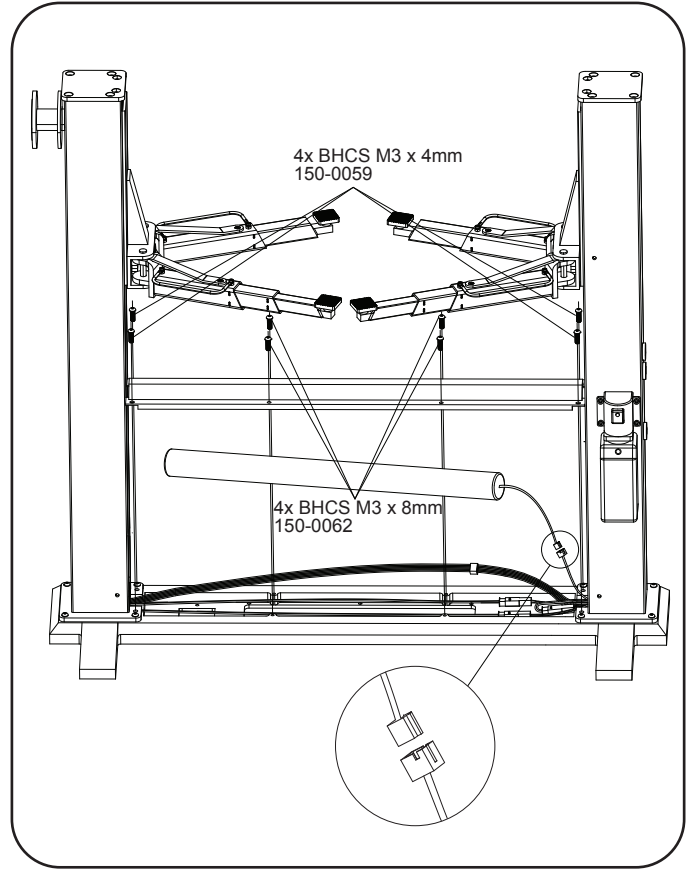
Step 7. *Install Lower Battery Cover*

6x FHSC M3 x 6mm
150-0099

2x FHCS M2.5 x 8mm
150-0092
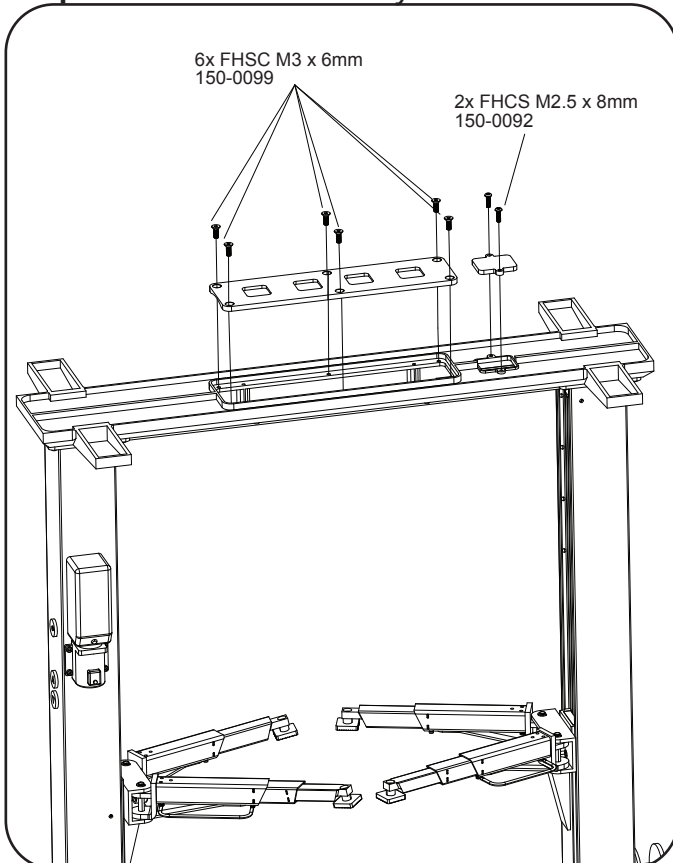
Step 8. *Assembly Complete*

Up

Down

ON/OFF

Your RC4WD 1/10 Bendpak XPR-9S Two-Post Auto Lift is now ready to use.
- To operate, simply press the On/Off switch then hold the Up or Down arrow to raise or lower the lift arms.
- Each post incorporates kill switches on the top and bottom to prevent damaging the lift mechanism.
- If the lift arms are not on the same level simply lower the arms to the bottom to re-align.
- Be sure to turn the lift off when not in use to prevent damaging the batteries.