


XERUN USER MANUAL

Sensored Brushless Motor
XERUN 4268/4274 G3



20201120

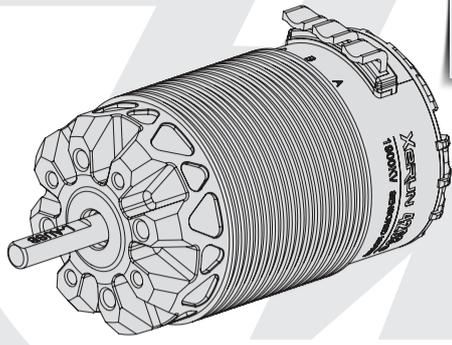

Thank you for purchasing this HOBBYWING product! The power of brushless power system is powerful. Any improper use may cause personal injury and damage to the product and related devices. We strongly recommend reading through this user manual before use and strictly abide by the specified operating procedures. We shall not be liable for any liability arising from the use of this product, including but not limited to reimbursement for incidental or indirect losses. Meanwhile, we do not assume any responsibility caused by unauthorized modification of the product. We have the right to change the product design, appearance, performance and use requirements without notice.

01 Warnings







- Never leave this unit unsupervised when it is powered on.
- All wires and connections should be well insulated. Short circuits can possibly damage the products.
- Avoid incorrect connections between the electronic speed controller(ESC)and the motor.
- Never allow this product to come in contact with water, oil, fuel or other electro-conductive liquids. If this happens, stop the use of your product immediately and let it dry carefully.
- Please carefully check power devices and manual of car frame to ensure the power pairing is reasonable. Avoid wrong pairing to overload and damage the motor.
- Never apply full throttle if the pinion is not installed. Due to the extremely high RPMs without load, the motor can get damaged.
- Always wire up all the parts of the equipment carefully. If any of the connections come loose as a result of vibration, your model RC may lose control.
- Never allow the motor case to get 100 degrees Celsius(212 degrees Fahrenheit) because the magnets maybe demagnetized by high temperature.

02 Features


- When the built-in chip of motor is matched with Hobbywing Xerun XR8 series of ESC, the ESC can automatically identify the motor and build a pure sensor mode power system, providing better manipulating performance and more delicate manipulating feel.
- When this motor is used together with Hobbywing XERUN XR8 PRO G2 ESC can start more effective turbo timing than the last generation of system. The motor can release maximum power instantly. The maximum speed can be promoted by 50%. Easily win your rival.
- The motor adopts the patent technology of "error-free" Hall sensor system, the independent high-speed and high-precision encoder always outputs pure rotor position signal, which effectively avoids the interference of sensor signal and makes the motor work stably in sensor state.
- The mechanical turbo timing of motor can be adjusted from 20-40°. It is convenient for driver to calibrate accurately output power of motor and meet power requirements of various application.
- The motor has low cogging effect and small torque pulse. It is very smooth at low speed and has superb manipulating performance.
- The protection grade of Off-Road motor is IP5X. Its excellent dustproof performance can easy to deal with various Off-Road dusty track environment.
- On the premise of improving the performance, the design of 4268SD G3 is optimized which extremely reduce the weight of motor. The weight of 1900KV / 2200KV is 20g / 45g lighter than peers. The light motor is convenient for the driver to adjust the balance performance of the vehicle.

03 Specifications

PN	Model	KV (No-load)	LiPo	Internal resistance	No-load current	Outer diameter/Length	Bearing size(mm)	Shaft diameter/ Exposed shaft length	Pole	Weight	Application
30401906	XERUN-4268SD-1900KV-G3-OffRoad	1900KV	2-6s	0.0075 Ω	4A	42mm (1.654in) 67.8mm (2.669in)	Front:D16*D5*T5 Rear:D11*D5*T5	5mm (0.197in) 18.5mm (0.728in)	4	315g	1/8 Off-load
30401907	XERUN-4268SD-2200KV-G3-OffRoad	2200KV	2-6s	0.0069 Ω	4.1A					285g	
30401908	XERUN-4268SD-2000KV-G3-OnRoad	2000KV	2-6s	0.0069 Ω	4.2A	42mm(1.654in) 74mm(2.913in)				285g	1/8 On-road
30401909	XERUN-4268SD-2800KV-G3-OnRoad	2800KV	2-4s	0.0035 Ω	6.1A					300g	
30405001	XERUN-4274SD-2250KV-G3	2250KV	2-6s	0.0037 Ω	5A					354g	1/8 Truck, Monster truck

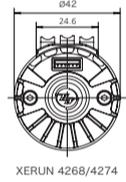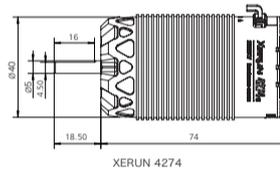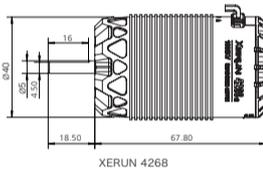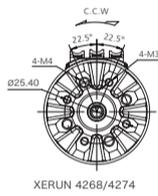

04 Installation & Connection

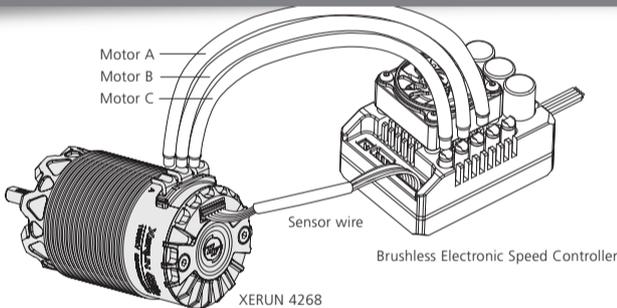

1. Install the motor

The motor mounting screw specifications are two groups of M3 and two groups of M4. The motor screw hole can be locked into the depth of 5.5mm. Before installing the motor on the vehicle, please carefully confirm whether the specification of the matching screw is appropriate, so as to avoid damaging the motor by using too long or too thick screw. Generally, it is recommended to use m3 / M4 screw with length not longer than 8mm, which is determined according to the thickness of frame motor mounting base.

2. Motor connection



- When welding / connecting the motor and the electronic speed controller (ESC), please pay attention to the ESC marking to ensure that the terminals on the ESC and the motor are one-to-one, that is, wire A of the ESC matches wire A of the motor, wire B of the ESC matches wire B of the motor, wire C of the ESC matches wire C of the motor.
- Make sure the sensor wire is clean and undamaged, and pay attention to the orientation of the sensor wire. Connect the sensor wire to the terminal of the motor and ESC in the correct direction.

3. Inspection

Before power on the remote control vehicle, please check the reliability of the motor installation and the correctness of all connections.

05 Timing Adjustment

1. With the motor direction set to CCW, take the graduation/value after "CCW" on the motor case as the starting point when adjusting the timing. With the reversed triangle pointing at a value /graduation, the smaller/bigger the value, the smaller/bigger the timing. The timing is 40 degrees in picture 1.
2. With the motor direction set to CW, take the graduation/value after "CW" on the motor case as the starting point when adjusting the timing. (With the reversed triangle pointing at a value/graduation, the smaller/bigger the value, the smaller/bigger the timing. The timing is 20 degrees in picture 1.
3. The motor timing is 30 degrees by default (as shown in picture 2). The motor timing should be within 30 to 40 degrees if you want to activate the Turbo timing. And the timing can be within 20 to 40 degrees if you have no intention to activate the Turbo timing.

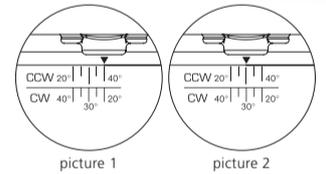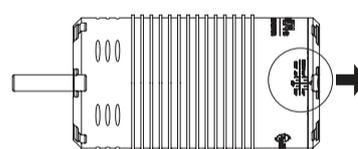

06 Gearing

Reasonable selection of gear ratio is very important. Improper gear ratio may bring you great loss. Please according to the following points to select the correct gear ratio!

1. The working temperature of the motor

The motor temperature should be lower than 100 degrees Celsius (212 degrees Fahrenheit) in operation. Because high temperature may cause the magnets to get demagnetized, the coil to get melt and short circuited, and the ESC to get damaged. A suitable gearing ratio can effectively prevent the motor from overheating.


2. The principle of selecting gear ratio

To avoid the possible damage to ESC and motor caused by the overheat, please start with a small pinion/a big FDR and check the motor temperature regularly. If the motor and ESC temperature always stay at a low level during the operation, change a big pinion/a low FDR and also check the motor temperature regularly to ensure that the new FDR is suitable for your vehicle, local weather and track condition. (Note: For the safety of electric devices, please check the ESC and motor temperature regularly.)

07 Assembly and Disassembly

In order to make the motor have longer service life and higher efficiency, we suggest to regularly check the bearing and clean the dirt in the motor. The specific time depends on the frequency of using the motor and the site conditions.

When installing, please follow the steps in the following assembly drawing; when disassembling, follow the reverse steps.

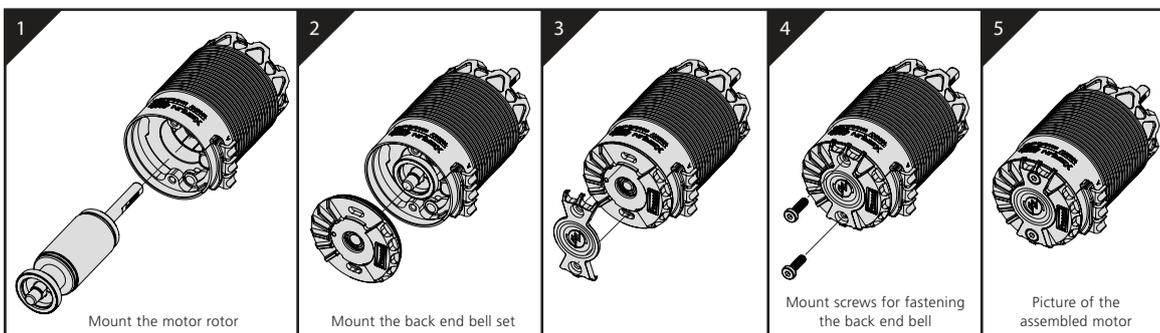

Parts List

